## **DLINK Router Port Forwarding Setup for Nuuo Main Console**

- 1. Log into your DLink Router by typing the following gateway into a web browser http://192.168.0.1 [By default Username: **admin** and Password: **password**]
- 2. Click "Advanced" > "Port Forwarding"

/BR-1310	SETUP	ADVANCED	TOOLS		STATUS
RTUAL SERVER	PORT FORWARI	DING RULES :			
RT FORWARDING	The Port Forwardin	g option is used to open a single po	rt or a range	of ports th	rough your
PPLICATION RULES		data through those ports to a sing			
ETWORK FILTER	Save Settings D	ion't Save Settings			
EBSITE FILTER					
IREWALL SETTINGS	20- PORT FORW	VARDING RULES			
DVANCED WIRELESS			Port	Traffic	Schedule
VANCED NETWORK			PUIL	Type	Scriedule
	Name		Start		
		Application Name	0	Any 💌	Always
	IP Address		End	MOY (*)	Mindys 1
	0.0.0.0	< Computer Name 💌	0		
	Name		Start		
		<< Application Name	0		-
	IP Address		End	Any 💌	Always
	Contraction and the second se second second sec	<< Computer Name	0		
	0.0.0	< Computer Name 💌	1.5		
	0.0.0.0 Name		Start		
	1992/07/20	Application Name	1.4		
	1992/07/20		Start	Any 💌	Always

3. Now in one of the empty Application Fields fill in the below info.

Name: Nuuo 1 IP Address: IP Address of the PC Port Start: 80 Port End: 80 Traffic Type: Any Schedule: Always Make sure the Enable Box is checked to the left of the rule. Repeat for ports 5150 and 5160.

4. Click the "Save Setting" button.