

DLINK Router Port Forwarding Setup For iDVR-PRO

1. Log into your DLINK router <http://192.168.0.1> (By default the User name and password are both **admin**)
2. Now Click Advanced > Port Forwarding



3. Now You will need to fill in the blanks for Rule 1
Name: iDVR-PRO1
TCP:8080
UDP:8080
IP Address : IP Address of your iDVR-PRO
Check the Enable Box
4. Now we are going to create a separate Rule
Name: iDVR-PRO2
TCP:554
UDP:554
IP Address : IP Address of your iDVR-PRO
Check the Enable Box
5. Now Save the Settings