


Geovision Software Upgrade Instructions

Provided by CCTV Camera Pros, an authorized Geovision factory distributor

www.cctvcamerapro.com/geovision

1.) Once you are done downloading the GeoVision Software extract the files. You do this by simply right clicking on the folder and you will see an option to extract files.


2.) Once the Files are extracted open the folder and locate the **“Driver”** folder. You will see a exe file named **“DrvInst”** double click this icon and press the install button.

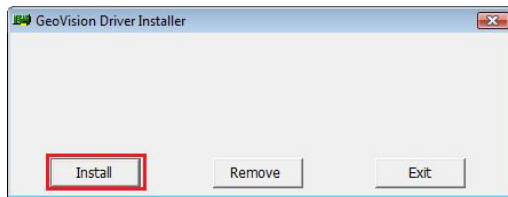

3.) Once the drivers are installed locate and double click the **“SETUP”** icon




4.) Now select the DVR card series you need to install the software for and press next.

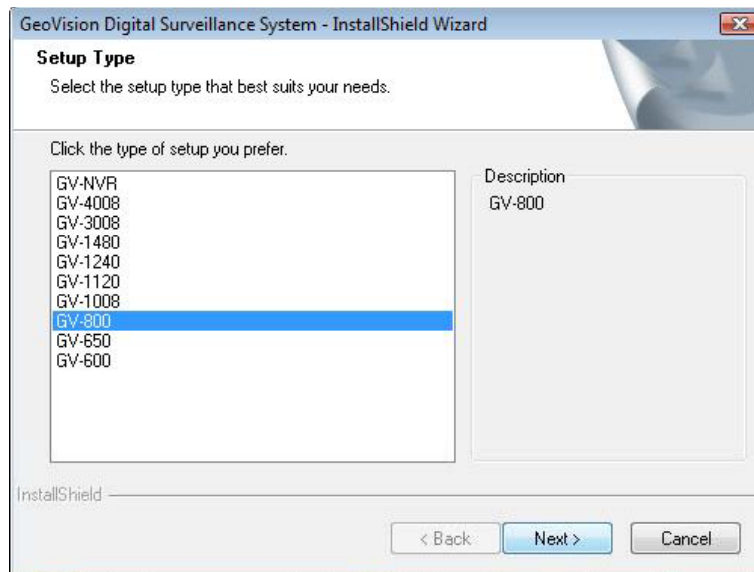

5.) Next Select “NTSC” and press next.

6.) Now select the video resolution and press next.

7.) If you would like the GeoVision to run on startup please check to select the “Add to the Startup function

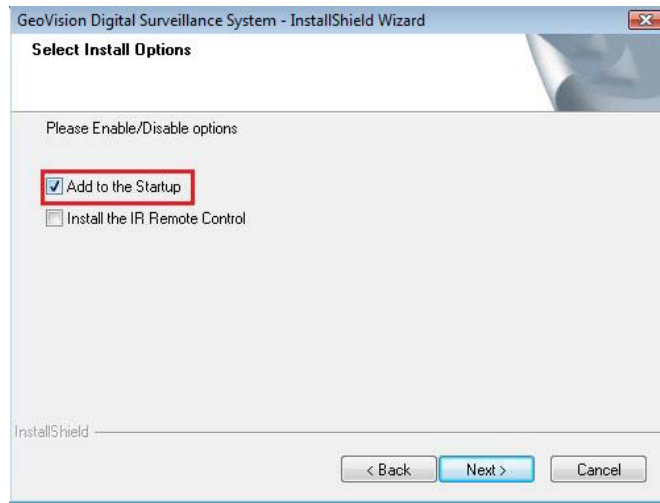

8.) If you are using a IR remote control to control the GeoVision Server you will need To select “Install the IR Remote Control”. If not proceed by pressing next.

9.) Choose your destination (Default is fine)

10.) Choose your program file (Default is fine)