

# CCTV Camera Pros



iDVR-PRO Remote Setup  
With Linksys Router

# iDVR PRO Surveillance DVR

## Overview

The iDVR PRO is a [stand alone CCTV DVR](#) that supports remote Internet viewing of cameras using a MAC computer, Windows (PC and mobile), iPhone, Android, and Blackberry. The iDVR PRO is available in 8 and 16 channel models ([iDVR-PRO8](#) and [iDVR-PRO16](#)). This document was created to assist users in setting up the remote viewing access. Although these instructions use a LinkSys router, the DVR portion of the setup is the same for all routers and the router setup concepts are the same, however the user interface for your router will be different. For example, no matter which router you are using, you need to configure port forwarding on that router for the DVR.



For more information on the iDVR-PRO and to purchase, please visit:  
[www.cctvcamerapro.com/iDVR](http://www.cctvcamerapro.com/iDVR)

# DVR Network Installation

Connect the DVR to your network using a CAT-5 Ethernet cable as seen below.



# DVR Network Setup

1.) In the DVR System Menu click the Network Sub-Menu

2.) If your network uses DHCP, then make sure the DHCP Box is checked. If your network is not running off of DHCP then You will need to manually input your Network info provided by your ISP.

3.) Make sure the WEB Service box is Checked. This will start the Web Server and will allow you to connect to the DVR over your local network and remotely Over the Internet.



The screenshot shows the 'NETWORK' configuration menu. On the left is a sidebar with 'IP SETUP' selected, and other options 'DDNS' and 'E - MAIL'. The main area contains the following settings:

IP SETUP				
DHCP	<input type="checkbox"/>			
WEB SERVICE	<input type="checkbox"/>			
IP ADDRESS	0 . 0 . 0 . 0			
GATEWAY	0 . 0 . 0 . 0			
SUBNET MASK	0 . 0 . 0 . 0			
1ST DNS SERVER	0 . 0 . 0 . 0			
2ND DNS SERVER	0 . 0 . 0 . 0			
RTSP SERVICE PORT	554	AUTO PORT	DELETE PORT	PORT TEST
WEB SERVICE PORT	8080	AUTO PORT	DELETE PORT	
ALIAS				
MAX TX SPEED	8192 KBPS			

At the bottom right, there are three buttons: CANCEL, APPLY, and CLOSE.

# Router Configuration


1. Open a web browser like Internet Explorer or Firefox. Enter the **internal IP address** of your router in the address bar of your browser. By default the internal IP address is 192.168.1.1 for LinkSys Routers. If you are not using a LinkSys router, please consult the manual of your router or check this web page for additional [port forwarding setup instructions](#).
2. You should see a box prompting you for your password. Enter your password now. By default your user name and password is **admin**. Click the **Ok** button to log into your router.
3. We will list a series of lines here that will show you exactly how to forward the ports you need to forward. The iDVR-PRO requires you to forward port: 8080 & 554 . So we will need to create to separate rules .Go ahead and enter the settings shown Below into the **Single Port Forwarding** menu.

## 4. Fill in the blanks with the following for Rule #1:

Application Name :iDVR-PRO 1  
 External Port:8080  
 Internal Port :8080  
 Protocol: Both  
 To IP Address : IP Address of your iDVR-PRO  
 Enabled: Check Box

## 5. Fill in the blanks with the following for Rule #2:

Application Name :iDVR-PRO 2  
 External Port:554  
 Internal Port :554  
 Protocol: Both  
 To IP Address : IP Address of your iDVR-PRO  
 Enabled: Check Box

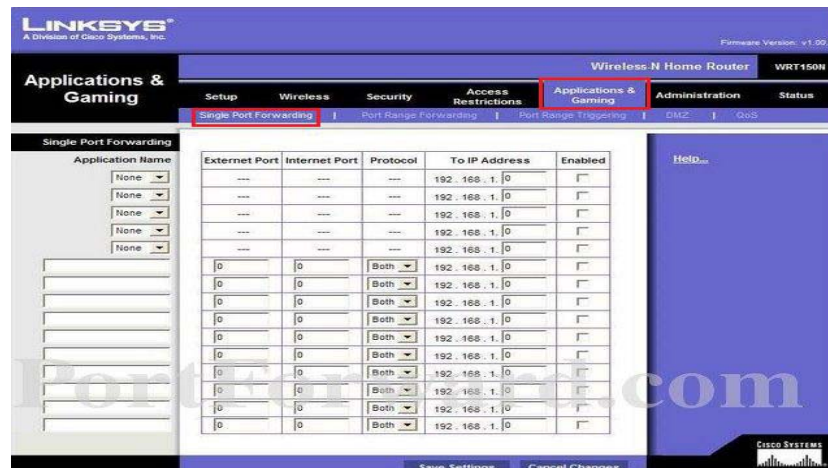

Application Name	External Port	Internet Port	Protocol	To IP Address	Enabled
	---	---	---	192.168.1.0	<input type="checkbox"/>

5. When you're finished, click **Save Settings** near the bottom of the screen to save your changes.

# Port Forwarding Test

1. Go to <http://yougetsignal.com>
2. Now click the Port Forwarding Test link
3. Type in 8080 for Port Number and press the check button once you confirm the port is open make sure port 554 is open as well.

## Port Forwarding Tester

your external address

67.102.120.42

open port finder

Remote Address  Port Number

 Use Current IP

 Port 8080 is open on 67.102.120.42.

4. If it reads closed and you have DSL for your internet service you will need to call your provider and have them bridge the modem to your Linksys router. This is a standard process.
5. If the port is open, the Remote IP Address shown is the IP Address you will use for Remote Viewing and Mobile Viewing.

# Mobile Viewing

The iDVR-PRO DVR allows you to view your CCTV cameras live from your Mobile Phone through the your Mobile web browser. Logging into your DVR from your Mobile Phone is simple:

1. Launch the Safari web browser from your Mobile Phone
2. Enter the IP address and port # of your DVR as followed by the port, like this (replace 192.168.0.200 with the IP address of your DVR):  
**<http://192.168.0.200:8080>**
3. Select the camera that you want to view using the camera drop down .



