

DLINK Router Port Forwarding Setup for Geovision IP Cameras

1. Log into your DLink Router by typing the following gateway into a web browser
<http://192.168.0.1> [By default Username: **admin** and Password: **password**]
2. Click "**Advanced**" > "**Port Forwarding**"

The screenshot shows the D-Link WBR-1310 router's web interface. The top navigation bar includes "WBR-1310 //", "SETUP", "ADVANCED" (highlighted with a red box), "TOOLS", and "STATUS". The left sidebar lists various settings, with "PORT FORWARDING" highlighted in red. The main content area is titled "PORT FORWARDING RULES" and contains a description: "The Port Forwarding option is used to open a single port or a range of ports through your firewall and redirect data through those ports to a single PC on your network." Below the description are "Save Settings" and "Don't Save Settings" buttons. A section titled "20- PORT FORWARDING RULES" contains a table with three empty rows for configuring rules.

			Port	Traffic Type	Schedule
<input type="checkbox"/>	Name <input type="text"/>	<< Application Name ▾	Start 0	Any ▾	Always ▾
	IP Address 0.0.0.0	<< Computer Name ▾	End 0		
<input type="checkbox"/>	Name <input type="text"/>	<< Application Name ▾	Start 0	Any ▾	Always ▾
	IP Address 0.0.0.0	<< Computer Name ▾	End 0		
<input type="checkbox"/>	Name <input type="text"/>	<< Application Name ▾	Start 0	Any ▾	Always ▾
	IP Address 0.0.0.0	<< Computer Name ▾	End 0		

3. Now in one of the empty Application Fields fill in the below info.

Name: Geovision IP Camera 1

IP Address: IP Address of the Geovision IP Camera

Port Start: 80

Port End: 80

Traffic Type: Any

Schedule: Always

Make sure the Enable Box is checked to the left of the rule.

Repeat for ports 5552 and 10000.

4. Click the "**Save Setting**" button.