

- Now in one of the empty Application Fields fill in the below info.

Application Name	External Port	Internal Port	Protocol	To IP Address	Enabled
	---	---	---	192.168.1.0	<input type="checkbox"/>

Application Name: Geovision IP Camera 1

External Port: 80

Internal Port: 80

Protocol: TCP

To IP address: IP Address of the Geovision IP Camera

Check the Enable Box

Repeat for ports 5552 and 10000

- Click the "**Save Settings**" button near the bottom of the screen.