

Linksys Router Port Forwarding Setup for Nuuo Main Console

1. Log into your Linksys Router by typing the following gateway into a web browser <http://192.168.1.1> [By default Username and Password are both **admin**]
2. Once you are logged into your Linksys router click "**Applications & Gaming**" > "**Single Port Forwarding**". [If "Single Port Forwarding" is not an option than select "Port Range Forwarding"]

LINKSYS®
A Division of Cisco Systems, Inc. Firmware Version: 1.01.35 build 3

Dual Band Wireless-N Gigabit Router with Storage Link WRT600N

Applications & Gaming | Setup | Wireless | Security | Storage | Access Restrictions | **Applications & Gaming** | Administration | Status

Single Port Forwarding | Port Range Forwarding | Port Range Triggering | DMZ | QoS

Single Port Forwarding

Application Name
None
None
None
None
None

External Port	Internal Port	Protocol	To IP address	Enabled
...	192 . 168 . 1 . 0	<input type="checkbox"/>
...	192 . 168 . 1 . 0	<input type="checkbox"/>
...	192 . 168 . 1 . 0	<input type="checkbox"/>
...	192 . 168 . 1 . 0	<input type="checkbox"/>
...	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	TCP	192 . 168 . 1 . 0	<input type="checkbox"/>

Save Settings | Cancel Changes

CISCO SYSTEMS

- Now in one of the empty Application Fields fill in the below info.

Application Name	External Port	Internal Port	Protocol	To IP Address	Enabled
	---	---	---	192.168.1.0	<input type="checkbox"/>

Application Name: Nuuo 1

External Port: 80

Internal Port: 80

Protocol: TCP

To IP address: IP Address of the PC

Check the Enable Box

Repeat for ports 5150 and 5160

- Click the "**Save Settings**" button near the bottom of the screen.