

## DLINK Router Port Forwarding Setup for NUUO NVR Solo

1. Log into your DLink Router by typing the following gateway into a web browser  
<http://192.168.0.1> [By default Username: **admin** and Password: **password**]
2. Click "**Advanced**" > "**Port Forwarding**"

**D-Link**

WBR-1310 // SETUP **ADVANCED** TOOLS STATUS

VIRTUAL SERVER  
**PORT FORWARDING**  
APPLICATION RULES  
NETWORK FILTER  
WEBSITE FILTER  
FIREWALL SETTINGS  
ADVANCED WIRELESS  
ADVANCED NETWORK

**PORT FORWARDING RULES :**

The Port Forwarding option is used to open a single port or a range of ports through your firewall and redirect data through those ports to a single PC on your network.

Save Settings Don't Save Settings

**20- PORT FORWARDING RULES**

	Name	Application Name	IP Address	Computer Name	Port	Traffic Type	Schedule
<input type="checkbox"/>	<input type="text"/>	Application Name	0.0.0.0	Computer Name	Start: 0 End: 0	Any	Always
<input type="checkbox"/>	<input type="text"/>	Application Name	0.0.0.0	Computer Name	Start: 0 End: 0	Any	Always
<input type="checkbox"/>	<input type="text"/>	Application Name	0.0.0.0	Computer Name	Start: 0 End: 0	Any	Always

3. Now in one of the empty Application Fields fill in the below info.

**Name:** NUUO NVR Solo

**IP Address:** IP Address of the NUUO Solo

**Port Start:** 80

**Port End:** 80

**Traffic Type:** Any

**Schedule:** Always

Make sure the Enable Box is checked to the left of the rule.

Do the above for ports 80, 5150 and 5160.

4. Click the "**Save Setting**" button.