



3. Now in one of the empty Application Fields fill in the below info.

Application Name	External Port	Internal Port	Protocol	To IP Address	Enabled
	---	---	---	192.168.1.0	<input type="checkbox"/>

**Application Name:** NUUO NVR Solo 1

**External Port:** 80

**Internal Port:** 80

**Protocol:** TCP

**To IP address:** IP Address of the PC

**Check the Enable Box**

Do the above for ports 80, 5150 and 5160

4. Click the "**Save Settings**" button near the bottom of the screen.