

## Netgear Router Port Forwarding Setup for Nuuo Main Console

1. Log into your Netgear router by typing in the following gateway <http://192.168.0.1> [By default the Username: **admin** Password: **password**]
2. Click the "**Port Forwarding**" button on the left hand side of the screen.
3. Click the "**Add Custom Service**" button.

**Ports - Custom Services**

Enable

Service Name

Starting Port  (1~65535)

Ending Port  (1~65535)

Server IP Address  192 .  168 .  0 .

4. Now fill in the following.

**Service Name:** Nuuo 1

**Starting Port:** 80

**Ending Port:** 80

**Server IP Address:** IP Address of the PC

Check the "**Enable**" box.

Repeat for ports 5150 and 5160

5. Click the "**Add**" button.