

Netgear Router Port Forwarding Setup for Nuoo Titan NVR

1. Log into your Netgear router by typing in the following gateway <http://192.168.0.1> [By default the Username: **admin** Password: **password**]
2. Click the "**Port Forwarding**" button on the left hand side of the screen.
3. Click the "**Add Custom Service**" button.

Ports - Custom Services

Enable

Service Name

Starting Port (1~65535)

Ending Port (1~65535)

Server IP Address 192 . 168 . 0 .

4. Now fill in the following.

Service Name: Nuoo Titan 1

Starting Port: 80

Ending Port: 80

Server IP Address: IP Address of the Nuoo Titan

Check the "**Enable**" box.

Service Name: Nuoo Titan 2

Starting Port: 5250

Ending Port: 5250

Server IP Address: IP Address of the Nuoo Titan

Check the "**Enable**" box.

5. Click the "**Add**" button.