


FD8135H Fixed Dome Network Camera Quick Installation Guide

English I 黎中 I 將中 I 日本語 I Français I Español I Deutsch I Português I Italiano I Türkçe I Polski I Русский I Česky I Svenska I ألتربية

720P HD • P-Iris • WDR Pro

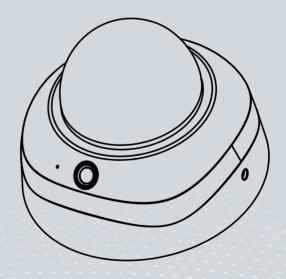

Warning Before Installation

- Power off the Network Camera as soon as smoke or unusual odors are detected.
- Keep the Network Camera away from water. If the Network Camera becomes wet, power off immediately.




Contact your distributor in the event of occurrence.



Contact your distributor in the event of occurrence.

Do not place the Network Camera around heat sources, such as a television or oven.

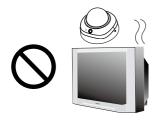

Refer to your user's manual for the operating temperature.



- Keep the Network Camera away from direct sunlight.
- Do not place the Network Camera in high humidity environments.





- Do not place the Network Camera on unsteady surfaces.
- Do not touch the Network Camera during a lightning storm.





- Do not disassemble the Network Camera.
- Do not drop the Network Camera.






Do not insert sharp or tiny objects into the Network Camera.





FD8135H

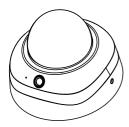

Software CD




Quick Installation Guide / Warranty Card



microsin and constitution of the constitution


Alignment Sticker

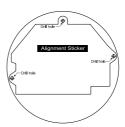


T10 Torx Screwdriver/ Screws / Plastic Anchors / AV Cable





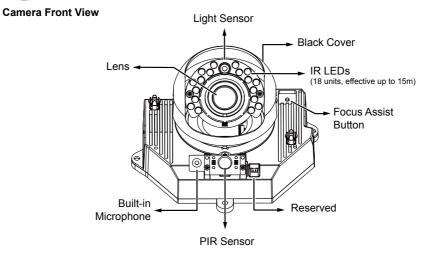


Camera Rear View

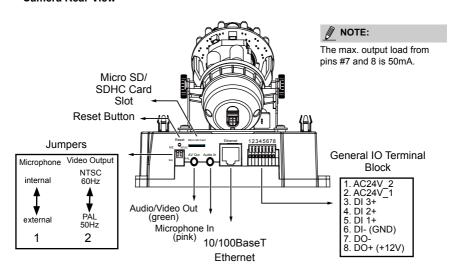


3


Hardware Installation


Before installing your camera, make sure the built-in PIR (Passive 50° Infrared Sensor) can be directed toward the area of interest, where possible intrusion may occur. (The sensitivity of PIR sensor depends 50° on the object size and temperature differences between the object and the background environment.)

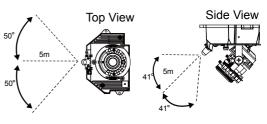

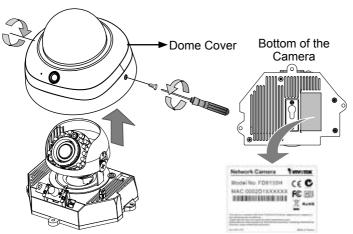

Remove the black cover as shown below so that you can fine-tune the focus and zoom the camera later when the cabling is done.

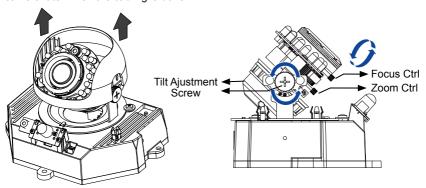

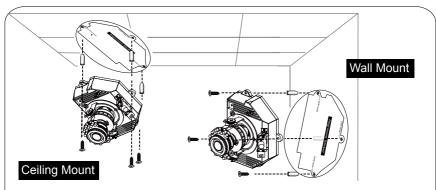


- Attach the alignment sticker to the ceilling/wall.
- 2. Through the two circles on the sticker, drill two pilot holes into the ceilling/wall.
- 3. The Network Camera can be mounted with the cable routed through the ceiling/wall or from the side. If you want to feed the cable through the ceiling/wall, drill a cable hole A as shown in the above picture.
- 4. Hammer the supplied plastic anchors into the holes.
- Align the two holes on each side of the camera base with the two plastic anchors on the ceilling/wall, insert the supplied screws to corresponding holes and secure them with a screwdriver.



General Connection (without PoE)


- 1. If you have external DI devices, make the connection from general I/O terminal block.
- 2. Ethernet, power, and other cables are user-supplied.
- Connect the AC cables from the terminal block as an alternate power source. The IO cables are user-supplied.

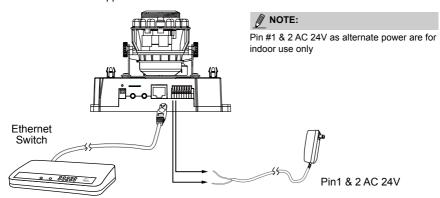

Power over Ethernet (PoE)


When using a PoE-enabled switch

This Network Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable. Follow the below illustration to connect the Network Camera to a PoE-enabled switch via Ethernet cable.

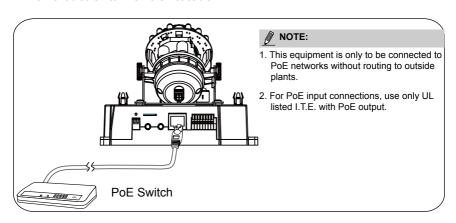

When using a non-PoE switch

Use a PoE power injector (optional) to connect between the Network Camera and a non-PoE switch.

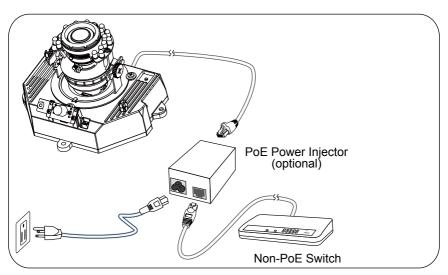



- 1. Install "Installation Wizard 2" from the Software Utility directory on the software CD.
- 2. The program will conduct an analysis of your network environment. After your network is analyzed, please click on the "Next" button to continue the program.






- The program will search for VIVOTEK Video Receivers, Video Servers, and Network Cameras on the same LAN.
- 4. After a brief search, the main installer window will pop up. Double-click on the MAC address that matches the one printed on the camera label or the S/N number on the package box label to open a browser management session with the Network Camera.







- 1. A browser session with the Network Camera should prompt as shown below.
- 2. You should be able to see live video from your camera. You may also install the 32-channel recording software from the software CD in a deployment consisting of multiple cameras. For its installation details, please refer to its related documents.

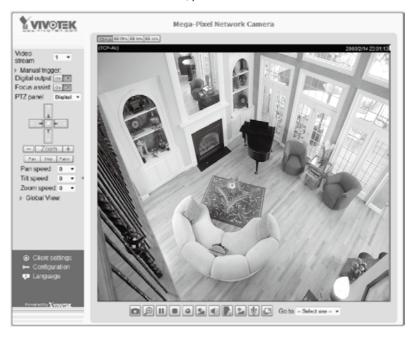


For further setup, please refer to the user's manual on the software CD.



Adjusting the Lens

Based on the live image retrieved from the camera, adjust the camera lens to the desired view angle:


- 1. Turn the lens module left and right.
- Loosen the tilt adjustment screws on both sides of the camera and then turn the lens module up and down. Upon completion, tighten the screws.
- 3. Turn the lens to adjust the image orientation.

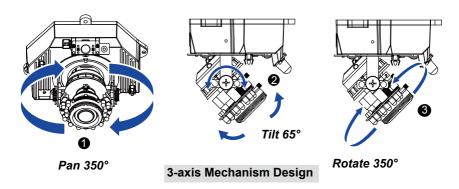

The sophisticated 3-axis mechanism design offers very flexible, easy hardware installation for either ceiling or wall mount.

To adjust the zoom factor and focus range


- Loosen the zoom controller and then adjust zoom factor by moving the controller left and right. Upon completion, tighten the zoom controller screw.
- Loosen the focus controller and then adjust focus range by moving the controller left and right. Upon completion, tighten the focus controller screw.

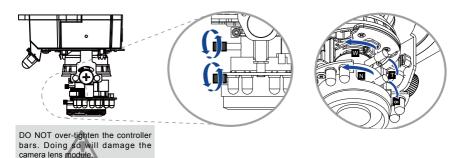




NOTE:

1. The Focus Assist button takes effect when using a hand-held monitor or camera tester with a BNC connector. Press the button and use the focus and zoom adjustment pullers to tune the image until the "BEST FOCUS" message is shown.

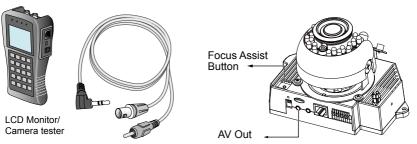


- When mounting the camera, you can use the key hole slot at the bottom. The key hole slot helps facilitate installation and a safe mounting.
 - 2-1. First fasten a pioneer screw to the wall/ceiling. Mount the camera to the screw.
 - 2-2. Use a pencil to mark the locations of the 3 permanent mounting holes.
 - 2-3. When cabling and the initial adjustment is done, mount the camera by fastening screws to the 3 mounting holes.

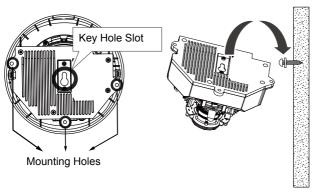

Pioneer Screw



- 1. Align the notches on the inner side of the black cover with the rivets on the sides of the lens, and then fix the black cover.
- 2. If you choose to feed the cable through the ceiling/wall, arrange the cables neatly through the cable hole A (not shown in the drawing). If you choose to feed the cable from the side, remove plate B.
- Attach the dome cover to the camera as the direction shown below. Tighten two screws from the sides of the dome cover.
- 4. Finally, make sure all parts of the camera are securely installed.

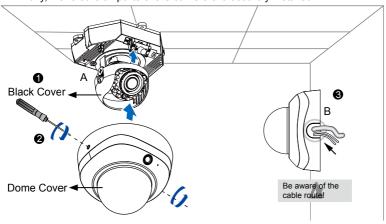

P/N:625016500G Rev. 1.0 All specifications are subject to change without notice, Copyright 2011 WDOTEK INC. All rights reserved.

