



WPS											
LED color / Function	LED 色彩 / 功能	LED 颜色 / 功能	LED の色 / 機能	Couleur de LED / Fonction	Coior de LED / Función	LED-Farbe / Funktion	Cor do LED / Função	Colore LED / Funzione	LED Rengi / İşlev	Kolor diody LED / Funkcja	Цвет СД-индикатора / Функция
White - operating in AP mode	白光 - 以 AP 模式運作	白色 - 接入点模式下工作	白 - AP モードで動作中	Blanc - fonctionnement en mode PA	Blanco - funcionando en modo PA	Weiß - Betrieb im AP-Modus	Branco - operando no modo AP	Bianco - modalità AP in funzione	Beyaz - Erişim Noktası modunda çalışıyor	Biały - praca w trybie AP	Белый - Работа в режиме точки доступа
Reset - press less than 3 seconds, Off then Red, then White	重復 - 按壓 3 秒以下，放開後亮起紅光，然後是白光	重置 - 按 3 秒以下，關閉紅色，然後白色	リセット - 3 秒未満を押す，消灯後赤色、続いて白	Réinitialiser - appuyez moins de 3 secondes / Éteint puis rouge, puis blanc	Restaurar - presionar durante menos de 3 segundos, Apagado luego rojo, luego blanco	Zurücksetzen - weniger als 3 Sekunden lang drücken, Aus, dann rot, dann weiß	Reiniciar - pressione por menos de 3 segundos, Apagado e depois vermelho, seguido de branco	Ripristino - premere meno di 3 secondi, Off, quindi Rosso, poi Bianco	Sıfırla - 3 saniyeden kısa süre basın, Sönük, ardından Kırmızı, sonra Beyaz	Resetowanie - naciśnij i przytrzymaj krócej niż przez 3 sekundy, Brak światła, następnie dioda czerwona, potem biała	Сброс - Притяните менее чем на 3 сек, Не горит, затем красный, затем белый
WPS - press 3 to 5 sec, Flashing Blue for 2 mins, then Red, then Green	WPS - 按壓 3 至 5 秒，閃爍藍光 2 分鐘後轉為紅光，然後是綠光	WPS - 按 3 至 5 秒，藍色閃爍 2 分鐘，然後綠色	WPS - 3 ～ 5 秒間押す，2 分間青色で点滅，その後赤色、続いて緑色	WPS - appuyez 3 à 5 secondes, Bleu clignotant pendant 2 minutes, puis rouge, puis vert	WPS - presione de 3 a 5 segundos, Parpadeando durante 2 minutos, luego rojo, luego verde	WPS - 3 bis 5 Sekunden lang drücken, Blinkt 2 Minuten lang blau, dann rot, dann grün	WPS - pressione de 3 a 5 segs, Intermitente azul por 2 minutos, depois vermelho e verde	WPS - premere da 3 a 5 secondi, Blu lampeggiante per 2 minuti, poi rosso, quindi verde	WPS - 3 ila 5 sn, sunyly beşan, 2 dk, boyunca Mavi, ardından Kırmızı, sonra Yeşil renkte yanıp sönüyor	WPS - naciśnij i przytrzymaj od 3 do 5 sekund, Migająca dioda niebieska przez 2 minuty, następnie dioda czerwona, potem zielona	WPS - Притяните на 3-5 сек, Мерклет 2 мин синим, затем красный, затем зеленый
Restore default - press 7 secs Flashing Red and Green	回復初始值 - 按壓 7 秒，閃爍紅光及綠光	恢復默認值 - 按 7 秒，紅色和綠色閃爍	デフォルトに戻す - 7 秒間押す，赤色と緑色で点滅	Restaurer par défaut - appuyez 7 secondes, Clignotant rouge et vert	Restaurar valores predeterminados presionar 7 segs, Parpadeando en rojo y verde	Standard wiederherstellen - 7 Sekunden lang drücken, Blinkt rot, dann grün	Restaurar padrão - pressione por 7 segs, Intermitente vermelho e verde	Ripristina predefinito - premere 7 secondi, Rosso e verde lampeggianti	Varsayıları geri yükleye - 7 sn, sırasıyla kırmızı, yeşil ve Yeşil renkte yanıp sönüyor	Przywrócenie ustawień domyślnych - naciśnij i przytrzymaj przez 7 sekund, Migająca dioda czerwona i zielona	Восстановление исходных настроек - Притяните на 7 сек, Мерклет красным и зеленым

WPS				
LED-färg / Funktion	LED Kleur / Functie	LED-farbe / Funktion	Warna LED / Fungsi	اللون LED / وظيفة
Vit - drift i AP-läge	Wit - werkt in AP-modus	Hvid - fungerer i AP-lstand	Putih - beroperasi dalam mode AP	أبيض (WPS) - يعمل في وضع نقطة الوصول
Alerställ - tryck i mindre än 3 sekunder, Av när den lysar rött och sedan vitt	Reset - druk konter dan 3 sekunder, Uit dan Rood, dan Wit	Nutstil - tryk på i mindre end 3 sekunder, Slukket så rød, herefter hvid	Atur ulang - tekan kurang dari 3 detik, Mati kemudian berwarna Merah, lalu Putih	إعداد أولي - اضغط على الزر لأقل من 3 ثوانٍ، ثم اتركه أحمر، ثم اتركه أبيض
Blink - tryck i 3 till 5 sekunder, Blinkar blått i 2 minuter, sedan rött, sedan grönt	WPS - druk 3 tot 5 sec Knippert 2 min Blauw, dan Rood, dan Groen	WPS - tryk på i 3 til 5 sekunder, Blinker blått i 2 min., herefter rødt, så grant	WPS - tekan 3 hingga 5 detik, Berkedip dalam warna Biru selama 2 menit, kemudian berwarna Merah, lalu Hijau	WPS - اضغط 3 إلى 5 ثوانٍ، ثم اتركه أزرق لمدة 2 دقيقة، ثم اتركه أحمر، ثم اتركه أخضر
Alerställ till standard - tryck i 7 sekunder, Blinkar rött och grönt	Härställt standardinställning - druk 7 sec, Knippert Rood en Groen	Gendan standard - tryk på i 7 sek., Blinker rødt og grant	Pulihkan default - tekan 7 detik, Berkedip dalam warna Merah dan Hijau	إعداد أولي قياسي - اضغط على الزر لمدة 7 ثوانٍ، ثم اتركه أحمر، ثم اتركه أخضر




LED Color	LED 色彩	LED 颜色	LED 顏色	LED の色	Couleur de LED
Steady Red	Power on and system booting	穩定紅光	開啟電源・系統開機中	紅色 LED 指示燈常亮	電源オンおよびシステム起動中
All LED off	Power off	所有 LED 熄滅	關閉電源	LED 指示燈全亮	電源オフ
Blink Red / Green every 0,15 sec	Upgrading F/W	每 0,15 秒閃爍紅光 / 綠光	斷續更新中	紅色 / 綠色 LED 指示燈每 0,15 秒閃爍一次	ファームウェアの更新中
Blink Orange every 0,15 sec	Restore default	每 0,15 秒閃爍橘光	回復預設值	橘色 LED 指示燈每 0,15 秒閃爍一次	デフォルト値に戻す
Blink Green every 1 sec	Wireless AP linked	每 1 秒閃爍綠光	已連接無線 AP	綠色 LED 指示燈每 1 秒閃爍一次	ワイヤレス AP 接続済み
Blink Blue every 0,15 sec	WPS searching	每 0,15 秒閃爍藍光	WPS 搜尋中	藍色 LED 指示燈每 0,15 秒閃爍一次	WPS 検索中
Blink White every 0,5 sec	AP mode	每 0,5 秒閃爍白光	AP 模式	白色 LED 指示燈每 0,5 秒閃爍一次	AP モード
Steady Red	Network Failed	穩定紅光	網路失敗	紅色 LED 指示燈常亮	ネットワーク障害
Blink Red / Green every 1 sec	Connected	每 1 秒閃爍紅光 / 綠光	已連接	紅色 / 綠色 LED 指示燈每 0,15 秒閃爍一次	接続済み

Color de LED	LED-Farbe	Cor do LED	Colore LED	LED Rengi
Illuminado en rojo	Leuchtet rot	Vermelho fixo	FissoRosso	Sabit Kırmızı
Todos los LED apagados	Alle LEDs aus	Todos os LEDs apagados	Tutti LED spenti	Tüm LED'ler sönük
Parpadea en rojo / Verde cada 0,15 seg	Actualizando F/W	Vermelho/verde intermitente a cada 0,15 seg	Desligar	Her 0,15 saniyede Kırmızı / Yeşil renkte yanıp sönüyor
Parpadea en naranja cada 0,15 seg	Restaurar valores predeterminados	Laranja intermitente a cada 0,15 seg	Restaurar padrões	Ripristina predefiniti
Parpadea en verde cada 1 seg	PA inalámbrico conectado	Verde intermitente a cada 0,15 seg	Ponto de acesso sem fio vinculado	Her 1 saniyede Turuncu renkte yanıp sönüyor
Parpadea en azul cada 0,15 seg	Buscando WPS	Azul intermitente a cada 0,15 seg	Pesquisa WPS	Her 1 saniyede Yeşil renkte yanıp sönüyor
Parpadea en blanco cada 0,5 seg	Modo PA	Blanco intermitente a cada 0,15 seg	Modo AP	Ricerca WPS
Illuminado en rojo	Error de red	Vermelho fixo	FissoRosso	Her 0,5 saniyede Beyaz renkte yanıp sönüyor
Parpadea en rojo / Verde cada 1 seg	Conectado	Vermelho/verde intermitente a cada 1 seg	Conectado	Sabit Kırmızı


Kolor diody LED	Цвет СД-индикатора	Barva LED	LED-färg	LED Kleur
Stałe światło czerwone	Zasilanie włączone, trwa uruchamianie systemu	Svítl červená	Fast rött	Stabiel Rood
Wszystkie diody LED wyłączone	Zasilanie wyłączone	Všechny LED diody vypnuty	Alla LED-lampor släckta	Alla LEDs uit
Światło czerwone / zielone migające co 0,15 s	Aktualizacja F/W	Bílká červená / zelená	Blinkar rött / grönt i intervaller på 0,15 sekunder	Knipperen Rood / Groen elke 0,15 sec
Światło pomarańczowe migające co 0,15 s	Przywracanie ustawień domyślnych	Bílká oranžová každých 0,15 s	Obnovení výchozího nastavení	Knippert Orange elke 0,15 sec
Światło zielone migające co 1 s	Nawiązano połączenie z bezprzewodową siecią AP	Bílká zelená každou 1 s	Bezdrôtový AP propojen	Knippert Groen elke 1 sec
Światło niebieskie migające co 0,15 s	Wyszukiwanie WPS	Bílká modrá každých 0,15 s	Hledání WPS	Knippert Blauw elke 0,15 sec
Światło białe migające co 0,5 s	Tryb AP	Bílká bílá každých 0,5 s	Režim AP	Knippert Wit elke 0,5 sec
Stałe światło czerwone	Połączenie z siecią nie powiodło się	Svítl červená	Stíť selhala	Nätverksfel
Światło czerwone / zielone migające co 1 s	Połączono	Bílká červená / zelená každou 1 s	Pripojeno	Ansluten

LED-farbe	Warna LED	اللون LED / وظيفة
Konstant Rød	Stabil Merah	ثابت أحمر
Alla LED'er slukket	Semua LED mati	الجميع LED لا يعمل
Blinker Rødt / Grønt hvert 0,15 sek.	Berkedip Merah / Hijau setiap 0,15 detik	اللون R / G كل 0,15 ثوانٍ
Blinker Orange hvert 0,15 sek.	Berkedip Jingga setiap 0,15 detik	اللون البرتقالي كل 0,15 ثوانٍ
Blinker Grønt hvert 1 sek.	Berkedip Hijau setiap 1 detik	اللون الأخضر كل 1 ثانية
Blinker Blått hvert 0,15 sek.	Berkedip Biru setiap 0,15 detik	اللون الأزرق كل 0,15 ثوانٍ
Blinker Hvidt Hvert 0,5 sek.	Berkedip Putih setiap 0,5 detik	اللون الأبيض كل 0,5 ثوانٍ
Konstant Rød	Stabil Merah	ثابت أحمر
Blinker Rødt / Grønt hvert 1 sek.	Berkedip Merah / Hijau setiap 1 detik	اللون R / G كل ثانية

A: WPS


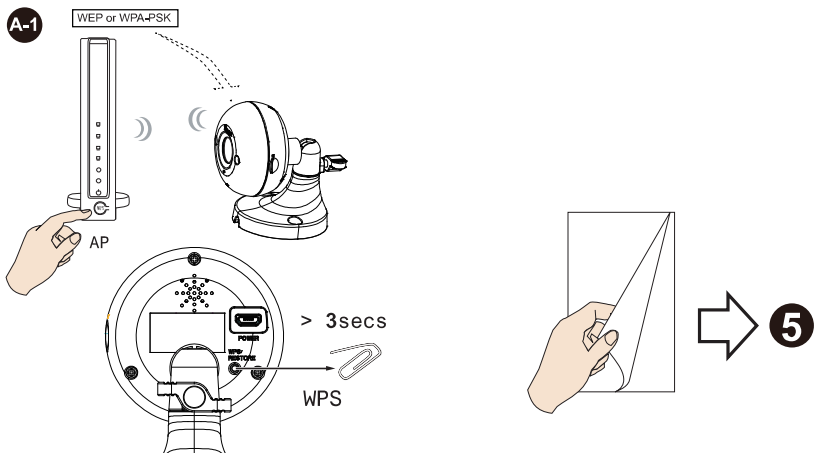


B: WiFi w/o WPS

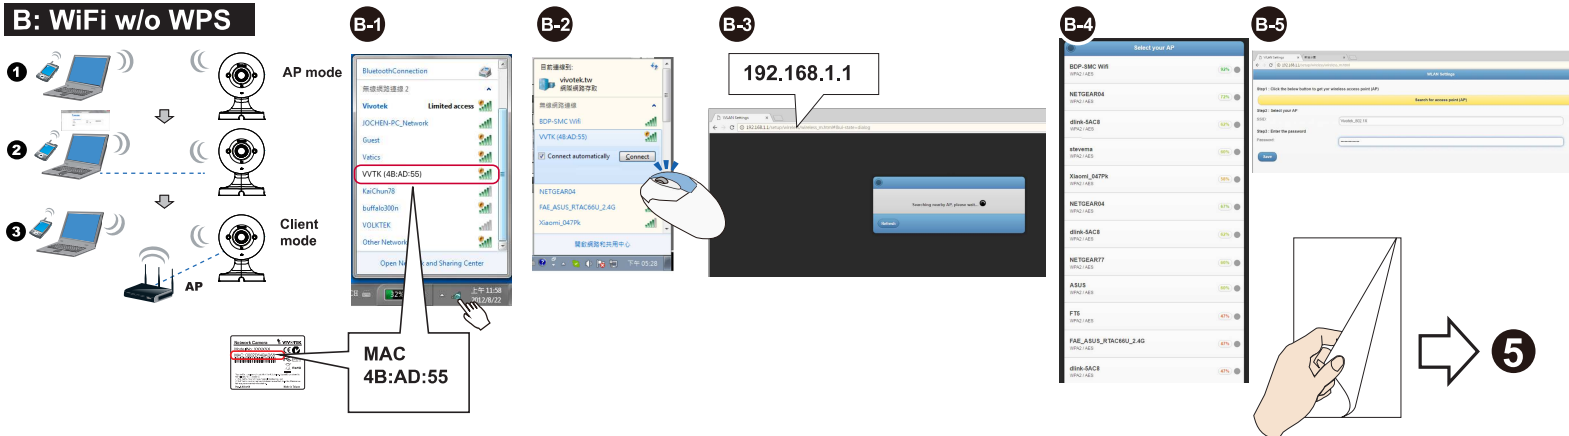

C:



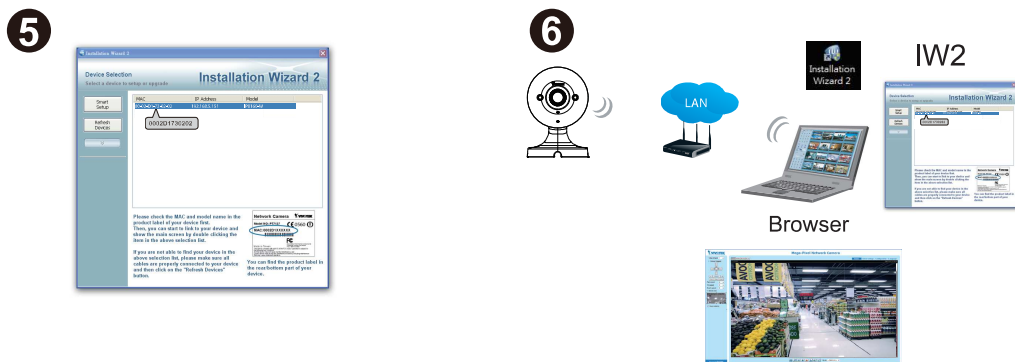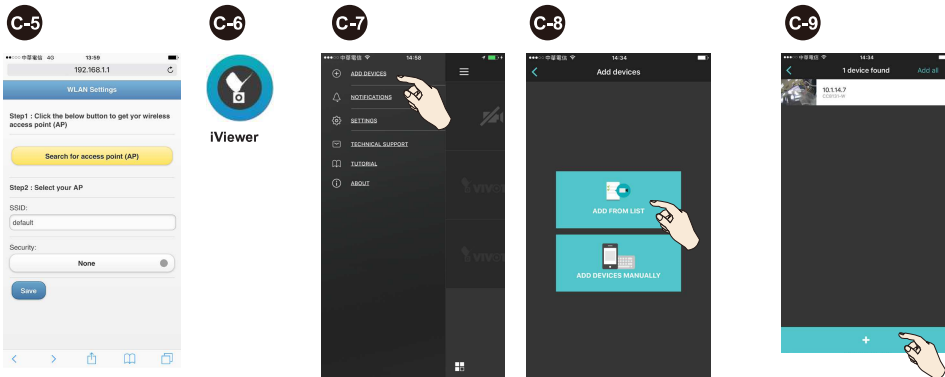

HARDWARE LIMITED WARRANTY

What Is Covered: This warranty covers any hardware defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts: This warranty lasts for TWENTY-FOUR MONTHS from the date of purchase by the original end-user customer.

What Is Not Covered: This warranty does not cover cosmetic damage or any other damage or defect caused by abuse, misuse, neglect, use in violation of instructions, repair by an unauthorized third party, or an act of God. Also, if serial numbers have been altered, defaced, or removed, further, consequential and material damages are not recoverable under this warranty.

What VIVOTEK Will Do: VIVOTEK will, in its sole discretion, repair or replace any product that proves to be defective in material or workmanship. Any repair or replacement part of the product will receive a THREE-MONTH warranty extension.

How To Get Service: Contact our authorized distributors in your region. Please check our website (www.vivotek.com) for the information of an authorized distributor near you.

Your Rights: SOME STATES DO NOT ALLOW EXCLUSION OR LIMITATION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

VIVOTEK INC.
6F, No. 192, Lien-Cheng Rd., Chung-Ho,
Tapei County, Taiwan.
www.vivotek.com

1. Proof of the date of purchase is required. In the event you can not render such document, warranty will commence from the date of manufacture.
2. Cosmetic damage will only be covered by this warranty if such damage has been existed at the time of purchase.

All specifications are subject to change without notice.
Copyright © 2016 VIVOTEK INC. All rights reserved.

VIVOTEK INC.
6F, No. 192, Lien-Cheng Rd., Chung-Ho, New Taipei City, 205, Taiwan, R.O.C.
E: info@vivotek.com P: [+886-2-2901-1111](tel:+886-2-2901-1111) F: [+886-2-2901-1111](tel:+886-2-2901-1111)

VIVOTEK Europe
Parlistraat 22-15A, 1316BW Almere, The Netherlands
E: info@vivotek.com P: [+31-360-800000](tel:+31-360-800000) F: [+31-360-800000](tel:+31-360-800000)

VIVOTEK USA, INC.
2051 Sepulveda Avenue, Suite 100, CA 91311
E: info@vivotek.com P: [+1-818-240-1111](tel:+1-818-240-1111) F: [+1-818-240-1111](tel:+1-818-240-1111)