



Zyxel Router Port Forwarding Setup for Geovision DVR

1. Log into your Zyxel Router by typing in the following gateway into your web browser
<http://192.168.1.1> [By default Username: **admin** Password: **1234**]
2. Click the "NAT" link.

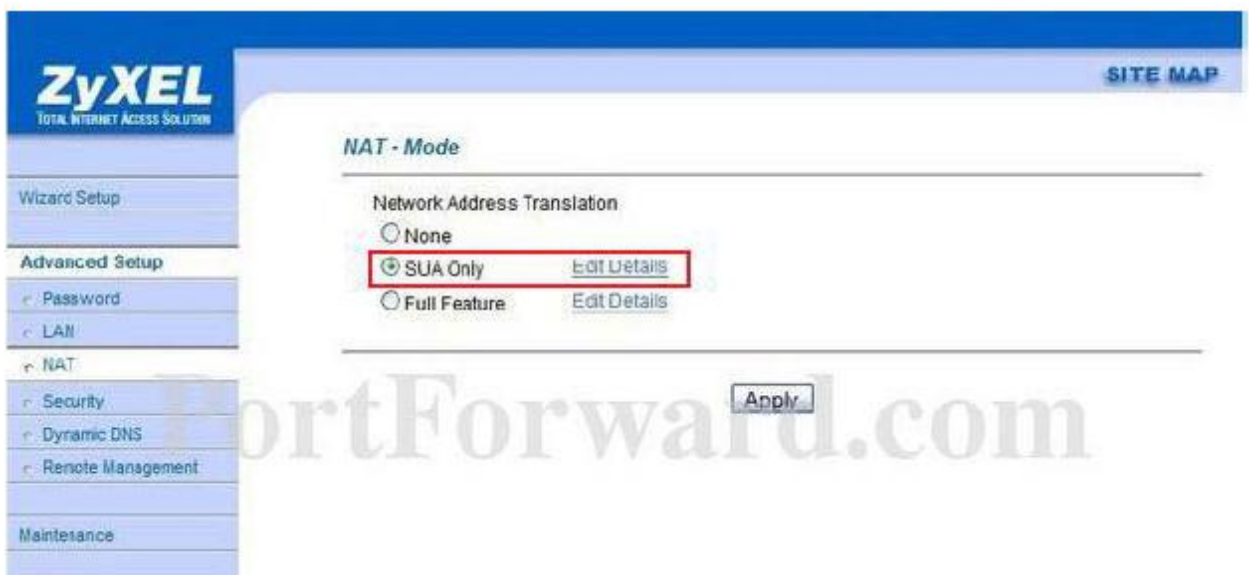

3. There should be a dot in the "SUA Only" setting. If this isn't the case, you cannot setup port forwarding without making a major change to your network. I wouldn't advise changing this unless you know what you are doing. Alright, if there is a dot in the "SUA Only" setting, go ahead and click "Edit Details".

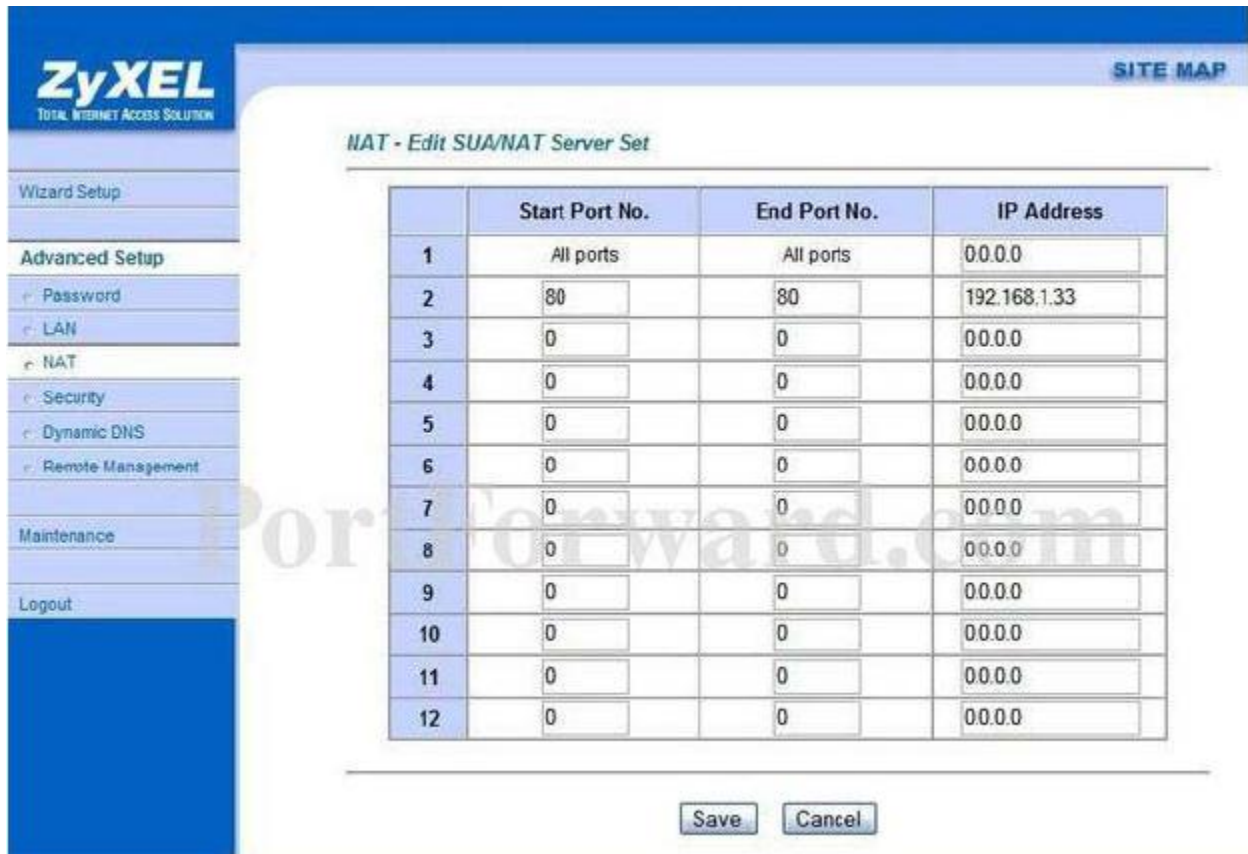

4. Now fill in the following:

	Start Port No.	End Port No.	IP Address
1			

- 5. **Start Port No:** 80
- End Port No:** 80
- IP Address:** IP Address of the Geovision DVR

Do this for ports 80, 4550, 5550, 8866, 5511 and name each application differently. Example – Geovision DVR 1 , Geovision DVR 2 , etc. (**Note:** Each application must be uniquely named or else it will not work)

6. Once finished press the **"Save"** button.