


Zyxel Router Port Forwarding Setup for Nuuo Mini NVR

1. Log into your Zyxel Router by typing in the following gateway into your web browser
<http://192.168.1.1> [By default Username: **admin** Password: **1234**]
2. Click the "NAT" link.

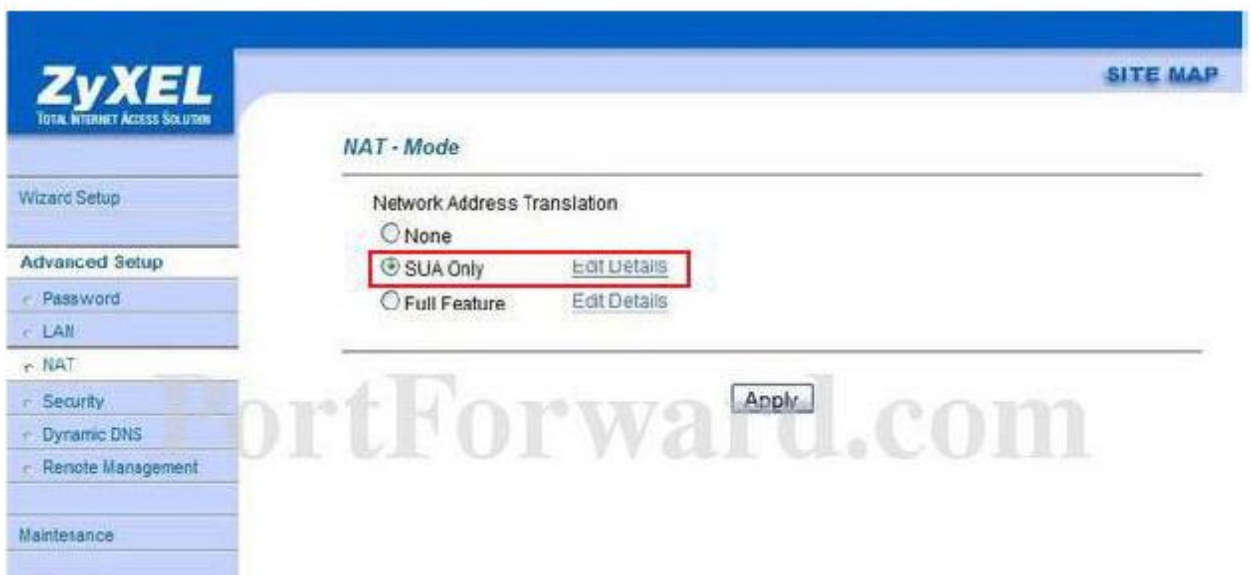

3. There should be a dot in the "SUA Only" setting. If this isn't the case, you cannot setup port forwarding without making a major change to your network. I wouldn't advise changing this unless you know what you are doing. Alright, if there is a dot in the "SUA Only" setting, go ahead and click "Edit Details".



4. Now fill in the following:

	Start Port No.	End Port No.	IP Address
1			

5. **Start Port No:** 80
End Port No: 80
IP Address: IP Address of the Nuuo Mini NVR
 Repeat for ports 5150, 5160 and 5170

6. Once finished press the "Save" button.

