



## Zyxel Router Port Forwarding Setup for Nuuo Titan NVR

1. Log into your Zyxel Router by typing in the following gateway into your web browser  
<http://192.168.1.1> [By default Username: **admin** Password: **1234**]
2. Click the "NAT" link.

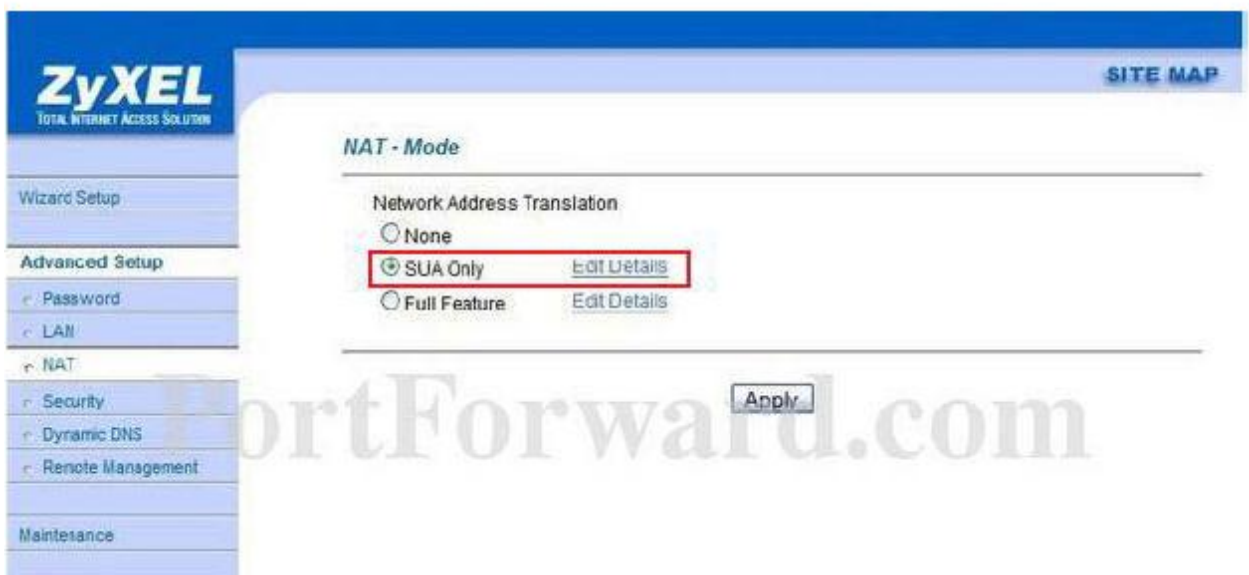

3. There should be a dot in the "SUA Only" setting. If this isn't the case, you cannot setup port forwarding without making a major change to your network. I wouldn't advise changing this unless you know what you are doing. Alright, if there is a dot in the " SUA Only" setting, go ahead and click "Edit Details".

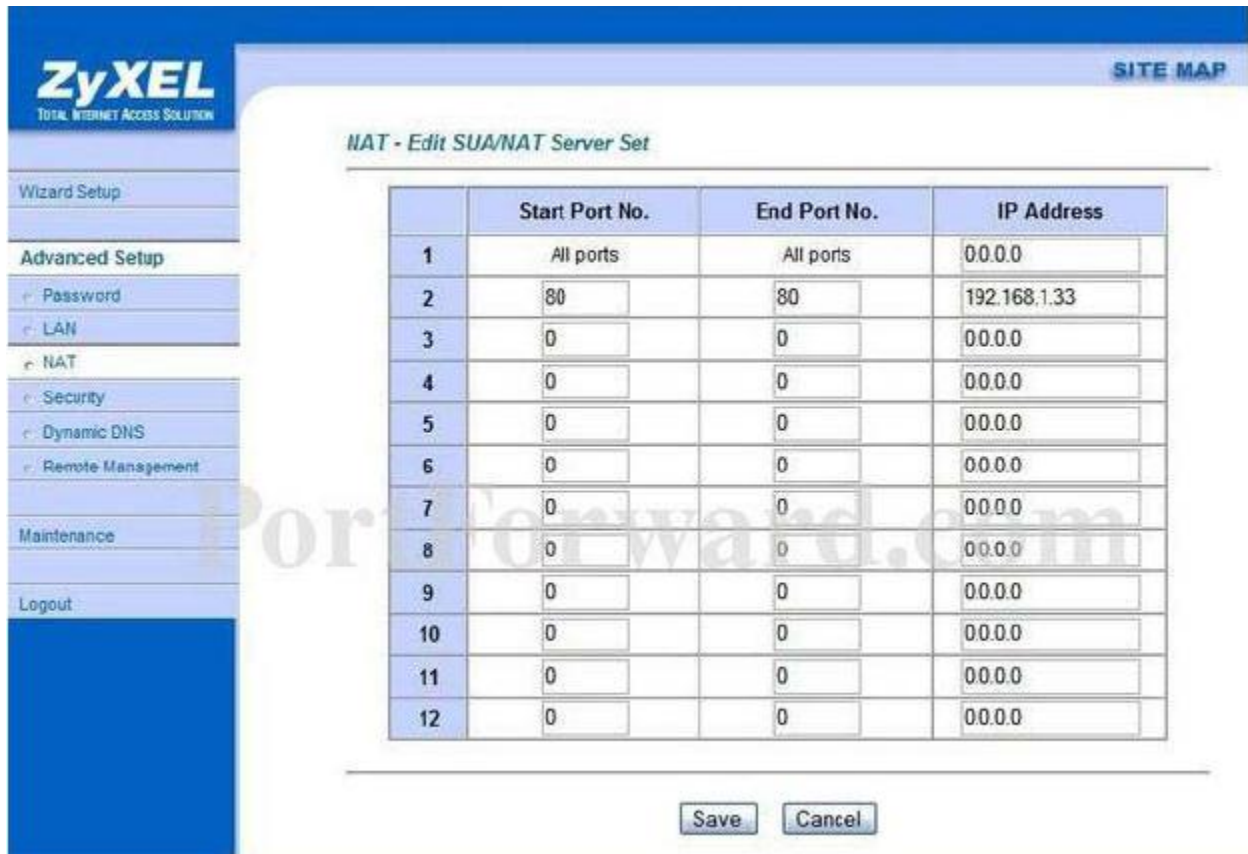

4. Now fill in the following:

|   | Start Port No. | End Port No. | IP Address |
|---|----------------|--------------|------------|
| 1 |                |              |            |

5. **Start Port No:** 80  
**End Port No:** 80  
**IP Address:** IP Address of the Nuoo Titan

**Start Port No:** 5250  
**End Port No:** 5250  
**IP Address:** IP Address of the Nuoo Titan

6. Once finished press the **"Save"** button.