DIGITAL VIDEO RECORDER USER GUIDE

16CHANNEL

VER XM5K-1.0(S09)



- Thank you for purchasing this Digital Video Recorder.
- Before using the Digital Video Recorder, please ensure that you read and understand the User Guide.
- Please store the User Guide at an easily accessible location.
- Before connecting and installing any third party cameras, monitors, alarms and computers, please refer to the appropriate instruction manual for proper operation.

SAFETY PRECAUTIONS



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Contents

Disclaimer	
Warning	5
Caution	
Preventing Malfunction	7
Regulatory	7
Package Contents	8
I. Controls	9
1. Front Panel	9
2. Rear Panel Connectors	12
3. Remote Controller	13
4. Virtual Keypad for Mouse Control	14
II. INSTALLATION & CONNECTIONS	15
1. Camera, Monitor, Audio, Alarm sensor and Power cord	15
2. PC system requirement for Network connection	16
III.QUICK START PAGE	17
IV.LIVE VIEWING	19
1. Display Overview	19
2. Multi-screen Display and Sequencing	21
2.1. Screen Display	. 21
2.2. Multi-screen Display and Switch Sequencing Display	. 21
3. Quick button for multi screen Display	22
3.1. Quick multi split mode change	. 22
3.2. Repositioning	. 22
4. Zooming	23
5. Spot Monitor	24
V. OPERATION	25
1. LOG IN/OUT	25
2. NAVIGATION THE MENU	26
VI. SETUP	27
1. DISPLAY	27
1.1. GENERAL	. 27
1.2. SWITCH Setup (Monitor Configure)	. 28
1.3. EVENT	. 29
2. CAMERA	30

2.1. Video Adjustment	
2.2. PTZ Set Up	
2.3. Camera Title	
4. Motion Detection Setting	
2.5. Privacy Mask	
3. RECORD	35
3.1. Record General	
3.2. Resolution & Recording speed Setting	
3.3. Continues /Normal Recording	
3.4. Event Recording	
3.5. Continues + Event (Motion/Alarm) Recording	41
4. SCHEDULE	41
4.1. CHART Setup	
4.2. Holiday Setup	
5. DISK	44
5.1. DISK Manager	
5.2. Recording DISK	
5.3. SMART STATUS	
6. NETWORK	48
6.1. ETHERNET	
6.2. GENERAL	
6.3. EMAIL	0
6.4. SMTP	
6.5. DDNS (Dynamic DNS)	2
6.6 Router & Port Forwarding	
7. DEVICE	6
7.1. GENERAL	6
7.2. ALARM	7
7.3. PTZ EVENT	9
8. SYSTEM	10
8.1. GENERAL	
8.2. TIME	11
8.3. ACCOUNT	
8.4. UPDATE	
8.5. INFO	
VII. PAN/TILT ZOOM CONTROL	16
1. P.T.Z. Menu	16

2. Preset & Tour	18
3. Custom Functions	20
4.Auto Pan / Auto Tilt / Power	20
VIII.PLAYBACK /SEARCH	21
1. Playback	
2. Time Search	22
2.1 Multi Channel Playback	
2.2 Preview Search (Single Channel Playback)	
2.3 Event Record Search	
2.4 Event Source Search	
2.5 Motion Area Search (Single Channel Playback)	
3.Go to Search	
4.Log List Search	
IX.BACKUP	
1. Manual Back up	30
1.1. External USB HDD / Memory Stick	
1.2. External CD/DVD –RW Backup	
1.3 Back up Range Setup	
2. Auto Back up(FTP)	33
3. Log List Back up	
X.SPECIFICATION	

Disclaimer

- The information in this manual is believed to be accurate and reliable as of the date of publication. The information contained herein is subject to change without notice. Revisions or New editions to this publication may be issued to incorporate such change
- We makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the Digital Video Recorder, the software, the hard drives, personal computers, peripheral devices, or unapproved/unsupported devices.

Warning

- Do not cover the ventilation opening or slots on the outer casing. To prevent the appliance from overheating, provide at least two inches of air space around the vent and the slots.
- Do not drop metallic parts through slots. This could permanently damage the Digital Video Recorder. Immediately turn the DVR's power off or unplug the power cord from the power outlet. Contact a qualified service personnel authorized by your equipment distributor
- Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide. Disassembly or alteration may result in high voltage electrical shock. Qualified service personnel authorized by your equipment distributor should conduct internal inspections, alterations and repairs.
- Stop operating the equipment immediately if it emits smoke or noxious fumes. Failure to do so may result in fire or electrical shock. Immediately turn the DVR's power off, remove the power cable from the power outlet. Confirm that smoke and fume emissions have ceased. Please consult your DVR distributor.
- Stop operating the equipment if a heavy object is dropped or the casing is damaged. Do not strike or shake. Failure to do so may result in fire or electrical shock. Immediately turn the DVR's power off or unplug the power cord from the power outlet. Please consult your DVR distributor.
- Do not allow the equipment come into contact with, or become immersed in, water or other liquids. Do not allow liquids to enter the interior. The DVR has not been waterproofed. If the exterior comes into contact with liquids or salt air, wipe it dry with a soft, absorbent cloth. In the event that the water or other foreign substances enter the interior, immediately turn the DVR's Power off or unplug the power cord from the power outlet. Continued use of the equipment may result in fire or electrical shock. Please consult your DVR distributor.
- Do not use substances containing alcohol, benzene, thinners or other flammable substances to clean or maintain the equipment. The use of these substances may lead to fire. Use a

dry cloth on a regular periodic basis and wipe away the dust and dirt that collects on the device. In dusty, humid or greasy environments, the dust that collects around the ventilation or the slots on the outer casing over long periods of time may become saturated with humidity and short-circuit, leading to fire.

- Do not cut, damage, alter or place heavy items on the power cord. Any of these actions may cause an electrical short circuit, which may lead to fire or electrical shock.
- Do not handle the device or power cord if your hands are wet. Handling it with wet hands may lead to electrical shock. When unplugging the cord, ensure that you hold the solid portion of the plug. Pulling on the flexible portion of the cord may damage or expose the wire and insulation, creating the potential for fires or electrical shocks.
- Use only the recommended power accessories. Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.
- Do not place the batteries near a heat source or expose them to direct flame or heat. Neither should you immerse them in water. Such exposure may damage the batteries and lead to the leakage of corrosive liquids, fire, electrical shock, explosion or serious injury.
- Do not attempt to disassemble, alter or apply heat to the batteries. There is serious risk of injury due to an explosion. Immediately flush with water any area of the body, including the eyes and mouth, or clothing that comes into contact with the inner contents of the battery. If the eyes or mouth contact these substances, immediately flush with water and seek medical assistance from a medical professional.
- Avoid dropping or subjecting the batteries to severe impacts that could damage the casings.
 It could lead to leakage and injury.
- Do not short-circuit the battery terminals with metallic objects, such as key holders. It could lead to overheating, burns and other injuries.
- The supplied power supply and power cord are designed for exclusive use with the Digital Video Recorder. Do not use it with other products or batteries. There is a risk of fire and other hazards.

Caution

Do not operate the appliance beyond its specified temperature, humidity or power source ratings. Do not use the appliance in an extreme environment where there is high temperature or high humidity. Use the device at temperatures within +0°C - +40°C (32°F - 104°F) and humidity below 90 %. The normal operating power source for this device is DC12V 50/60Hz.

Preventing Malfunction

- Avoid Strong Magnetic Fields. Never place the DVR in close Proximity to electric motors or other equipment generating strong electromagnetic fields. Exposures to strong magnetic fields may cause malfunctions or corrupt image data.
- Avoid Condensation Related Problems. Moving the equipment rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its external and internal surfaces. You can avoid this by placing the equipment in an airtight, resalable plastic bag and letting it adjust to temperature changes slowly before removing it from the bag.
- If Condensation forms inside the Digital Video Recorder. Stop using the equipment immediately if you detect condensation. Continued use may damage the equipment. Remove the power cord from the power outlet and wait until the moisture evaporates completely before resuming use.

Regulatory

FCC Compliance : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if no installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CAUTION

- Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries aAccording to the Instructions.
- The socket-outlet shall be installed near the equipment and shall be easily accessible

Package Contents

Please check the package and contents for visible damage. If any components are damaged or missing, do not attempt to use the unit, contact the supplier immediately. If the unit must be returned, it must be shipped in the original packing box.

CONTENTS	QUANTITY	REMARK
DIGITAL VIDEO RECORDER	1 UNIT	
CLIENT SOFTWARE CD	1	
REMOTE CONTROLLER	1	
BATTERY (AAAsize)	2	
AC ADAPTER	1	
POWER CORD	1	
USER GUIDE	1	
VEDIO OCTOPUS CABLE	1	

I. Controls

1. Front Panel

< 16Channel>



1. Mode indicator : 3 LEDs display the status of the Digital Video Recorder.



Power (Blue), Recording (Red) and HDD (Green)

- 2. Playback / Record control: These functions are used in Live Mode or Playback mode.
 - 1) Direction buttons: In Menu setup mode, used to move the cursor.



- ① Log : Press this button to access to log list.
- ② Stop : This button stops playback and recording.

3) [R step or FR / REC]

- 1 Reverse Step : This button is used to move reverse field by field during STILL mode
- ② Fast Rewind : This button is used to fast rewind during PLAYBACK mode.
- ③ REC : Press this button to start recording. Press the button again to stop.

4) [Back up/ Still or Playback] :

- Backup : Press this button to go backup menu. You can set the time and channels to backup footage from the DVR.
- ② Still or Playback: This button is used to still or 1 x playback during playback mode.
 - 5) **Example 1** [Log in/out / F step or FF] :
- 1 Log in/out : Press this button to toggle log in and out.
- ② Forward step : This button is used to move forward field by field (picture by picture) during STILL mode
- ③ F.F. : This button is used to Fast Forwarding during PLAYBACK mode.



Press this button to display the MAIN MENU screen.

4. Enter Button :

Press this button to save menu settings.

- 5. Cancel : This button is used to hide the On-Screen-Display information such as the time, date and channel icons. This button removes alert icons on the corner of the screen (AL, VL and PL). This button is also used to turn off the alarm buzzer and to exit menu without saving.
- 6. QUAD and Plus button :



Press this button to display the cameras in multi-screen view. This button also can be used to change channel of DVR or increase numbers of setup menu

7. Time Search and Minus button :



Press this button to enter calendar and time search menu. This button also can be used to change channel of DVR or decrease numbers of setup menu.

8. Channel / Numeric Buttons :

Press the buttons to enter data or make selections. Press "–" or "+" to enter appropriate numbers when prompted for a password, or appropriate dates in schedule option mode.

[-, +] : To Decrease settings, To Increase settings

Note : This button is used "0" or "10". Choose channels over 10. For example, Press this key and "6" to see channel "16".

9. Remote control signal receiver :

Do not block the receiver port on the unit. Doing so may cause the remote controller to function improperly.




10. POWER button:

Press this button to turn the power on; press again to turn the power off. The POWER LED indicator is lit when the power is on.




USB port allows light backups of video files to devices.

2. Rear Panel Connectors

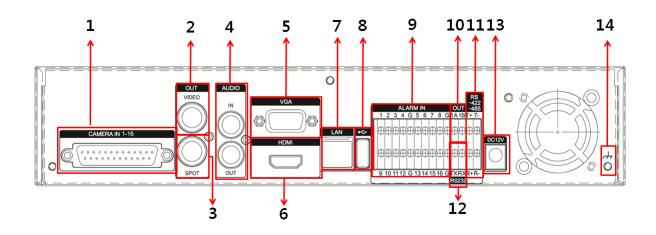

- 1) CAM 1~16 : BNC input connectors
- 2) MONITOR (Composite Output) : BNC standard composite video output connector.
- 3) SPOT : Spot out connector
- 4) AUDIO Input / SPEAKER (Output) connectors : RCA
- 5) VGA out connector
- 6) HDMI out connector
- 7) LAN (RJ-45 Ethernet Port) : For connecting to remote PC via Ethernet network.
- 8) USB connector
- 9) SENSOR (ALARM IN 1~16) : For connecting alarm inputs.
- 10) RELAY (ALARM OUT 1) : For connecting alarm out relays.
- 11) RS-422/485 : For connecting to PTZ camera and keypad.
- 12) RS-232C : Development purposes only.
- 13) POWER : DC power Jack
- 14) FIELD GND : Ground

3. Remote Controller

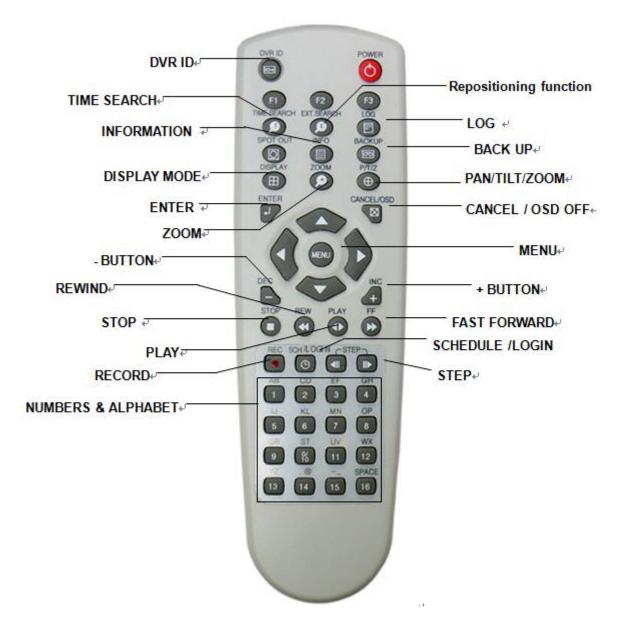

DVR ID: Set the proper DVR System ID through which to operate. Press the ID button, and then press the number button within two seconds to select the system ID of the DVR. If you set the System ID to Zero, you can control multiple DVRs at the same time.

4. Virtual Keypad for Mouse Control

This DVR provides a virtual on-screen keyboard to perform the control by mouse. Connect a mouse via USB port before use. If you click right button of your mouse in Live mode and Playback mode, you will see following virtual controller. This Virtual Keyboards operate similarly, but display different fields depending on the task being performed.




KEY	BOARD			
INP	UT			
	123 QWE	4 5 6 R T 1	9 0 0 P (
	ASD ZXC	FGH VBI		

<Virtual Control Panel>

<Virtual Keyboard>

II. INSTALLATION & CONNECTIONS

1. Camera, Monitor, Audio, Alarm sensor and Power cord

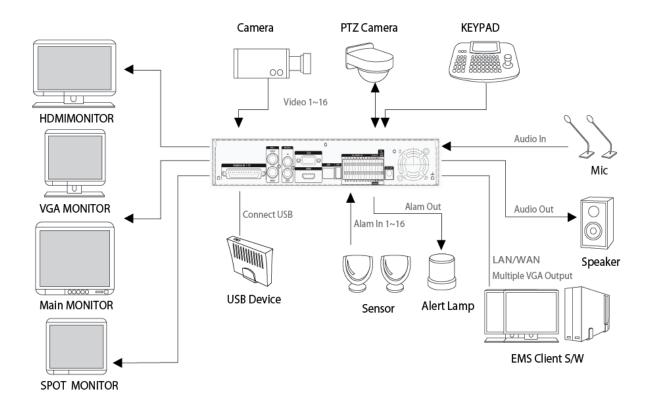

2. PC system requirement for Network connection.

- (a) Pentium-4 2.0GHz or Higher
- (b) 512MB RAM
- (c) Windows 2000, ME, Windows XP, Window Vista, Window 7
- (d) 16MB Video Card
- (e) 10/100/1000-BaseT Ethernet Port
- (f) CAT-5/6 UTP Cable for LAN

(Crossover cable for direct connect to PC)

<Disclaimer>

The connection and remote viewing of the DVR may not be successful on all PC's due to the variety of PC's internet connection settings. Please contact the technical support for further assistance.

III.QUICK START PAGE

\odot	LOG IN	(J X)
	SETU	Ρ
	ADMIN	*****

ADMIN and the default password is "000000"



The Default User ID "admin" and password to run the EMS software is "0"

Time & Date Setting

When the DVR is powered on for the very first time, the time and date are set as default to January 1, 2009 Thursday 01:00:00. Before any other operation of the Digital Video Recorder, it is important to setup the time and the date. Please refer to page 63 for setting the time and the date on the DVR.

SYSTEM	Λ
GENERAL TIME	ACCOUNT UPDATE INFO
TIME ZONE	GMT+09:00 (STANDARD)
DATE FORMAT	YYYY/MM/DD
NTP SYNC	• 0N • 0FF
NTP SERVER	
NTP TEST	START
DATE	2011/03/11 (YYYY/MM/DD)
TIME	04:38:59 (HH:MM:SS)

IV.LIVE VIEWING

1. Display Overview



1. Recording Mode 123

Background color of Number will be different based on the recording status.

- 1) Red Event (Motion/Alarm) Recording
- 2) Yellow Continues Recording
- 3) Black No Recording.



(1) Indicate Alarm In terminal is triggered by an alarm sensor.



To appear Alarm window, press **[UP]** button. This button toggles between Shows or Hide the Alarm Window.

- (2) Indicate Motion detected. To disappear, press [CANCEL] button.
- (3) Indicate Video Loss during Recording. To disappear, press [CANCEL] button.

(1) (2) (3) (4) (5)



- 3. Status Bar
 - (1) Indicate an **USB Device is connected on Front panel.** It's changed to blue color while it's doing backup.
 - (2) Indicate an **USB Device is connected on Rear panel.** It's changed to blue color while it's doing backup.
 - (3) Indicate Login(
 - (4) Indicate **Audio** Data is stored the selected time during playback and turn to blue color.
 - (5) It shows Number of Client, which is connected to Network.(MAX:10)
 - (6) 23/03/2009 MON 17:23:43 : Displays Month, Year, Time and Date.
 - (7) 5 D: Show you the remaining recording time of the DVR. If remaining HDD capacity is less than 5GB, this blue "Recycling" icon will be shown up.
- 4. Spot Monitor indicate

1 🕂

: Show you Selected Spot Number and status

2. Multi-screen Display and Sequencing

2.1. Screen Display.

Select any camera for Full screen display by pressing the Number button of the desired camera.

2.2. Multi-screen Display and Switch Sequencing Display.

DISPLAY		
GENERAL SWIT	CH EVENT	
STATUS BAR	O SHOW	• HIDE
CAMERA INFO		TITLE
BORDER LINE	WHITE	
BACKGROUND	GRAY	
OSD ALIGNMENT	O UNDERSCAN	OVERSCAN
SPLIT MODE		


- 1) Press **[DISPLAY]** buttons to activate the multiscreen display. It is changed the order as shown below among your choice of SPLIT MODE.
- 2) To start Auto Sequence, press [DISPLAY] buttons for 2 seconds to begin full screen sequencing.
- 3) The sequence mode and dwell times are programmable. For detailed information about configuring those, see "Switch Setup". If the sequence mode is not activated, it moves to Quad mode instead of Sequencing.

3. Quick button for multi screen Display.

3.1. Quick multi split mode change

- Press F1 button on the remote controller + <Number>

For example, press F1 button then number 8.

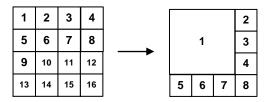


The eight channel view mode will be displayed.

<**Note>** 6,4,8,10,13 split mode must be checked on <Spit mode> to use this function.

3.2. Repositioning

- It is possible to reposition the camera from the bigger window with the one from a smaller one. It is used on 6,7,8,9,10, 13,16 split mode
 - ① Press **F2 button** on the remote controller. Ark will be displayed.
 - 2 Press Numeric button you wish to switching display.

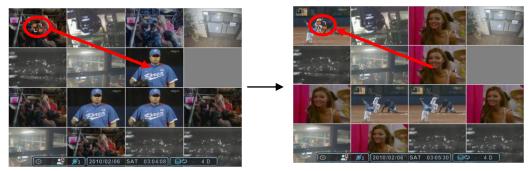

③ Press [MENU] button to exit here with saving changes.

Press [Cancel] to exit without change.

Press [DISPLAY] button to rearrange.


<Note> How to control on KEYPAD

- 1. Muliti Screen (F1 function) = 16+ Display , 4+ Display button, and so on..
- 2. Repositioning (F2 function) = 99+ Display button
- 3. Auto Sequence Start = Shift & Display(at the same time)

4. Zooming

During live view mode, it is possible to zoom into a section of the screen to get a close-up view of the screen.

- 1. To activate the digital zoom, select the full screen display of the camera you wish to zoom.
- 2. Then press the **[ZOOM]** button on IR Remote controller. Zoom area box pops up, as shown below: x2

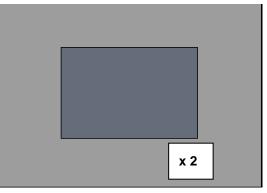

- 3. Move the box to the desired position using Direction [$\bullet \checkmark \bullet$] buttons.
- 4. Press [CANCEL] button to return normal mode.

<Note>

- This function is limited while it's playback in this model.
- If the Zoom button is pressed while in a multiscreen display, zoom operation is not activated.

5. Spot Monitor

In addition to the Main Monitor, attaching a Spot Monitor enables user to monitor specific channels independently form the main monitor. Press **[Spot]** button on the remote controller, DVR will be changed into SPOT mode.



- 1) [INC/DEC]: Sport out control will be changed from SPOT 1-A
- [Spot/Cancel]: Press Spot buttons for 2 seconds or [CANCEL] button to exit Main Monitor.

If there is no input, it will automatically exit into Main mode after 5 seconds.

- 3) [#CH] Press Spot button on remote controller, then press number button you wish watch as full screen.
- 4) [Display]- Press Spot button then [Display] for 2 seconds to start auto switch cameras. Sequence interval can be set from the Sequential Setup.

V. OPERATION

1. LOG IN/OUT.

You must log on to the DVR with valid password to operate the DVR. By default, it comes with one login account; ADMIN and the default password is "**000000**".

<Note > If you are logging on for the first time, the system does not prompt you to change the default password. Therefore, it's strongly recommended to change the "PASSWORD" when you install the DVR. Refer to [System Setup].

1. Login

1) On the front panel or remote control, press the power button.

2) When the DVR is powered on, it will start to scan DVR status.

3) Live Viewing screen will appear after initialization about 50sec. It can be delayed when you have defect HDD, it will try to fix for logical problem but it will show you warning message for physical problem.

4) On the front panel or remote control, press Login. Using the mouse, click wherever. the login dialog box pops up.

5) Login Icon kill be displayed on status bar.

2. Logout


On the front panel or remote control, press LOGIN. Using the mouse, click wherever on monitor, Virtual remote control will be appeared. The login icon will be disappeared on starts bar, indication you are logged off.

2. NAVIGATION THE MENU

- 1. Log on the DVR at admin level or user with configure level.
 - * User with configure feature is limited to access [DISK and System Menu].
- 2. On the front panel or remote control, press **[MENU]**. Using the mouse, click wherever on monitor, Virtual remote control will be appeared.
- 3. Use Direction buttons [▲▼◆] to select the desired menu. Using the mouse, click the menu. Items selected in the menu are represented in color.



- 4. Press [ENTER] button to select the menu and display Sub-Menu. Using the mouse, double click.
- 5. Use Left/ Right buttons [♣] to select on TAP menu. Selected items changed into [Orange] color.

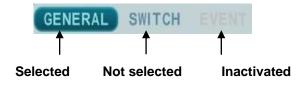

* It is automatically saved changes when you move between TAP menus.

- The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [▲▼◆].
- 7. Press [-, +] button to change the value or select options. By mouse, using Wheel.



Press [MENU] button to exit a menu with saving changes.
 Press [CANCEL] to exit a menu without changes.

VI. SETUP

1. DISPLAY

1.1. GENERAL




- The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [▲▼◆].
- 2. Change below options using [DEC/INC] buttons.

ITEM	ADJUSTMENT					
	Select "Show" or "Hide" below status bar on Main Monitor.					
STATUS BAR	[■ ♣ ✿ 읍 ▷ ∅ _¥] 07/03/2007 MON 00:00:00] 0G 0000:00]					
CAMERA INFO	Select On-Screen-Display information for Camera Number and Title.					
BORDER LINE	Select Board Line between cameras.					
BORDER LINE	[GRAY → WHITE →BLUE → BLACK →DARK GRAY]					
Select Background color on NO VIDEO status.						
BACKGROUND	$[GRAY \rightarrow WHITE \rightarrow BLUE \rightarrow BLACK \rightarrow DARK GRAY]$					
 The main video output can be displayed on a VGA and analog more 						
	Video can be displayed on both monitor simultaneously. Select On-					
OSD ALIGNMNET Screen-Display coordinates on Monitor.						
	- Under scan: Displays properly at CCTV Monitors					
	- Over scan: Displays properly at VGA Monitors.					
SPLIT MODE	• Display is changed the order as shown below among your choice of					
SPLIT WODE	SPLIT MODE.					

3. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.


1.2. SWITCH Setup (Monitor Configure)

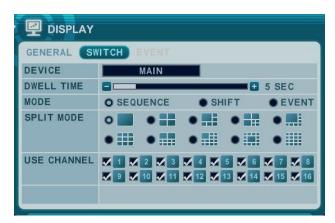

- The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [ATT].
- 2. Settings
 - 1) Device: Each Monitor may be configured in different way.

[MAIN → SPOT1]

- Dwell Time: Select the interval that each camera or Multi screen mode is displayed in a rotation. Use [-, +] button to change : [1 second ~ 30 second]
- 3) Mode: Select the appropriate monitor display to making any adjustment. This Mode will be activated while it's in Switch Mode.
 - a. Sequence: Automatic Sequence.
 - b. Shift: Selected camera will be displayed after dwell time.

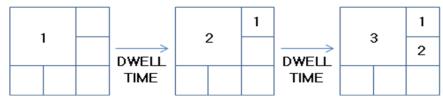

c. **Event**: To display particular camera in full screen or in multi mode when event triggered.



- 4) SPLIT MODE : Select desired sequence mode to switching.
 <note><u>This function is limited to use on SPOT Monitor in this model.</u>
- 5) USE CHANNEL: Select the cameras to be included or excluded from the automatic switching.
- Save changes and exit the menu, press [MENU] button.
 Exit the menu without making changes, press [CANCEL] button.
- 4. Press [Display] button for 2 seconds to start Auto Switch cameras on Main Monitor. Press [Spot] button then [Display] for 2 seconds to start auto switch cameras on Spot Monitor

1.3. EVENT

This menu will be activated when you select <EVENT> Mode for Switch. Event menu will allows customization of motion, alarm and video loss.

DISPLAY		9	DISPLAY				
GENERAL SV	VITCH EVENT	GENE	ERAL SWIT	CH EVENT			
DEVICE	MAIN	СН	ALARM	MOTION	VLOSS	SYSTEM	*
DWELL TIME	■ 5 550	1011	1	1	0FF	OFF	
MODE	● SEQUENCE ● SHIFT ● EVENT	2	2	2	OFF	OFF	
SPLIT MODE		3	3	3	0FF	OFF	
	• • •	4	4	4	OFF	OFF	
		5	5	5	0FF	OFF	
USE CHANNEL		6	6	6	OFF	OFF	
	9 🚺 10 📈 11 📈 12 📈 13 📈 14 📈 15 📈 16	7	7	7	0FF	OFF	
		18	8	8	0FF	OFF	

When selected event trigger such as alarm, motion or video loss, it will be displayed at the monitor that is configured for event.

2. CAMERA



1. Press Left/Right buttons [*] or number button to select the desired camera

2. Camera Channel option is highlighted and the camera settings are displayed.

The menus are displayed with options in the left-hand column and settings in the right hand column.

2.1. Video Adjustment

To Configure Camera Settings:

- 1. Select Camera number button to configure the desired camera.
- 2. Select Category to "TUNE".



ITEM	DEFAULT	ADJUSTMENT
BRIGHTNESS	E00/	• The brightness of each camera can be adjusted by pressing [-,+]
BRIGHTNESS	50%	buttons.
CONTRAST	50%	• The contrast of each camera can be adjusted by pressing [-,+]
CONTRAST	50%	buttons.
COLOR	500/	• The color of each camera can be adjusted by pressing [-,+]
COLOR 50%		buttons.
	N 50%	• The saturation of each camera can be adjusted by pressing [-,+]
SATURATION		buttons.

2.2. PTZ Set Up

PTZ devices are connected to the RS-422 ports located on the back of the unit. Multiple PTZ cameras are connected by daisy-chaining the camera connections. This DVR allows you to address and control multiple PTZ cameras on an individual basis.

To Configure PTZ Setup,

- 1) Select Camera number button to configure the desired camera.
- 2) Press [Enter] to configure PTZ Setup.



The menus are displayed with options in the left-hand column and settings in the right hand column.

PTZ S	ETUP (CH 1)	
ID	01	
MODEL	PELCO, D	
BAUD RATE	9600 BPS	
TOUR	GROUP 1	
GROUP LIST	1) PRESET 1~3, 2 SEC	
PRESET NO.	001 START ~ 003 STOP	(b
DWELL TIME	02 SEC	
CHANGE	INSERT MODIFY REMOVE	

a. Communication settings.

: Configure appropriate model and then enter the corresponding baud rate, PTZ ID(address).

b. **Tour Group**: Preset Tour allows a camera to move though a programmed sequence of PTZ preset. Please refer to **<PTZ controlling>** for more in detail.

2.3. Camera Title

Allows you to create a unique name for each camera. The camera title has the following guidelines:

- Characters: A to Z, 0 to 9. Special characters are supported by network.
- Length: up to 12 characters, including spaces.
- To create a camera title, use the virtual keyboard or press the appropriate numeric button on the IR Remote or the front panel.

KEYBOARD
INPUT CAMERA TITLE
1234567890 . Del Q W E R T Y U I O P @

<Virtual Keyboard by Mouse>

No	1st	2nd	3rd	No	1st	2nd	3rd
1	А	В	1	6	Q	R	9
2	С	D	2	7	S	Т	10
3	Е	F	3	8	U	V	11
4	G	Н	4	9	W	Х	
5	I	J	5	10/0	Y	Z	
6	К	L	6	14		@	
7	М	Ν	7	15	-	_	
8	0	Р	8	16		SPACE	

<on IR Remote Controller or Front Panel >

4. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.


4. Motion Detection Setting

To Configure Motion Area :

- 1. Select Camera number button to configure the desired camera.
- 2. Select Category for "GRID". Settings are shown at default levels.

САМЕ	ERA
12345	6 7 8 9 10 11 12 13 14 15 16
CATEGORY	GRID
MOTION LEVEL	1 0
MOTION GRID	
PRIVACY MASK	
PTZ	SETUP ID 2, D-MAX, PTZ PROTOCOL
TITLE	C =. 1

- 1) Motion Level : The sensitivity settings are : 1: Low sensitivity ~ Level 20: High sensitivity. By default, the level is set to 10.
- 2) Motion Grid : The area property is highlighted and motion detection can now be observed in the view window. By default, it's set to OFF.
 - Select All. Press [Enter] to select.
 - Clear All. Press [Enter] to select.
 - Select specific. Press [Enter] to select.

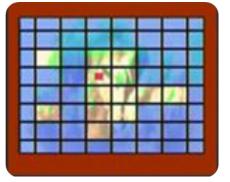

To define the motion view area cell-by-cell, do the following:

On the front panel or remote control, press any of direction buttons to highlight a cell in the motion detection area, then press [INC/+]. This area is selected and the cells are highlighted in a blue colour.

2.5. Privacy Mask

Privacy Mask allows you to mask certain areas in the surveillance video for privacy protection under related laws, policies and regulations. Areas applied with privacy masks will not be displayed. Once you've set up the Privacy Mask, by selecting positions that need video masking, the covered placement is displayed in Live View, Recording and Playback.

To Configure Privacy Mask:

- 1. Select Camera number button to configure the desired camera.
- 2. Select Category for "GRID ".

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
CATEGORY - GRID +
MOTION LEVEL
MOTION GRID
PRIVACY MASK
PTZ SETUP ID 2, D-MAX, PTZ PROTOCOL
TITLE C 1

3. The Privacy Mask creates a masking rectangle of a selected size then positions it on the video image. To define the Privacy Mask area, do the following;



- 1) On the front panel, or remote control, press any of directional buttons to highlight an area in the Privacy Mask area. Select cells which you want to hide, one at a time, and then press [INC/+].
- 2) The area is selected and the cells are highlighted in a blue color.
- 3) The area property is highlighted and privacy mask can now be observed in the view window. **By default, it's set to OFF**.
 - 📝: Clear All. Press [Enter] to select.
 - Select specific. Press [Enter] to select.

3. RECORD

3.1. Record General



- The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [▲▼◀▶].
- 2. Change below options using [DEC/INC] buttons.
 - 1) Schedule Use: This enables or disables Night Zone. By default "OFF".
 - Boot up Record: It starts to recording without pressing [REC] button when it set "on".
 - 3) **Disk Overwrite**: Select the record policy of the hard disk drive.
 - ON: By default, the hard disk drive will overwrite from the beginning when it becomes full.

- OFF: It stops recording after HDD is full.

- 4) Auto Delete: Allows you to configure when the DVR automatically deletes all data from HDD. It lefts the data for below duration from current time.
 [NONE → 12HOURS → 1DAY~ 6DAYS → 1WEEK ~ 4WEEKS-> 30 DAYS]
- Pre-Record: Determines the duration of the DVR stores video recorded prior to the beginning of Event Recoding. [5SEC ~ 300 SEC]. By default 5 sec.
- 6) Post- Record: Determines the duration of the DVR continues record after Event detect. [5SEC ~ 300 SEC]. By default 5 sec.

<**Note>** 1. Alarm/Motion Duration will be extended if there is another Alarm/motion detection while Event recording.


- 2. When recording, the Pre-Record and Post-Record will not be activated.
- Save changes and exit the menu, press [MENU] button.
 Exit the menu without making changes, press [CANCEL] button.

Quality	NTSC			PAL			UNIT
	720*480	720*240	360*240	720*576	720*288	360*288	
LOW	11.7	5.8	2.9	14.0	7.0	3.5	KB
MIDDLE	15.0	7.5	3.8	18.0	9.0	4.5	KB
HIGH	18.3	9.2	4.6	22.0	11.0	5.5	KB
SUPER	21.7	10.8	5.4	26.0	13.0	6.5	KB
ULTRA	25.0	12.5	6.3	30.0	15.0	7.5	KB

< Approximate File Size>

* It is calculated by theoretical, therefore it may be different depends on Video Signals or other conditions in actual.

3.2. Resolution & Recording speed Setting

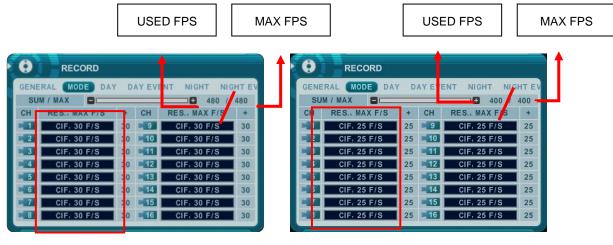


<NTSC MODE>



This DVR records each camera individually and then multiplexes them. You can individually set up resolution and recording speed for each channel. D1 stands for NTSC 720*480(PAL 720*576), Field stands for 720*240 (PAL 720*288) and CIF for 360*240(PAL 360*288)

To make them global record, select desired setting channel then press split button copy to other channel.

<Note> Total fps is displayed in SUM/MAX. MAX : NTSC for 480 and PAL for 400. If the sum of fps is over than MAX fps, below warning message will be popped up. Then automatically the last channel will be disabled.

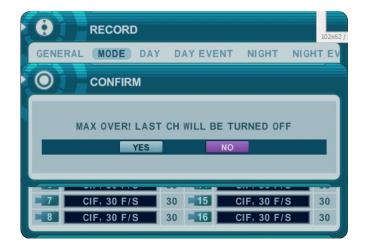

3.3. Continues /Normal Recording

The DVR comes with a certain preset settings from the factory. Therefore once the DVR is installed, immediate recording is possible after pressing the record buttons. By default, audio, alarm, motion recording are off.

GENI	ERAL	MODE	DAY DAY E	VENT NIC	GHT NIGHT
C 11	RES.	CON	TINUOUS	E١	/ENT
СН	RES.	F/S	QUALITY	F/S	QUALITY
-11	CIF	30	HIGH	OFF	SUPER
2	CIF	30	HIGH	OFF	SUPER
3	CIF	30	HIGH	OFF	SUPER
4	CIF	30	HIGH	OFF	SUPER
5	CIF	30	HIGH	OFF	SUPER
6	CIF	30	HIGH	OFF	SUPER
7	CIF	30	HIGH	OFF	SUPER
8	CIF	30	HIGH	OFF	SUPER

The DVR records video data continuously over 24 hour period. Recording setup is for normal recording. Different settings can be configured for each camera. To copy the setting to other channel, press **[Display]** button.

ITEM	ADJUSTMENT
RES.	 Display selected resolution in MODE tab.
RATE	 Select recording speed for each camera.
QUALITY	 Specify the record picture quality for each camera.
	ULTRA → SUPER → HIGH → MIDDLE →LOW

3.4. Event Recording

Users may set different event recording parameters on a camera by camera basis. Set the continuous recording as [OFF] and configure the Event recording speed and Quality for each camera.

GEN	GENERAL MODE DAY DAY EVENT NIGHT NIGHT E							
			TINUOUS	EVENT				
СН	RES.	F/S	QUALITY	F/S	QUALITY			
-1	CIF	OFF	HIGH	30	SUPER			
2	CIF	OFF	HIGH	30	SUPER			
3	CIF	OFF	HIGH	30	SUPER			
4	CIF	OFF	HIGH	30	SUPER			
5	CIF	OFF	HIGH	30	SUPER			
6	CIF	OFF	HIGH	30	SUPER			
7	CIF	OFF	HIGH	30	SUPER			
8	CIF	OFF	HIGH	30	SUPER			

Determine whether Alarm, Motion, Video Loss for EVENT recording on [DAY EVNET] Tap.

1) Alarm Recording

One Alarm input can be configured to one channel. One camera channel can be assigned to multiple alarm inputs.

GENE	RAL MOD	E DAY	AY EVENT	NIGHT N	IGHT	V	GENE	RAL MOD	E DAY	DAY EVENT	NIGHT N	IGHT
сн	ALARM	MOTION	VLOSS	SYSTEM	*		СН	ALARM	MOTION	VLOSS	SYSTEM	*
1	OFF	OFF	OFF	OFF			-11	X	OFF	OFF	OFF	
2	OFF	OFF	OFF	OFF			2	OFF	OFF	OFF	OFF	
3	OFF	OFF	OFF	OFF		↔	3	OFF	OFF	OFF	OFF	
4	OFF	OFF	OFF	OFF			-4	OFF	OFF	OFF	OFF	
5	OFF	OFF	OFF	OFF			5	OFF	OFF	OFF	OFF	
6	OFF	OFF	OFF	OFF			6	OFF	OFF	OFF	OFF	
7	OFF	OFF	OFF	OFF			- 7	OFF	OFF	OFF	OFF	
8	OFF	OFF	OFF	OFF	P		- 8	OFF	OFF	OFF	OFF	

- a. Press [-, +] button to change the value or select options. By mouse, using Wheel.
- b. [*] indicate multiple alarm sources are selected.
- c. Please refer to [Device/Alarm] for Alarm inputs and outputs.

2) Motion Recording

One Motion detection can be configured to one channel. One camera channel can be assigned to multiple motion detection.

ECORD RECORD								
GENE	GENERAL MODE DAY DAY EVENT NIGHT NIGHT							
сн	ALARM	MOTION	VLOSS	SYSTEM	*			
-1	OFF		OFF	OFF				
2	OFF	OFF	OFF	OFF				
3	OFF	OFF	OFF	OFF				
4	OFF	OFF	OFF	OFF				
5	OFF	OFF	OFF	OFF	A			
6	OFF	OFF	OFF	OFF				
7	OFF	OFF	OFF	OFF				
8	OFF	OFF	OFF	OFF				

- a. Press [-, +] button to change the value or select options. By mouse, using Wheel.
- b. [*] indicate multiple alarm sources are selected.
- c. Please refer to [CAMERA] menu for Motion setup.

<**Note>** There may be cases when the recorder's built-in motion detection function does not operate properly due to the condition of the input video signal or other factors.

3) Multi Event Recording.

Ø	RECO	RD			
GENE	RAL MODE	DAY	AY EVENT	NIGHT N	GHT
сн	ALARM	MOTION	VLOSS	SYSTEM	*
-1	OFF	OFF		OFF	
2	OFF	OFF	OFF	OFF	
3	OFF	OFF	OFF	OFF	
4	OFF	OFF	OFF	OFF	
5	OFF	OFF	OFF	OFF	
6	OFF	OFF	OFF	OFF	
7	OFF	OFF	OFF	OFF	
8	OFF	OFF	OFF	OFF	

a. **Video Loss** : When Video Loss occurs can be configured to one channel. One camera channel can be assigned to multiple Video Loss

b. Event Edit



 Press [enter] to edit multiple event. The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [[▲]▼⁴] on IR remote or front panel.



- Change below options using [DEC/INC] buttons on IR remote or Clicking by mouse.
- System menu will not activated in this section

3.5. Continues + Event (Motion/Alarm) Recording

Both Continuous and Event recording can be set at the same time. The DVR record video data continuously over 24 hour period but when Event occurs recording speed and picture quality can be adjusted different from continues recording. <Example>

0		RECORD			
GENE	ERAL	MODE	DAY DAY EN	ENT N	GHT NIGHT E
		CON	TINUOUS	E	VENT
СН	RES.	F/S	QUALITY	F/S	QUALITY
-1	CIF	3	HIGH	30	SUPER
2	CIF	3	HIGH	30	SUPER
3	CIF	3	HIGH	30	SUPER
4	CIF	3	HIGH	30	SUPER
5	CIF	3	HIGH	30	SUPER
6	CIF	3	HIGH	30	SUPER
27	CIF	3	HIGH	30	SUPER
8	CIF	3	HIGH	30	SUPER

By pressing the **REC** button, **Normal** recording starts with High picture quality at 3F/S. When **Event** is triggered on this channel, it changed to record with Super picture quality at 30 F/S. It will be back to **Normal** Recording after Event duration is end.

<Note> Please determine Event source such as Motion, Alarm, Video Loss on DAY EVENT tap.

4. SCHEDULE

When the schedule is on, users may define their own daytime, night time, as well as specified date settings. A schedule can be used to record selected cameras at different Times, changes record rates, and select whether alarms or event is enabled. By selecting Schedule USE "on" Record setup, Night Mode will be activated.

RECORD)		
GENERAL MODE	DAY DAY EVENT	NIGHT	NIGHT EV
SCHEDULE USE	0 0N	• OFF	
BOOTUP RECORD	• ON	O OFF	
DISK OVERWRITE	OON	• OFF	
AUTO DELETE	NONE		
PRE RECORD			5 SEC
POST RECORD			10 SEC

4.1. CHART Setup

The schedule chart shows a graphical representation of the defined record mode. Night mode will be set by default. However, the schedules are only displayed if a corresponding schedule has been configured in the schedule menu.



- * DAY (Yellow): It follows day setting on record.
- * Night (Green): It follows automatically night setting.
- * No Record (Blue): The video is displayed, but does not record video.
- 1) A cursor (highlighted menu) can be moved using the Direction buttons [***].
- 2) Select each day to configure, press [Enter] or clicking by mouse.
- 3) Detailed menu pops up for select day, as shown below.

0	SCHEDULE (SUNDAY)						
MODE	BEGIN	END	MODE	BEGIN	END		
- NIGHT +	:	:	NIGHT	:	:		
NIGHT	:	:	NIGHT	:	:		
NIGHT	:	:	NIGHT	:	:		
NIGHT	:	:	NIGHT	:	:		
NIGHT	:	:	NIGHT	:	:		

- a. Use [-, +] button to change the values.
 - Mode : [Night] →[Day] →[No Rec]
 - BEGIN: The time of recording start.
 - END: The time of recording end. The ending time must not be before the starting time or the same as the starting time. It must be any time over the starting time.
- b. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.

- 4) Copying Schedule
 - a. A cursor (highlighted menu) can be moved using the Direction buttons [***] on Day(Sun Sat)
 - b. Press [Display] button on desired setting.



4.2. Holiday Setup

This allows you to create up to 32 holidays. If a holiday schedule occurs on the same date as a weekday schedule, the holiday schedule will override the weekday schedule.

SCHEDULE								
CHART HOLIDAY								
MODE	DD/MM DAYS	MODE	DD/MM DAYS					
0FF	/ 1	OFF	/ 1					
OFF	/ 1	OFF	/ 1					
0FF	/ 1	OFF	/ 1					
0FF	/ 1	OFF	/ 1					
0FF	/ 1	OFF	/ 1					
0FF	/ 1	OFF	/ 1					
0FF	/ 1	OFF	/ 1					
OFF	/ 1	OFF	/ 1					
100 million (1990)								

- 1) A cursor (highlighted menu) can be moved using the Direction buttons [***].
- 2) Select each day to configure, press [Enter] or clicking by mouse.
- 3) Use [-, +] button to change the values.
 - Mode : [OFF] →[Day] → [Night] →[No Rec] → [Sun~Sat] →[Custom]
 - Date: The date of Holiday start. .
 - Days: The time of holiday duration [1 to 15 days]

5. DISK

5.1. DISK Manager

Disk Manger is used to format hard disk and to assign the HDD usages such as back up or mirroring.

	DISK	
DISPLAY CONTRACT	DISK MANAGER RECORDING DISK S.M.A.R.T. STATUS	
	SELECT DEVICE SIZE STATUS	
	INT-A 250G RECORD DATA	
CAMERA		1
A		
RECORD		
SCHEDULE	ACTION NONE START	
		2
DISK NETWORK		9

1. Select


- 1) The menus are displayed with options all installed HDD or ODD list.
- Press up/down [▲▼] buttons to highlight Hard Disk or ODD, then press [-, +] button to select. Using the mouse, click the HDD option.
- 3) Device & Size: This information lists the installed drives and their respective capacities, which is not used currently.
- 4) Status:
 - a. CD/DVD : CD or DVD is installed for back up usages.
 - b. Unknown: New installed Disk.
 - c. Empty: Formatted but not used in current DVR.
 - d. Recording Data: HDD stored Recording data but not used in current DVR.
 - e. Back up Data : HDD stored Back up data.
 - f. Other data: Neither Back up nor Recording Data, including AVI file.
 - e. Damaged
 - **<Note>:** Disconnected Disk will be disappearing from Disk Menu.

2. Action :

- 3. None: By default.
- 4. **Assign to Record**: Initialize the selected HDD. It formats the drive and all data on the drive is erased. Selected HDD will be move to [Recording Disk] after formatting.

5. Initialize for Back Up:

Selected device, such as Media or External HDD, is formatted for backup use. Here's the guide for backing up data to various devices.

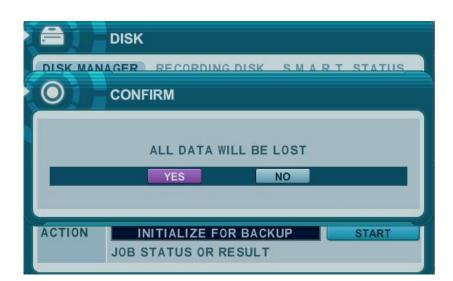

Once you press the start button, this pop-up window is displayed to ask you to confirm the initialising for back up: YES or NO.

6. Link Record Disk

: This function is used for add [used HDD] from same model without formatting.

< note : There are limitations for using this function >

A.DVR should be empty (NO HDD). If RECORDING DISKs are existed, it's not working.

B.The used HDD should be from same series. It's not working with different series.

Device	HDD		
	SATA	USB	
Media can be formatted	0	Х	
Device can be formatted on a PC using FAT 32, NTFS	0	0	
File system.			
Media must be formatted on DVR before backing up or	^	^	
exporting data to the device.	\bigtriangleup	\bigtriangleup	

C.There should be no time duplication in HDD.

<Note1> USB flash memory is working without format.

<Note2> if a FAT32 /NTFS formatted external USB device is installed, <Assign to Stream> feature is disable. It's limited to back up only.

- 3. Press [+] button to start selected action
- Save changes and exit the menu, press [MENU] button.
 Exit the menu without making changes, press [CANCEL] button.

5.2. Recording DISK

This information lists the installed drives how the DVR record video and their respective capacities, which is currently used for recording.



1. Size, Range

: This displays current recorded data size, HDD size and indicated stored data range and where the writing progress is running

2. Device

It displays logical Master and Slave device in mirroring. Upper device is Master and the other is used for slave. If slave HDD is reached to 100% synchronize, Master HDD can be removed as well.

- 3. Status
 - 1) Stable : The HDD is in stable status.
 - 2) Recover: To force all pending buffered disk writes to the slave disk.
- 4. Action : Remove HDD.

The "Are you sure?" dialog box opens.

\odot	CONFIRM
	ARE YOU SURE?
	YES NO

Press up/down [] buttons to YES or NO, then press [-, +] button to select.

5.3. SMART STATUS

	DI	sк		<u></u>			
DIS	DISK MANAGER RECORDING DISK S.M.A.R.T. STATUS						
NO	ID	BAD	TEMP	TIME	STATUS		
1	INT-A	0	35 °C	175 D	GOOD		

It displays HDD information such as Bad sector, temperature, HDD running time. S.M.A.R.T information has slight different between different HDD manufactures.

It recommended exchanging the HDD when the HDD status is in <PRE-FAIL>

Status	Explanation
GOOD	GOOD
PRE-FAIL	Alerts that may have problem
PAST PRE-FAIL	"PRE-FAIL" was occurred before
FAIL	Find problem / need to replace

*NOTE : Please refer to STATUS explanation

6. NETWORK

The static service consists of an IP address that remains constant for the duration of the contract of the internet service, whereas the dynamic service consists of an IP address that frequently changes every time a new connection is made through the provided modem, or recurrently in a given period of time. Though most internet service providers offer both solutions, this manual will distinguish the two solutions according to the commonly available service type to configure the DVR for the networking purposes.

6.1. ETHERNET

ETHERNET GENE	RAL EMAIL SMTP DDNS		THERNET
CONFIG	O STATIC IP OHCP	C	ONFIG
IP ADDRESS	192.168. 6.209	IF	ADDRESS
NETMASK	255.255.248. 0	N	ETMASK
GATEWAY	192.168. 0. 1	G	ATEWAY
PRI. DNS SERVER	168.126. 63. 1	P	RI. DNS SE
SEC. DNS SERVER	210.220.163. 82	S	EC. DNS S

ETHERNET GENERAL EMAIL SMTP DDNS						
● STATIC IP ● DHCP						
192.168. 6.209						
255.255.248. 0						
192.168. 0. 1						
168.126. 63. 1						
210.220.163. 82						

1. Static IP

If the Static IP is selected, the following settings are available:

- 1) IP Address : Enter the static IP address
- 2) **Netmask** : Enter the IP address of subnet mask.
- 3) Gateway: Enter the IP address for the internet gateway server.

4) **PRI.DNS Server**: Verify the name of the domain name system.

5) **SEC.DNS Server**: Enter the IP address of the backup domain name system (DNS) server that the DVR will use to convert name to IP address. This server is used if the primary DNS server fails.

<Note> if you do not set up DNS server correctly, it will have problem with mail sending.

2. DHCP: Dynamic Host Configuration Protocol.

It is automatically set on from Local DHCP if there is Local DHCP server (i.e. The local Router) . if the DHCP is set to ON, the IP address, Gateway and subnet Mask will be assigned by DHCP server.(i.e.The local area network Router)

6.2. GENERAL

	к	
ETHERNET GENER	RAL EMAIL SMTP	DDNS HOST LI
ACCESS PORT	7000	
BANDWIDTH	UNLIMITED	
BLOCK	PING	SCAN
STREAM MODE	• DUAL	O OPTIMIZED
STREAM PROPERTY	CIF, 6 F/S	SUPER
ACCESS HOST	O OFF O DEN	Y O ALLOWED
AUTO PORT FWD	INSERT REMOVE	
2 WAY AUDIO	ENABLE	

1. Access Port: Select "0001 ~ 9999"

Enter the port number that the client will use to communicate with the DVR over the internet. The default port is 7000. It is recommended to use over 1,000.

- 2. Bandwidth: Select the network bandwidth to limit the amount of network resources allocated to client connection..The default is unlimited: " 4 KBPS~ 8 MBPS"
- 3. Block 1) Ping Block: No response to ping. By default OFF.

2) Scan Block: No response to Auto Scan from EMS. By default OFF

- 4. Stream Mode : Select network stream mode between Dual or Optimized
 - 1) Dual: Streaming the video/audio data with a specified quality, it's independent of recording configuration

	Available F/S by channel						
NTSC	CIF, 7 F/S						
PAL	CIF, 6 F/S						

- <Note> Max Dual stream for Network
- Optimized: Streaming the video/audio data with a maximized throughput, it depends on recording configuration but use manufacture's own method. It provides better network streaming rate.

Example

RECORDING SETUP		NETWORK STREAM			
D1/2CIF,CIF	30 (25) FPS	D1/2CIF,CIF 30 (25) FPS			
D1/2CIF,CIF	1~15 (1~12) FPS	D1/2CIF,CIF	15 (12) FPS		

5. Stream Property: It's activated when you select dual streaming.

 Access Host and Host List: Allows you to access or deny specific IP address.
 To allow or deny remote access requires you to enter a range of IP addresses as an IP address and mask. Host List will be activated when you select deny or allowed.

	к	
ETHERNET GENER	RAL EMAIL SMTP	DDNS HOST LI
ACCESS PORT	7000	
BANDWIDTH	UNLIMITED	
BLOCK	PING	SCAN
STREAM MODE	• DUAL	O OPTIMIZED
STREAM PROPERTY	CIF, 6 F/S	SUPER
ACCESS HOST	• OFF • DEN	Y O ALLOWED
AUTO PORT FWD	INSERT REMOVE	
2 WAY AUDIO	ENABLE	

Ø	NETW	ORM	٢							
HERNET	GENE	RAL	EN	IAIL	SI	MTP	DDNS	HO	ST LIS	т
	IP / MA	SK					IP / MA	SK		
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2
0.	0.	0.	0	32		0.	0.	0.	0 3	2

- 7. Auto Port FWD: Select the ADD button to automatically open ports for Router communication with UPNP compliance.
- 8. 2 Way Audio: Support 2 way Audio between DVR and Remote Software

6.3. EMAIL

This DVR allows you to specify the events that generate notification. Sends e-mail notification if an event occurs such as alarm or motion is detected and so forth.



The mail server can use either the DVR mail server or your existing e-mail settings.

The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [$\overset{\bullet \checkmark \bullet}{}$].

1. USE : Select the e-mail notification on or off. The default is off. Press [-, +] button to select. Using the mouse, click the option to select mail server.

1) **Default:** Default it is provided by manufacture. Mail notification options and mail address settings are available.

2) **SMTP** : SMTP Configuration TAP will be activated to set up your own mail settings.

- 2. Send Period: e-mail will be sent by selected intervals.
 1) Event : [Immediately, 10 Minutes, 1 hour, 1 Day]
 2) Log : [1 Day, 1 Week]
- 3. Retry Count : Select the number to try to send e-mail again when fails up.
- 4. E-mail Source: Event must be specified using notification options.

1) Event Edit:. Notifications can be enabled for each channels for Alarm, Motion, Video Loss and System (HDD Fail, Record Fail, HDD Full and etc). Press [enter] button to select.

	DIT (EMAIL)
ALARM IN	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
MOTION	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
VLOSS	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
SYSTEM	
DESCRIPTION	MOTION CHANNEL 1

2) Log: This DVR will mail Log list at selected intervals.

- 5. Attach Picture: While you are in recording mode, picture can be attached for mail.
- 6. E-mail Address: 5 mail addresses can be configured for mail notification.

6.4. SMTP

This menu will be activated when you check <SMPT> on EMAIL.

The following settings are only needed if you are NOT using the DVR mail server.

Ø NETWORK		METWORK					
ETHERNET CENE	RAL CHAIL SHITT DONS	ETHERNET GENERAL EMAIL SMTP DDNS					
USE	● OFF ● DEFAULT ● SMT	SERVER					
SEND PERIOD	EVENT IMMEDIATELY	PORT 0025					
	LOG 1 DAY	AUTHENTICATION ON OFF					
EMAIL SOURCE	🖴 EVENT EDIT	USER ID					
ATTACH PICTURE	ON OFF	PASSWORD ********					
EMAIL ADDRESS	ADDRESS 1	SEND TEST START					

- 1. Server: Enter the e-mail server name or IP. To server name, using the virtual keyboard, or pressing appropriate Numeric button on IR Remote or front panel.
- 2. Port : Define the port that the SMTP server will communicate through. By default, it set to 25.
- 3. Authentication: Check this <on> if your mail server requires authentication.
- 4. User ID & Password: Enter the user ID/name and password for the SMTP Server. (It is recognized as a small letter, even it's displayed as a Capital Letter).
- 5. Sent test : Test to send e-mail.
- Save changes and exit the menu, press [MENU] button.
 Exit the menu without making changes, press [CANCEL] button.

6.5. DDNS (Dynamic DNS)

This DVR offers free dynamic DNS update. It keeps track of your changing IP address. It's easiest to use.



The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons $[\overset{\bullet}{}\overset{\bullet}{}]$.

1. USE : Select DDNS on or off. The default is off. Press [-, +] button to select. Using the mouse, click the option to select DDNS provider.

1) **Default:** Default it is provided by manufacture. We offer DDNS service for remote at http://www.dvrhost.com

If you are using <Default> for DDNS, you do not need to setup anything. It's not allow to you create host name. It's providing by DVR. Press [info] button on IR remote or Front panel, then check your host name.

GENERAL TIME	ACCOUNT UPDATE INFO	
MODEL BRIEF	H.264 PR0 16CH MINI	1
HOSTNAME	G576876	
MAC	00:02:F1:57:68:76	
LANGUAGE	ENGLISH	
NETWORK	192.168.7.12:7000	
RECORD DISK	OM	
DISK SUMMARY	0 STREAM, 0 MIRROR	
SYSTEM HEALTH	TEMP: GOOD VOLT: GOOD	

For example, http://G747474.dvrhost.com:7400

2) DYNDNS: To use your own domain name service or "dyndns.com"

- 2. The following settings are only needed if you are NOT using the default.
 - 1) Domain Name: Enter the name you set for the DDNS web configuration.
 - 2) User ID: Enter your user ID.
 - 3) Password: Enter your password.

4) Update Test: Click the Update Test button to confirm the connection. A success message will appear.

Save changes and exit the menu, press [MENU] button.
 Exit the menu without making changes, press [CANCEL] button.

6.6 Router & Port Forwarding

The majority of any network will often consist of a single IP address which shares the internet access through a router. This IP address may be any external (public) static IP address or any dynamic IP address issued by the Internet Service Provider.

The purpose of a router is to enable multiple personal computers and any other devices that require internet connection to access the internet simultaneously. Most routers by default enable (open) commonly used ports so that mainstream applications such as Hypertext Transfer Protocol (HTTP, Port 80), File Transfer Protocol (FTP, Port 21), Telnet (Port 23) and Post Office Protocol 3 (POP3, Port 110) are used.

To solve the firewall problem and let visitor into the network, the user instructs the router to allow traffic to pass through on a given port. This is known as Port Forwarding, as the router forwards (directs) all internet requests on a specific port to the local machine. With port forwarding, external visitors are able to connect to the DVR while other internal devices remain protected.


			PC Connect position		PC Connect position		CF	
Network	Router	DVR IP Setting	① LAN		② WAN			
			А	В	С	В	С	
		STATIC	0	\bigtriangleup	Х	*	*	
	use		_	•	×	☆	*	Check the DVR IP of info
Static IP		DHCP	0				*	and set into Router.
Static II	x	STATIC	0	0	0	0	0	
		DHCP						N/A [Need Local DHCP
		DHCF						Server]
	use	STATIC	0	\bigtriangleup	Х	*	*	
		DHCP	0		×	*	*	Check the DVR IP of info
DHCP							*	and set into Router
		STATIC						N/A
	×	DHCP						PPPOE is not supported

Here is the example of DVR connection.

- 1) Description of Location.
 - A. LAN: Connect by Local IP. If you are connection from within your network, you only need to enter the IP address of the system into the S/W (ex. 192.168.0.50)
 - B. WAN: Connect by DDNS. If you are connecting from outside your network, use the DDNS to configure the S/W.(Ex. L123456.dvrhost.com).
 - C. WAN: Connect by IP address. If you are connecting from outside your network and if you know your Static IP address, use the IP address to configure the S/W. (Ex. <u>http://124.137.23.72:6000</u>)
- 2) Description of Symbols.
 - : Connected.
 - x : Not able to connect
 - riangle: There's some limitation depends on Router or Network connection
 - ★ : Need to use Port Forwarding
- 3) Description of Color.

Yellow - Recommended

- Grey Non available
- White Depends on Router or Network condition.
- 2. How to use DVR for DHCP

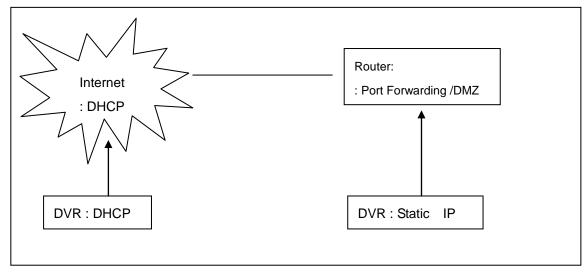

<Note> Each Router has different port forwarding settings. Please refer to the router manual or contact to your router manufacture for assistance.

7. DEVICE

7.1. GENERAL

This DVR support 1 Audio, Alarm input and 1 relay output1 and support HDMI out put.



- The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [^A,].
 - 1) DISPLAY : Please decide to Output resolution
 - It automatically detects and set correct video resolution on the monitor in default.
 [800*600 → 1024*768 → 1280*720 → 1280*1024

→ 1600*1200 → 1680*1050 → 1920*1080I → 1920*1080P]

• **HDMI AUTO**: Automatically detects and sets the HDMI resolution on the monitor connected to the DVR. It might display "no video" if a VGA monitor is not able to support high resolution.

<NOTE>

In order to connect HDMI and VGA output to use both monitors, please set up as the lowest resolution without selecting HDMI AUTO.

2) Audio Record: Select audio recording device usage: ON or OFF.

The audio data is always recorded in real time unlike the video data that can be recorded in various modes including real time. There may be a slight delay in synchronization of the audio to video


- 3) Keypad Model: Select Joystick Controller and Baud Rate.
- 4) Extend Device : Future use.
- 5) PTZ Event : DURATON [OFF,1SEC ~ 5 SEC] : Select PTZ EVENT duration.
- 6) Alarm out : DURATON [OFF,1SEC ~ 5 SEC] : Select Alarm duration.

2. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.

7.2. ALARM

This DVR support 4 Alarm inputs and 1 relay output. One Alarm input can be configured to one relay output. One relay output can be assigned to multiple alarm inputs.

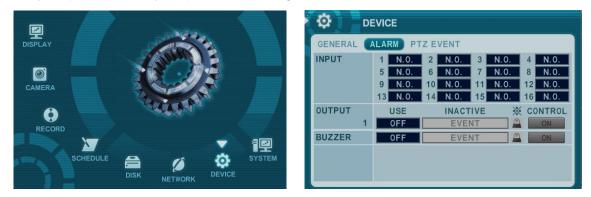

- Use Left/Right buttons [♣] to select on TAP menu "ALARM" The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [▲▼♣].
- 2. **INPUT:** Change the input type. Use [-, +] button to change the values.
- 3. **OUTPUT**: you can configure how the relay outputs are controlled: automatic or manual.
 - 1) **Use:** Change the output type.
 - 2) Inactive: Select turn off method of Relay out.

a. Event (Automatic): Relay out is turned off when the event expires. This setting is configured globally.

b. Manual: Relay out is turned off from this menu <Control>.

- 3) Event Edit 🦰
- Press [enter] to edit multiple event. The menus are displayed with options on the lefthand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [^A^{*}] on IR remote or front panel.

ALARM IN	
MOTION	
	9 10 11 12 13 14 15 16
VLOSS	
	9 10 11 12 13 14 15 16
SYSTEM	

-Change below options using [DEC/INC] buttons on IR remote or Clicking by mouse.

- -System menu contains below
 - HDD Disk Fail
 - Record System Fail
 - Temperature warning.
 - Fan Lock Warning
 - Voltage Warning
 - Low RTC Battery Warning
 - External Device Event
 - Network Link Disconnected
 - Admin Login
 - Power Recovery
 - Disk Full
 - Invalid password in sequence
 - Auxiliary Event (Reserved)
- 4) Control: Manual stops for relay output and buzzer.
- 4. Buzzer
 - 1) USE

• **ON:** The buzzer Sounds if an alarm is triggered. The buzzer will sound for the duration of the RECORD TIME. This buzzer related with Alarm Out. Please configure Alarm Out "ON" for Alarm buzzer.


•OFF: Disables the ALARM BUZZER function.

- 2) Inactive: Select turn off Buzzer
 - a. Event (Automatic): Buzzer is turned off when the event time expire.
 - **b. Manual:** Buzzer is turned off from this menu <Control>.
- 5. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.

7.3. PTZ EVENT

When such as alarm trigger, motion detected or video loss occurs, this DVR sends preset command to PTZ camera. PTZ option must be enable and a protocol must be assigned to the camera channel.

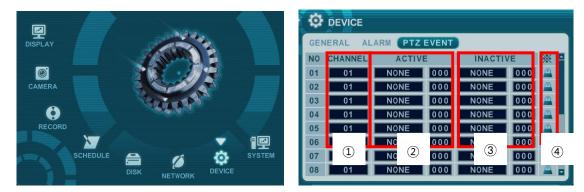

- 1. Channel: Select desired PTZ camera.
- Active: configure PTZ action [NONE → GOTO → TOUR] and Preset number or Tour group when event detected.
- 3. Inactive: Select Camera position after event duration expires.
- 4. Event Edit. 🗂

Press [enter] to edit multiple event. The menus are displayed with options on the lefthand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [^T] on IR remote or front panel.

ALARM IN	
	9 10 11 12 13 14 15 16
MOTION	1 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
VLOSS	1 1 2 3 4 5 6 7 6 7 6 7 6 9 10 11 12 13 14 14 15 16
SYSTEM	

<Note> Do not set up Motion detection on PTZ camera for PTZ event. The signal will be looping

5. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.

8. SYSTEM

8.1. GENERAL



- 1. **Control ID:** Each DVR that is preconfigured with the control ID is enabled to respond to and be operated by the remote control.
- To select the DVR to be controlled with the remote controller, press and hold the DVR ID button. While holding the DVR ID button, press the appropriate DVR ID number.
 For example, enter 05 for DVR ID 05, enter 43 for DVR ID 43, and such. Set the ID of IR controller on "00" to control DVRs at the same time, whatever DVR ID is.
- 2. **DVR Name :** Type the DVR name to distinguish location when you have several DVRs on Network.
- 3. **KEY TONE :** By default, the DVR emits a beep every time a button is pressed. Set the key tone to off to turn button beep off. Default by "ON"

4. PB DEINTERLACE

- ON: Reducing image flickering but less picture quality.
- OFF: Better picture quality for still image but having flicker for moving picture.
- AUTO LOGOUT : You can configure the DVR to automatically log out users. Default by "OFF".

[OFF \rightarrow 1 Minute \rightarrow 3 Minute \rightarrow 5 Minute \rightarrow 10 Minute]

- 6. **S.M.A.R.T. CHEK** : Turn ON or OFF to display HDD information in SMART STATUS tab of DISK menu.
- 7. **KEY SENSITIVITY :** The sensitivity of touch buttons on front panel can be controlled in this setting.

8.2. TIME

Make sure to set up your Date and Time prior to start Recording.

	SYSTEM
DISPLAY	GENERAL TIME ACCOUNT UPDATE INFO
	TIME ZONE GMT+09:00 (STANDARD)
	DATE FORMAT YYYY/MM/DD
CAMERA	NTP SYNC O OFF
	NTP SERVER
	NTP TEST START
RECORD	DATE 2011/03/11 (YYYY/MM/DD)
	TIME 04:38:59 (HH:MM:SS)
DISK DEVICE	
DISK NETWORK DEVICE	

- Use Left/Right buttons [♣] to select on TAP menu "Time". The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [▲▼▲▶]. Press [-, +] button to change the values.
- 1) Time Zone : Refer to < Appendix 1: Time Zone Chart>

Selects the time zone in which the DVR is located. Time Zone contains DST (Daylight Saving Time) On. If you choose Time Zone with DST, there is no change in the system time stamp for recorded data. When the Daylight saving End date and time occur, the DVR's time goes back one hour.

- 2) Date Format: Select Date display format.
 [MM/DD/YYYY → DD/MM/YYYY → YYYY/MM/DD]
- **3) NTP SYNC:** The internal time of DVR can be synchronized with an external time source using NTP (Network Time Server) Configuration. If the NTP option is ON, the DATE and Time option is inactivated.
- A) NTP Server: Allow you to use a public or private NTP server. Enter the IP address of sever or domain. The default setting is public "pool.ntp.org".
 <Note> Time Sync. Interval : Min 64 sec. Max 1024 sec.
- 5) NTP TEST : Test whether NTP Server works or fail.
- 6) Date & Time : Set current time and date.

2.. Save changes and exit the menu, press [MENU] button.

Exit the menu without making changes, press [CANCEL] button.

8.3. ACCOUNT



- Use Left/Right buttons [♣] to select on TAP menu "Account". The menus are displayed with options on the left-hand column and settings in the right hand column. A cursor (highlighted menu) can be moved using the Direction buttons [▲▼◀▶]. Press [-, +] button to change the values.
 - 1) **User/Name**: DVR comes preconfigured with ADMIN. Select User 1~5, and then activate it by **on**.
 - a. Name Length: up to 10 characters.
 - b. Characters: A to Z, numerals 0 to 9.
 - Privilege: Admin can define each user's Privilege such as [PLAYBACK, PTZ CONTROL, BACKUP, CONFIGURATION (except for Disk and System), RECORD STOP, and SYSTEM SHUTDOWN]



- Network: DVR comes preconfigured with System password to Network access for Admin and Deny for User. It is possible to create different password for Network access choose by [Custom P/W].
 - a. Password Length: up to 14characters.
 - b. Characters: A to Z, numerals 0 to 9.

4) Channel

Allow each user for different live monitoring.

5) Password


Enter the 6 numbers for the new password, and then re-enter the same password under COMFIRM section. The asterisk is displayed for each character entered.

Save changes and exit the menu, press [MENU] button.
 Exit the menu without making changes, press [CANCEL] button.

8.4. UPDATE



1. Download the latest firmware file and copy to USB Flash memory stick in the **Root** directory.

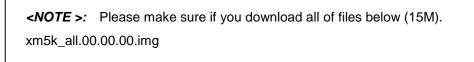

Connect or insult into Front USB. (If you are under recording, please stop the recording)
 Using direction button to move [Start] button. Press [+] button to find upgrade file. If the DVR find a valid update file, update menu is activated.

GENERAL TIME	ACCOUNT UPDATE INFO
UPDATE	NONE
	START SCANNING FIRST
MCU VERSION	XM5K-MCU-0.0.3.4
BIOS VERSION	XM5K-UBT-0.0.5.8
LINUX VERSION	XM5K-LNX-0.0.6.6
APP VERSION	XM5K-APP-0.1.1.17

4. Press [-, +] button to find proper upgrade file, Version information is displayed. If there are several valid update files, please check the display for changing.

SYSTER	M					
GENERAL TIME	ACCOUNT UPDATE INFO					
UPDATE	XM5K_ALL_12.11.07.11.IMG					
MCU VERSION	XM5K-MCU-0.0.3.4 → 0.0.3.4					
BIOS VERSION	XM5K-UBT-0.0.5.8 → 0.0.5.8					
LINUX VERSION	XM5K-LNX-0.0.6.6 → 0.0.6.6					
APP VERSION	XM5K-APP-0.1.1.17 → 0.1.1.17					

5. Using direction button to move [Start] button then press [+] button to start update While it's updating, "in progress" message is displayed.

6. After the update process is complete, "Success" message is displayed. Press [+] button to restart. The DVR issues a single beep, if Micom update included.

NOTE1: Do not switch OFF or PRESS any key during the update process. *NOTE2.* Please consult with your installer or seller before update DVR.

8.5. INFO

System information contains brief model information, Mac address and installed HDD status.

GENERAL TIME	ACCOUNT UPDATE INFO	GENERAL TIME	ACCOUNT UPDATE INFO		
MODEL BRIEF	H.264 PR0 16CH MINI	INTERNAL	250G		
HOSTNAME	G576876	USB FRONT	3.98G		
MAC	00:02:F1:57:68:76	USB REAR			
LANGUAGE	ENGLISH				
NETWORK	192.168.7.12:7000				
RECORD DISK	OM				
DISK SUMMARY	0 STREAM, 0 MIRROR				
SYSTEM HEALTH	TEMP: GOOD VOLT: GOOD				

Press info button on the remote control or front panel. The system information is displayed. Using Direction button to move next page.

VII. PAN/TILT ZOOM CONTROL

PTZ control is available for supported third-party dome cameras. The PTZ option must be configured for each camera channel. For PTZ setup, refer to Camera Menu> *PTZ setup*.

The layout of the PTZ interface conforms to the layout of the front of the DVR or the remote controller. Menu button is the guide anchor position for all other buttons. When in PTZ interface mode, all buttons used for the PTZ related operation.

1. P.T.Z. Menu

- 1) To activate the Pan/Tilt Control, select the full screen display of the camera you wish to control.
- 2) Then press the **[P/T/Z/FOCUS]** button. Shortcut Menu box pops up, as shown below.



<**Note** > Please Refer to **Help Menu** for specific control.

INDICATOR	ACTIONS
	Press this button to display "HELP" Menu. Press [ENTER] Button again, or [CANCEL] button to cancel Help Menu.
[ENTER] [CANCEL]	CUSTOM 1 COLUCTOM 2 CUSTOM 3 CUSTOM 1 COLUCTOM 2 CUSTOM 3 CUSTOM 2 CUSTOM 2 CUSTOM 2 CUSTOM 3 CUSTOM 3 CUSTOM 3 CUSTOM 2 CUSTOM 3 CUSTOM 3
	Press this button to cancel "PAN/TITL" Operation.
(MENU) Button	PTZ camera control interface will be extended to use whole function. Press this button again to make short-cut menu.
	To Tilt up and Down.To pan Right and Left.
	• Zooming In and Out.

1.1 How to control PTZ by mouse

User can control PTZ camera by mouse controller. It follows mouse cursor instead of using direction button to move.

1) Press PTZ button on the virtual remote controller.



- 2) PTZ menu and control box is displayed like below picture.
- 3) Place the mouse cursor inside of rectangle boundary and move the mouse cursor while pressing left mouse button to the direction you want.

Note. Mouse cursor cannot get out of this rectangle while pressing left mouse button.



4) Press menu button to have the virtual PTZ controller. Zoom in/out,Go to, Tour and other function can be controlled by using the virtual PTZ controller.



5) To escape from PTZ mode, press ESC button on PTZ controller. Or click (right button) the outside of control box to have the vitrtual remote controller. Then cleck ESC button.



2. Preset & Tour

Button	Function
	Set preset position; SPOT OUT on remote controller
	Move the PTZ into desired location.
(3-2)	Press the Preset button.
	Custom 1 will illuminate.
	Set the # for the Preset location.
	Press Enter to save and exit.
	Go to preset position; INFO on remote controller
(\mathcal{P})	Press Go to button.
<u> </u>	Enter the desired Preset # and press Enter.
	Start Auto Tour; BACKUP on remote controller
	Press Auto Tour Button.
	Press the + button and enter the range of Preset and press Enter.

2.1 Tour Group

A preset Tour Group allows a camera to move through a programmed sequence of PTZ presets.

DTZ S	ETUP (CH 1)		
ID	01		
MODEL	PELCO, D		1
BAUD RATE	9600 BPS		
TOUR	GROUP 1		2
GROUP LIST	1) PRESET 1~3, 2 SEC		
PRESET NO.	001 START ~ 003 STOP	1	3
DWELL TIME	02 SEC		
CHANGE	INSERT MODIFY REMOVE		
		Ľ,	

1) Communication settings.

: Configure appropriate model and then enter the corresponding baud rate, PTZ ID(address). Please refer to the PTZ manufacture's instruction manual for proper jumper settings to match the protocols to the DVR.

- 2) Tour: There are 4 programmable Tours. Using the [-, +] button to change the values
 [Group 1→ Group 2 → Group 3 → Group 4]
- 3) This is sub menu of each Tour group. The menus are displayed with options on the left-hand column and settings in the right hand column.
 - a. Group List: Each Tour Group consists of up to 10 preset position.
 - b. **Preset no**. : Enter the start preset no and stop preset.
 - c. **Dwell Time**: Set the pause between end of current preset and the start of the next preset.
 - d. **Change:** Add, modify or clear the Tour list using this option.
 - f. Repeat the procedure in *step b* to **d** to add Tour list.

3. Custom Functions


Button	Function
2	PTZ custom function 1; DISPLAY on remote controller
	PTZ custom function 2; ZOOM on remote controller
	PTZ custom function 3; P/T/Z on remote controller

4.Auto Pan / Auto Tilt / Power

Button	Function								
\odot	Auto Pan; STOP on remote controller								
	Auto Tilt; REW on remote controller								
٢	Power on / off; FF on remote controller								

6 . PTZ Camera Model – PAN/TILT/ZOOM Camera List

											Esc/
#	Model Name	3X	Speed	Preset	Go to	Tour	A. Pan	A.Tilt	Pat	Me	Enter
1	PELCO, D	0	0	0	0	о	0		0	0	
2	RVT, EZ Protocol	ο	ο	0	0	ο			0	0	0
3	PELCO, P	0	0	0	0	0	0		0	0	
4	Hitron, Fastrax 2	0	0	0	0	0			0	0	0
5	Bosch, Auto Dome										
6	MERIT LINLIN										
7	APPROMEDIA										
8	LG,MULTIXE CAM/DOME										
9	BBV,PROTOCOL V2										

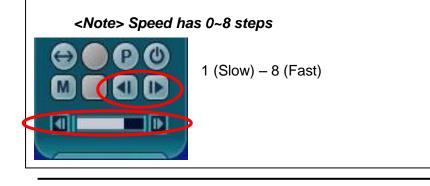

VIII.PLAYBACK /SEARCH

The DVR supports 2 playback mode; playback and Search. The DVR offers a variety of search functions that enables you to quickly and efficiently locate and review a specific period from the database. It supports three different search modes: Date/Time, Event, Event Area, and Log search.

1. Playback

When the [PLAY] button is pressed, the DVR starts to play back any recorded data from the latest data, whether in live or recording mode. When the DVR reaches the end of the recorded data, it will stop the playback.

During the playback, the DVR may be played back in reverse, paused, speed search up to 16 times the normal speed, or move picture by picture.

2. Time Search

2.1 Multi Channel Playback

Press the
 Time Search] button to access the time search table. Day will be displayed. The data are color-coded by category: EVENT(Red) > Normal (Yellow)


Day, Hour, Mi		CONTINUOUS	EVENT	
Day, Hour, Mi	4			
Day, Hour, Mi				
Day, Hour, Mi	14			
Day, Hour, Mi				
Day, Hour, Mi	1.000			Channel
Day, Hour, Mi	4			
1 2 3 4 5 5 7 8 8 40414213144515474840202422232425262728203031	2			
1 2 3 4 5 5 7 8 B 4941424134454547484920242223425262728293031	PAY			
		1 2 3 4 5 6 7 8 9 10111213	14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31	📘 📃 📐 Day, Hour, Mii
	ATE	27/02/2000	EVENT OF LEAT	

- Use [+] button to navigate to the desired Day→Hour→Minute (5min) →Minute (1min). Use [-] button to go back Minute(1min) →Minute(5min) →Hour→Day. Using mouse, wheel is used for [+/-] button.
 <note> Use [Play] button to move at the end of data Use [Rewind] or [Fast-forward] button to move next page.
- 3. To review all channels, press **[ENTER]** button at the slot from the bar. Using mouse, double click.
- 4. The DVR will start the playback mode, displaying all 16 channels. Any channel number or the DISPLAY button may be pressed to change the display mode.

2.2 Preview Search (Single Channel Playback)

The DVR allows you to quickly review a single channel of playback over a period of Day, Hour, and Minute.

1. Press the (Time Search] button to access the time search table. Day will be displayed.

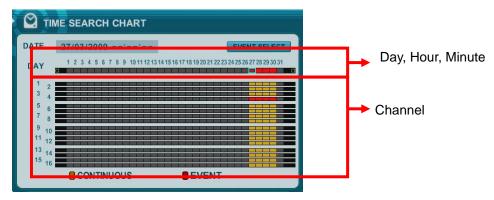

2. Choose the desired channel to review pressing by numeric button.

🖾 TIN	NE SEARC	H CHART(CH 1)		
DATE	31/03/200	9 11:00:00		EVE	NT SELECT
MINUTE	0:00	1:00	2:00	3:00	4:00
11:00:0	0 11:00:0	2 11:00:05		11:00:10	11:00:12
x. a to the state	A strong			יאר אב המנסירה איב אב	11 x / 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1
11:00:1	5 11:00:1	7 11:00:20	11:00:22	11:00:25	11:00:27

- Use [+] button to navigate to the desired Day→Hour→Minute (5min) →Minute (1min).
 Use [-] button to go back Minute (1min) →Minute (5min) →Hour→Day.
 Using mouse, wheel is used for [+/-] button.
- 4. While it's reviewing snapshot, use numeric buttons to review other channel.
- 5. Use the directional button to select snapshot and, press [ENTER] button. Using mouse, double click.
- 6. The DVR will start the playback mode, displaying selected channel. Any channel number or the DISPLAY button may be pressed to change the display mode.

2.3 Event Record Search

Event Record search feature allows you to search for recorded video by event. The time search table displays time events. As a default, TIME SEARCH CHART displays CONTINUOUS recording (Yellow) and EVENT recording (Red). TIME SEARCH CHART will display the different outcome according to the SEARCH MODE below.

🖾 TIN	NE SEARCH CHAI	RT	
DATE	28/03/2009:-	-: EVE	ENT SELECT
DAY		Event Recording Data	
5 6 7 8			
⁹ 10 ¹¹ 12 ¹³ 14		Contiuous Recording Data	
¹⁵ 16		EVENT	

1. Press "Event Select " button to change search mode.

🖾 ті	E SEARCH CHART
DATE	28/03/2009:: EVENT SELECT
DAY	1 2 3 4 5 6 7 8 9 1011 1213 1415 1617 1819 2021 2223 2425 2627 2829 3031
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	
	CONTINUOUS

2. Press [Enter] to set up. Press [+/-] button to select "event record". It's set by default.

SEARCH MODE		MOTION AREA	CH 1
EVENT RE	CORD 🗄		
EVENT STATUS	a		12 74
ALARM	2		
MOTION	4		EN ALL
VLOSS	OFF		des e solen
SYSTEM	OFF		

 Press [+/-] button to select "SEARCH MODE "(Event source /Motion Area). By selecting Search Mode, TIME SEARCH CHART will display the different outcome.

<Note> : EVENT RECORD is set by default and it makes TIME SEARCH CHART display EVENT recording in Red as above FIGURE 1.

2.4 Event Source Search

Event source search feature allows you to search the recording data in events of ALRAM, MOTION and VLOSS triggered on DVR previously.

Press [+/-] button to select "event source" in searh mode.
 And select event source (Alarm, Motion, Vloss) which you want to search.



- 1) ALARAM : Select alarm input 1~16.
- 2) MOTION : Select the channel 1~16.
- 3) VLOSS (Video loss) : Select the channel 1~16.
- 4) SYSTEM : Inactivated

2. User can can have multiple selections by pressing

icon as below.

EVE	ENT EDIT (SEARCH)
ALARM IN	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
MOTION	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
VLOSS	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
SYSTEM	
DESCRIPTION	ALARM INPUT 1

Example)

1. If you select MOTION 1 and press MENU button on the remote controller, TIME SEARCH CHART will display the recording data in red at the time of motion triggered on channel #1. The other recording data will turn in yellow. So users can easily search the recording data and playback to see what happened when motion was triggered on channel #1.

TIME SEARCH CHART
DATE 28/03/2009::- EVENT SELECT
DAY 1 2 3 4 5 6 7 8 9 1011121314151617181920212232425262728293031
9 10 11 12

2. If you select ALARM 1 and press MENU button on the remote controller, TIME SEARCH CHART will display the recording data in red at the time of alarm 1 input triggered. The other recording data will turn in yellow. So users can easily search the recording data and playback to see what happened when alarm 1 was triggered.

			DATE	28/03/2009::	EVENT	T SELECT
TIME SEARCH	SETUP		DAY	1 2 3 4 5 6 7 8 9 10111213	14 15 16 17 18 19 20 21 22 23 24 25 26 27	28 29 30 31
SEARCH MODE	MOTION ARE	A CH 1				
EVENT SOURCE	- 👰 🗖		5 6 7 8			
ALARM - 1	.		9 10 11 12			
VLOSS OFF			¹³ 14 15 16			
SYSTEM OFF				CONTINUOUS	EVENT	

2.5 Motion Area Search (Single Channel Playback)

The DVR searches for recorded video the matches the search area defined by selected cell.

1. Select "MOTION AREA" (Single channel playback) to search the recording data that has motion in a specific area in a certain channel.

		In succession of the local division of the l	
SEARCH MODE		MOTION	N AREA CI
MOTION A	REA 🚦		
EVENT STATUS			
ALARM	OFF		
MOTION	1		
VLOSS	OFF		
SYSTEM	OFF		

- 2. By pressing [+/-] button, select the channel you want to search.
- 3. Select motion area you want to search.
 - 💽 : Select All. Press [Enter] to select.
 - 📝 : Clear All. Press [Enter] to select.
 - 📉 : Select specific. Press [Enter] to select.

SEARCH MODE		MOTION /	AREA	СН	1
MOTION A	REA				
EVENT STATUS	a				
ALARM	OFF				
MOTION	1				-
VLOSS	OFE	02	1		

4. Press MENU button, then TIME SEARCH CHART will display the recording data in red to see what happened in that channel.

	IE SEARCH CHART	a a a	
DATE	28/03/2009::	EVENT SELECT	T
DAY	1 2 3 4 5 6 7 8 9 10111213	14 15 16 17 18 19 20 21 22 23 24 <mark>25 26 27 26 25 56 5</mark> 1	
1 2			
³ 4 ⁵ 6			
⁷ 8 ⁹ 10			
11 12 13 14			
¹³ 14 15 16			
	CONTINUOUS	EVENT	

3.Go to Search

IN	IPUT 26/10	/2009 00:00	
В	EGIN	17/10/2009 21:51:16	in the second
E	END	26/10/2009 13:56:08	

- 1. Press [Time Search] button for 2 seconds. Then [Time Input] menu will pop up.
- 2. Set the date and time you wish to search.
- 3. Press [enter] or Menu to start search.

4.Log List Search

The logs can be used to search and review directly to a point in time of the recorded data. Alarm, motion, video loss and system related logs can be searched and played back directly from the time of the incident.

1. To start Event Search, press [Log] button on IR Remote, then Log List Menu pops up, as shown below.

📈 LOG				
ALL SYSTEM NETWORK EVENT VLOSS				
DATE	TIME	MESSAGE	PAGE-1	
31/03/2009	11:14:22	USER LOGIN (ADMI	N)	
31/03/2009	11:13:25	DISCONNECT (192.	168.7.25)	
31/03/2009	11:13:00	SNAPSHOT (192.16	8.7.25)	
31/03/2009	11:13:00	CONNECT (192.168	.7.25 ADMIN)	
31/03/2009	11:11:16	USER LOGIN (ADMI	N)	
31/03/2009	11:07:34	DISCONNECT (192.	168.7.25)	
31/03/2009	11:07:09	SNAPSHOT (192.16	8.7.25)	
31/03/2009	11:07:09	CONNECT (192.168	.7.25 ADMIN)	

MENU TAP	CONDITION
ALL	 It has a list of all the events since the initial power on procedure of DVR
SYSTEM	It shows All System List.
NETWORK	It shows NETWORK List.
EVENT	• It shows All Event except for Alarm, Motion, Video Loss and System.
VIDEO LOSS	It shows Video Loss List.

- 2. Use Up/Down buttons [▼▲] to desired "Time" to playback. Use Left/Right buttons [◀▶] to move NEXT page.
- 3. Press [ENTER] button to start playback.

<Note> Log list is saved on HDD. 6 icon means that there is more information in detail. LOG ALL SYSTEM NETWORK EVENT VLOSS TIME MESSAGE PAGE-2 DATE 27/10/2009 15:05:37 MANUAL BACKUP START (ADMIN) 27/10/2009 15:05:00 MANUAL BACKUP COMPLETE (ADMIN) 27/10/2009 15:04:55 MANUAL BACKUP START (ADMIN 27/10/2009 15:00:26 USER LOGIN (ADMIN) 27/10/2009 14:58:03 TIME SYNC (INTERNAL TIME) 27/10/2009 14:57:56 SYSTEM START 27/10/2009 14:57:55 USER LOGOUT (USER) 27/10/2009 14:57:23 SYSTEM STOP -Press 'info" button. The window of detail information will be popped up like below picture. LOG \bigcirc LOG INFO TIME 27/10/2009 15:05:44 MESSAGE MANUAL BACKUP START RANGE 26/10/2009 12:20:00 ~ 26/10/2009 12:25:00 USER ADMIN CHANNEL 1 2 16 27/10/2009 15:03:44 DISCONNECT (124.137.23.66 27/10/2009 15:02:47 SNAPSHOT (124.137.23.66)

IX.BACKUP

1. Manual Back up

1.1. External USB HDD / Memory Stick

1. Insert a USB device into the USB connection port on the front or rear panel

<Note> Make sure your USB device has enough space before commencing backups.

2. Press [BACKUP] button to display the backup menu.



- 3. Use [-, +] button to change device selection : USB (Front or Rear)
- 4. Use the [-, +] button to select a channel. All channels are set by default.
- 5. Please select the data for BACKUP.
 - (1) ALL Data: Normal Recording Data
 - (2) Event Only: Event Recording Data.
- 6. File format when saving is ".s".
- 7. Select the time range starting time and ending time.
- 8. Enter the numbers as required in 24-hour format, then move to **START**
- 9. Press the [+] button to start BACKUP.
 - * USB icon will be highlighted in blue during the backup.
 - If there is not enough space on your USB memory stick, the system will not proceed with backup.



- The backup progress indicator will be displayed at the bottom of the window.
- To backup as an AVI File, set the file format to AVI using the [+] button in FILE.
- 10. After backup process is finished, USB icon will be highlighted in white.

1.2. External CD/DVD –RW Backup

External CD/DVD-RW is recognized within 10 seconds after plug in UBS connection cable to UBS port in DVR.


- 1. Plug in USB connector into the USB connection port on the front or rear panel.
- 2. Press [BACKUP] button to display the backup menu.

	ВАСКИР				
MANUAL BACKUP AUTO BACKUP					
DE ¹ ICE	CD/DVD-RW (INT-C)				
CH/INNEL	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16				
SELECT	O ALL DATA O EVENT ONLY				
FILE	DEFAULT WITH MCDPLAYER				
RANGE	2010/01/02 21:59 ~ 2010/01/02 21:59				
ACTION	START READY				

The external CD/DVD-RW procedure is the same as using the USB device for backup.


• when it's full and resume the process once new media is inserted into the drive.

* The Playback software will simply "**auto-run**" and does not require any software installation on your PC.

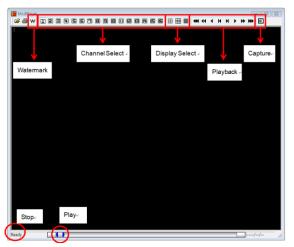

<Note> Please Refer to [LOCAL PLAYER] section to read about back-up devices.

<Note 2> When you back up as Multi-Section the Play List pops up instead of Auto Run.

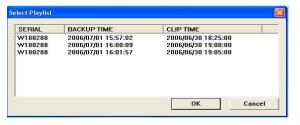

1.3 Back up Range Setup

Press [**]** button to set backup Start time , press [**]** button to set End. Selected time will be changed [Violet] Color.

DATE	27/03/2	2009 12:30:	00		EVENT SELECT
VINUTE	30:00	31:00	32:00	33:00	34:00
1 2					
5 6				2 0	
7 8					
9 10					
11 12					
13 14				2	

Selected backup time from 19:00~59 will be displayed on Backup range.

[LOG IN/OUT] button is toggled for the range.

2. Auto Back up(FTP)

1. Use [-, +] button to change select device: FTP



2. Use direction button to move FTP setup. The menus are displayed with options on the left-hand column and settings in the right hand column.

SERVER		
PORT	0021	
AUTHENTICATION	• ON	O OFF
USER ID		
PASSWORD	*******	**
CONNECTION	ACTIVE	O PASSIVE
BACKUP PATH	G2DDDDD	

ITEM	ADJUSTMENT
Server	• Select Highlight FTP Server and then press numeric buttons to define an FTP server.
Port	• Define the port that the FTP server will communicate through.
User ID	Enter the user ID of FTP Server.
Userid	(It is recognized as a small letter, even it's displayed as a Capital Letter)
Password	Enter the password.
Fassword	(It is recognized as a small letter, we do not support capital Letter)
Connection	Select PASSIVE mode or REGULAR Mode.
BACKUP	• The path should be made in FTP server in advance. Mac address is set with the
	default in consideration of the situation that lots of DVRs may backup its file to the one
PATH	FTP server.

<Note> Please Refer to [LOCAL PLAYER]/ [Mini-Player] section to read Back-up file

3. Log List Back up

- 1 . Plug in USB memory stick to USB port.
- 2 . Press "Log" button to see Log list of DVR.

LOG				
ALL SYSTEM NETWORK EVENT VLOSS				
DATE	TIME	MESSAGE	PAGE-2	
27/10/2009	15:05:37	MANUAL BACKUP S	TART (ADMIN)	
27/10/2009	15:05:00	MANUAL BACKUP C	OMPLETE (ADMIN)	
27/10/2009	15:04:55	MANUAL BACKUP S	TART (ADMIN) 🚺	
27/10/2009	15:00:26	USER LOGIN (ADMII	N)	
27/10/2009	14:58:03	TIME SYNC (INTER	NAL TIME)	
27/10/2009	14:57:56	SYSTEM START		
27/10/2009	14:57:55	USER LOGOUT (US	ER)	
27/10/2009	14:57:23	SYSTEM STOP		

- 3. Press " back up" button to save log list to USB memory stick.
 - 1) Use [-, +] button to select device.
 - 2) Slect type of log list among ALL, SYSTEM, NETWORK, EVENT and VLOSS.
 - 3) Select the time range starting time and ending time.
 - 4) Press [+] button to start BACKUP.

LOG BACKUP
■ 534M/250G ■
ALL
01/01/2009 00:00 ~ 27/10/2009 15:36
START READY

X.SPECIFICATION

Specifications	16CH			
System				
Multiple Function	Quadruplex			
Operating System	EMBEDDED LINUX			
Video Input/ Loop Out	16 IN, no out			
	Main 1 0	Composite, 1 VGA, 1 HDMI (1080P)		
Video Output	Spot 1			
Alarm In/Out(Relay)	16 IN, 1 OUT			
Audio Record	1 IN, 1 OUT			
Communication	RS-422, Et	hernet(10/100 Base-T),USB 2.0		
Power	12V , 3 A			
Display & Recording				
Compression	H.264			
Live Display Resolution	720 x 480 (NTSC) / 720 x 576 (PAL)			
Live Display Speed	Real Time			
Display Split Mode	1, 4, 6, 7, 8, 9, 10, 13, 16			
	120fps 720 x 480 (NTSC), 100fps 720 x 576 (PAL)			
Recording Speed	240fps 720 x 240 (NTSC), 200fps 720 x 288 (PAL)			
	480fps 360 x 240 (NTSC), 400fps 260 x 288 (PAL)			
Recording Mode	Continuous, Time Limit, Alarm, Motion, Schedule			
Recording Quality	Low, Middle, High, Super, Ultra			
Motion Detection	Area 8 x 8 selectable			
	Sensitivity	20 Sensitivity Levels		
Search & Playback				
Search Method	SMART Search, Date & Time, Event, Log Search			
Playback of Backup File	Mini Player (Auto copy), EMS, AVI			
Playback Speed	Multi Level (Full Frame Reverse PB supported)			
Backup & Storage				
Backup Device	USB Flash	Memory Stick, External HDD and External CD/DVD-RW		
Internal HDD& Capacity	1 Internal H	IDD		
DATA Archiving	Ethernet, R	Ethernet, Remote PC, External Recording Devices, FTP		

Time		
Time Zone	Selectable	
DST	AUTO	
Time Synchronization	Supported via NTP server	
Miscellaneous		
Controls	Mouse, IR remote, Front Key, SMS, EMS, IE	
Firmware upgrade	Via USB and network	
Operation Temperature	0°C~40°C	
Dimension / Weight	280(W)*315(D)*55(H) / 1.9 Kg	

Revised at March, 2011

Appendix 1. : Time Zone Chart

Standard Time	Time Zone
GMT+00:00	Standard
	European DST
GMT+01:00	Standard
	European DST
	Namibian DST
GMT+02:00	Standard
	Zion DST
	European DST
	Lebanese DST
	Jordanian DST
	Russian DST
	Egyptian DST
GMT+03:00	Standard
	Russian DST
GMT+03:30	Iranian DST
GMT+04:00	Standard
	Azerbaijanian DST
	Russian DST
GMT+04:30	Standard
GMT+05:00	Pakistan DST
	Russian DST
GMT+05:30	Standard
GMT+05:45	Standard
GMT+06:00	Standard
	Russian DST
GMT+06:30	Standard
GMT+07:00	Standard
	Russian DST
GMT+08:00	Standard
	Russian DST
GMT+09:00	Standard
	Russian DST
GMT+09:30	Standard
	Australian DST

GMT+10:00	Standard
	Russian DST
	Australian DST
GMT+11:00	Standard
	Russian DST
GMT+12:00	Standard
	New Zealandian DST
GMT+13:00	Standard
GMT-01:00	Standard
	European DST
GMT-02:00	Standard
GMT-03:00	Standard
	Brazilian DST
	European DST
	Uruguayan DST
GMT-04:00	Chilian DST
	US DST
GMT-04:30	Standard
GMT-05:00	Standard
	US DST
GMT-06:00	Standard
	Mexican DST
	US DST
GMT-07:00	Standard
	Mexican DST
	US DST
GMT-08:00	Standard
	Mexican DST
	US DST
GMT-09:00	Standard
	US DST
GMT-10:00	Standard
GMT-11:00	Standard

WEEE Symbol Information



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates, that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

<Memo>