Quick Installation Guide

English | 家中 | 前中 | 日本語 | Francais | English | Bethach | Forgung | Jaking | Thicks | English | Research | Casic | Seems | Cas

IP8162/62P Network Camera 2-megapixel • Full HD • Focus Assist



IP8162

DC-Iris

IP8162P

P-iris





Warning Before Installation

- Power off the Network Camera as soon as smoke or unusual odors are detected.
- Keep the Network Camera away from water. If the Network Camera becomes wet, power off immediately.




Contact your distributor in the event of occurrence.



Contact your distributor in the event of occurrence.

- Do not place the Network Camera around heat sources, such as a television or oven.
- Refer to your user's manual for the operating temperature.

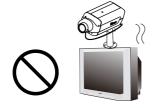





- Keep the Network Camera away from Do not place the Network Camera in direct sunlight.
- high humidity environments.





- Do not place the Network Camera on unsteady surfaces.
- Do not touch the Network Camera during a lightning storm.

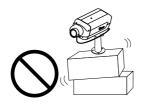

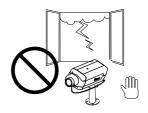

- Do not disassemble the Network Camera.
- Do not drop the Network Camera.





Do not insert sharp or tiny objects into the Network Camera.





Package Contents

IP8162/62P



Camera Stand



Quick Installation Guide



Warranty Card



Power Adapter



CS-mount Lens



Software CD




L-type Hex Key Wrench






Physical Description


Front Panel

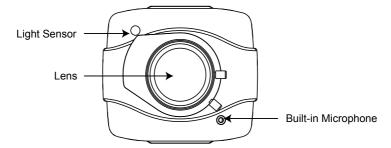

Back Panel

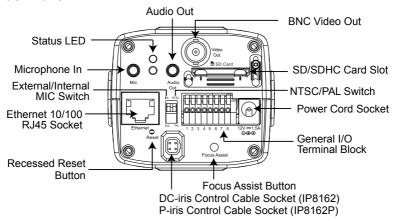

Lens

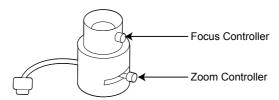


EN - 4



Mounting the Lens to the Camera

- Mount the lens by turning it clockwise onto the camera mount until it stops. If necessary, turn the lens counterclockwise slowly until it gets the best attitude.
- Connect the DC-iris control cable to the socket. (IP8162)
 Connect the P-iris control cable to the socket. (IP8162P)

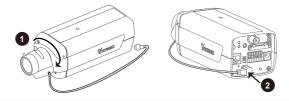


For further setup, please refer to the lens' instruction manual inside the lens package.



Network Deployment

General Connection (without PoE)


- If you have external devices such as sensors and alarms, connect them to the general I/O terminal block.
- 2. Connect the camera to a switch via Ethernet cable.
- 3. Connect the power cable from the Network Camera to a power outlet.

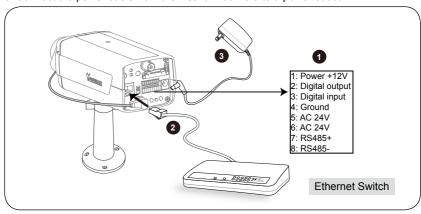

Power over Ethernet (PoE)


When using a PoE-enabled switch

The Network Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable. Follow the below illustration to connect the Network Camera to a PoE-enabled switch via Ethernet cable.

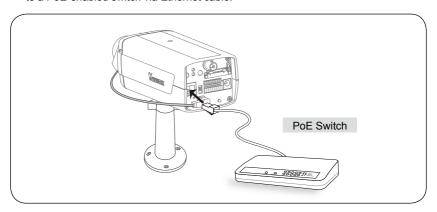

When using a non-PoE switch

Use a PoE power injector (optional) to connect between the Network Camera and a non-PoE switch.

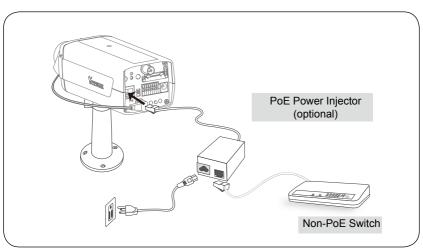




- 1. Install "Installation Wizard 2" from the Software Utility directory on the software CD.
- The program will conduct an analysis of your network environment. After your network is analyzed, please click on the "Next" button to continue the program.





- The program will search for VIVOTEK Video Receivers, Video Servers, and Network Cameras on the same LAN.
- 4. After searching, the main installer window will pop up. Click on the MAC that matches the one labeled on the bottom of your device to connect to the Network Camera via Internet Explorer.

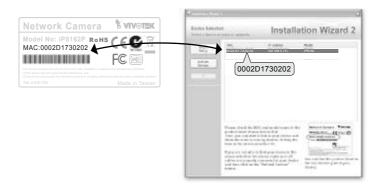



- 1. Access the Network Camera from the LAN.
- 2. Retrieve live video through a web browser or recording software.



Unscrew the zoom controller to adjust the zoom factor. Upon completion, tighten the zoom controller.


4. Unscrew the focus controller to adjust the focus range. Upon completion, tighten the focus controller.




For further setup, please refer to the user's manual on the software CD.



- 1. Detach the CS-mount lens from the camera body.
- 2. Turn the right side of the camera body up.
- Use the supplied L-type hex key wrench to loosen the lens mounting screw; the CS-mount ring becomes rotatable.
- 4. Use a coin to turn the CS-mount ring; fine-tune the distance between the sensor and the lens.
- 5. When finished, tighten the lens mounting screw to fix the CS-mount ring.
- 6. Attach the CS-mount lens back to the camera body.

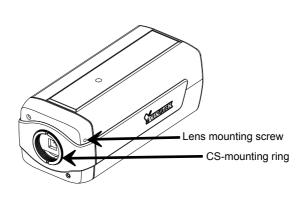



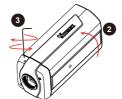



NOTE

When choosing the lens for your IP8162/62P, please notice the specifications as below.

- 1. Flange back length (distance A-B) must be longer than 12.5mm. If the flange back length is too short, the bottom of screw mount may hit the ICR, or result in out of focus when adjusting the focus controller.
- 2. The screw mount (distance A-C) must be shorter than 4.5mm; in case that the bottom of screw mount may hit the ICR.
- 3. The distance between the edge of lens (A) and front panel (D) must **NOT** be longer than 0.5mm; or, it may hit the front panel when adjusting the focus controller, or result in out of focus.

