



F210A

Firmware User Manual

F210A IP Camera

Firmware User Manual

- Contents -

CHAPTER 1. MINIMUM SYSTEM REQUIREMENT	2
CHAPTER 2. USING IP CAMERA VIA WEB BROWSER	3
CHAPTER 3. USING IP CAMERA VIA MOBILE PHONE.....	8
3.1 USING IP CAMERA VIA IPHONE.....	8
3.2 MOBILE PHONE VIEWING	9
CHAPTER 4. MSN MESSENGER.....	10
CHAPTER 5. CONFIGURATION OF MAIN MENU	15
5.1 LIVE VIEW	16
5.2 SETTING	18
5.3 CLIENT SETTING	19
5.4 IMAGE SETUP.....	20
CHAPTER 6. SETTING-BASIC.....	21
6.1 SYSTEM	22
6.2 CAMERA.....	27
6.3 NETWORK.....	33
6.4 SECURITY.....	47
CHAPTER 7. SETTING-ADVANCE	50
7.1 FTP CLIENT.....	51
7.2 SMTP	58
7.3 HTTP EVENT	67
7.4 SCHEDULE.....	72
7.5 MOTION DETECTION.....	74
7.6 SYSTEM LOG.....	76
CHAPTER 8. APPENDIX	77

Firmware User Manual

Chapter 1. Minimum System Requirement

We strongly recommend your computers follow our minimum requirements in order to use this IP-Camera normally. If computer level is lower than this, it might cause some problems.

Item	Requirements
CPU	Pentium 4 1600MHz (or equivalent AMD)
Graphic Card	64 MB RAM graphic cards(or equivalent on-board graphic cards)
RAM	512 MB
Operating System	Windows 98, Windows ME (Please see Note) Windows2000, 2003, XP, Vista, Mac OS X Leopard
Web Browser	Internet Explore 6 or later

Note:

1. If you are using Windows 98 or Windows ME, please install IP Installer before using WEB UI to ensure the system runs normally.
2. If you can't view the record video file, please install Xvid codec while installing Intelligent IP Installer. (For Windows 98, ME or 2000 server, the codec might not work properly. You'll need to download Xvid codec 1.0 from the internet.
3. Please always update the latest Windows component. (.Net Framework, Windows Media Player, Enhance ActiveX Security)

Chapter 2. Using IP Camera via Web Browser

2.1 Windows Web Browser

1. Start your web browser, and enter the IP address or host name of the IP camera in the Location / Address field of your browser.


Note :

If you only want to view the video without setting page, enter “<http://<IP>/index2.htm>” as your web URL.


2. Use the default account “admin” and default password “admin”.

Note :

The default user name “admin” and the password are set at the factory for the administrator. You can change them in the Account Menu (Please check “Setting → Basic → Security → Account”)

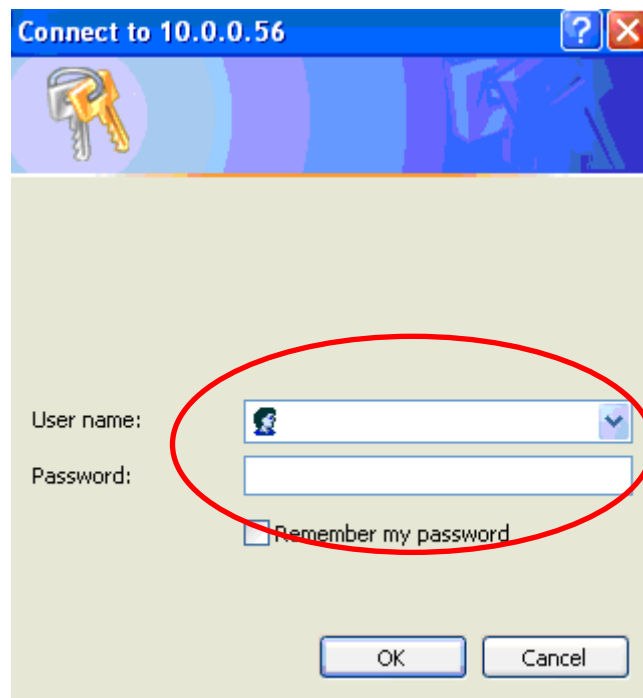

3. The monitor image will be displayed in your browser. In the far left side of main configuration are Setting, Client Setting, and Image Setup. For more details, you can check Chapter 5.2 、 Chapter 5.3 and Chapter 5.4.

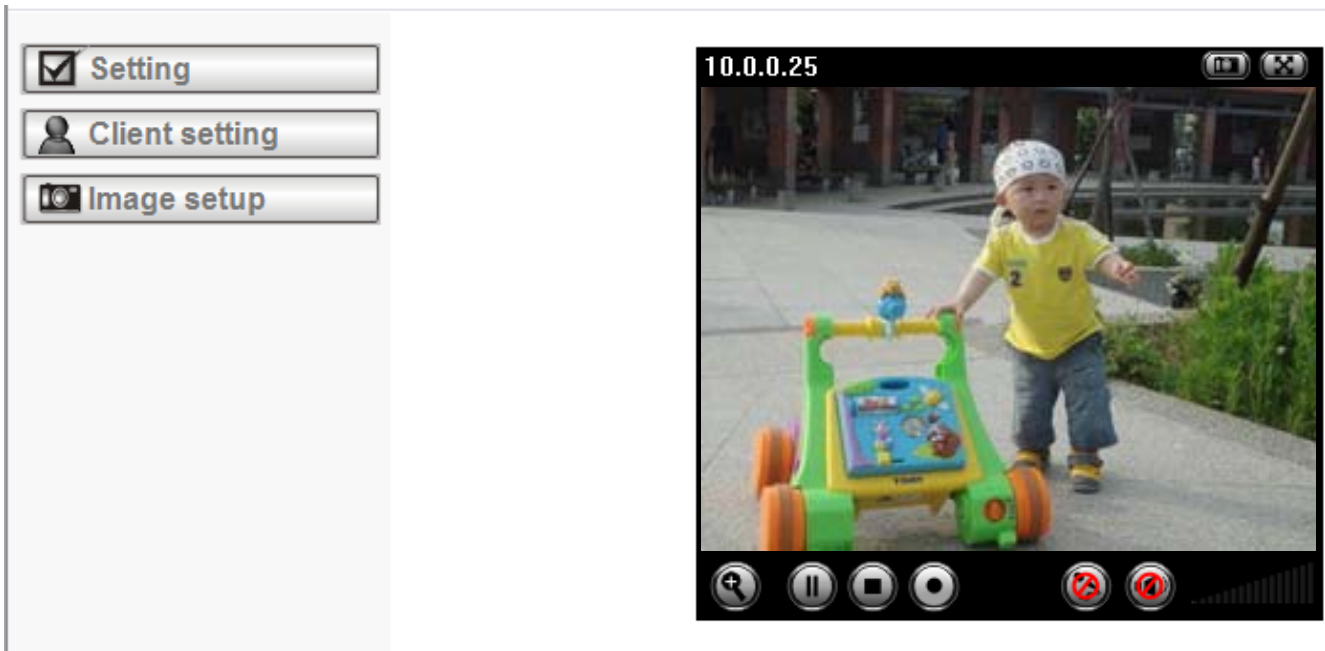


2.2 Mac Web Browser

1. Click the Safari icon, and enter the IP address of the IP camera in the Location / Address field of your browser.

Note :

If you only want to view the video without setting page, enter “<http://<IP>/index2.htm>” as your web URL.

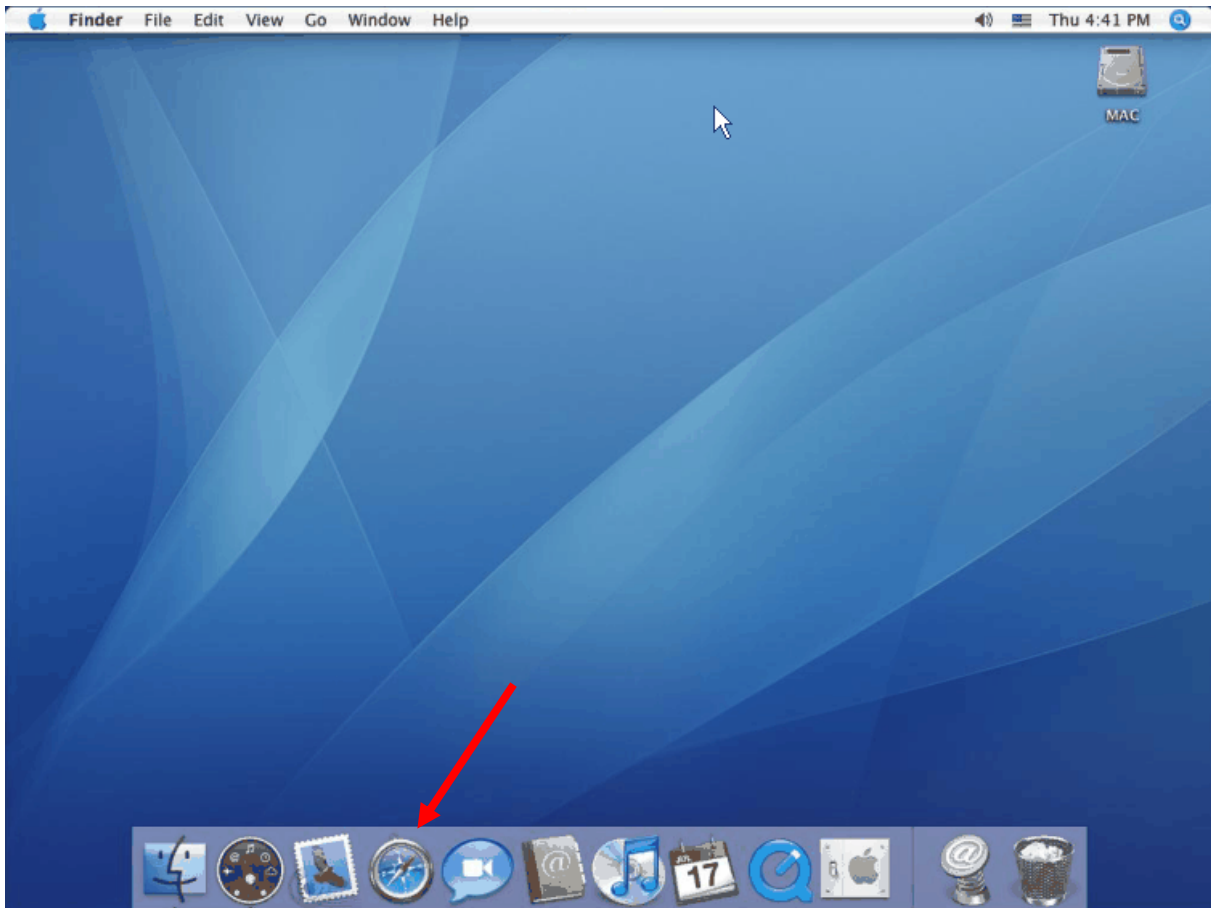


2. Use the default account “admin” and default password “admin”.

Note :

The default user name “admin” and the password are set at the factory for the administrator. You can change them in the Account Menu (Please check “Setting → Basic → Security → Account”)



3. The monitor image will be displayed in your browser. In the far left side of main configuration are Setting, Client Setting, and Image Setup. For more details, you can check Chapter 5.2 、 Chapter 5.3 and Chapter 5.4.

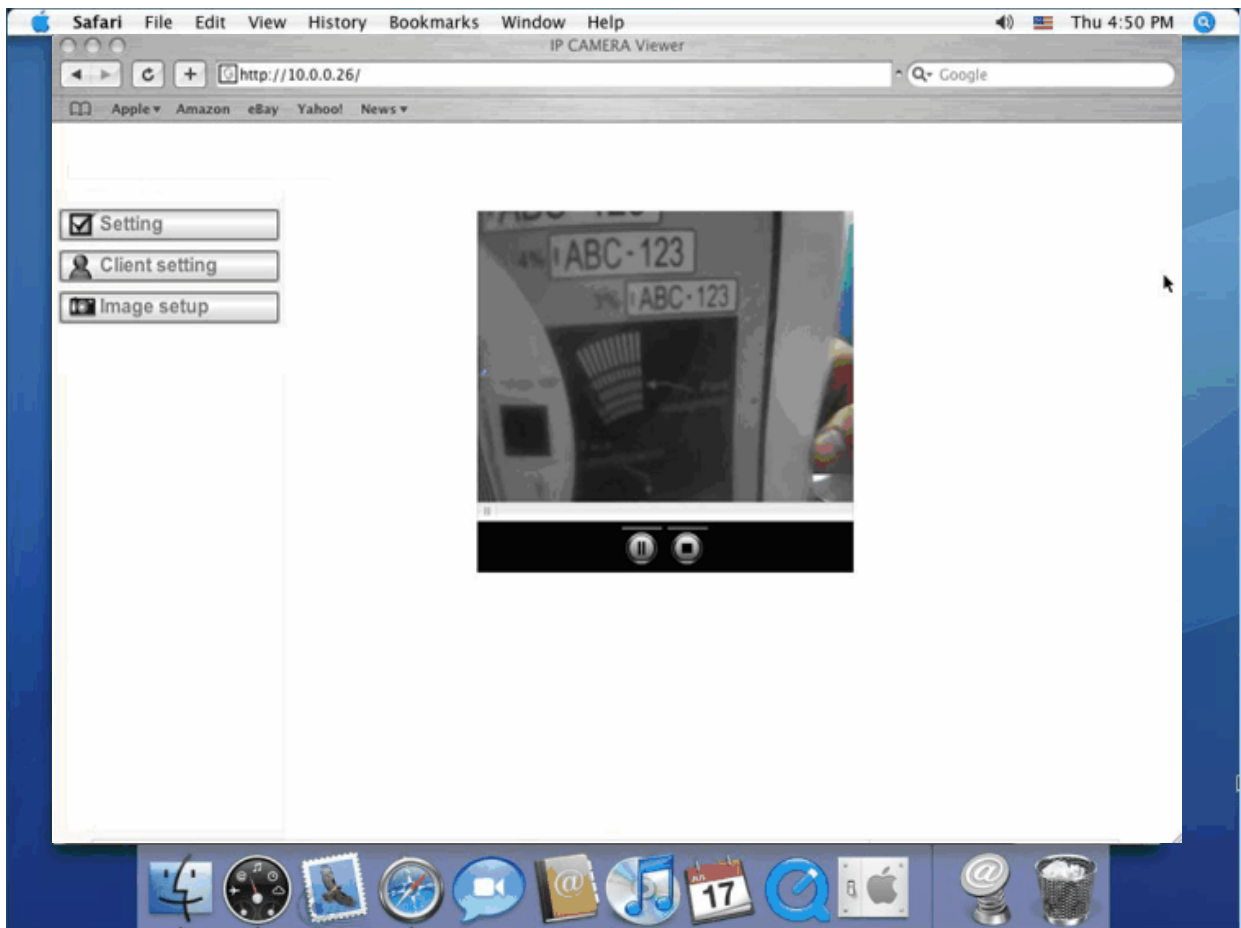

Chapter 3. Using IP Camera via Mobile Phone

3.1 Using IP Camera via iPhone


You can use Zavio Web User Interface via iPhone. Please follow the setting process below.

Then you can use Zavio web UI via iPhone.

1. Select Safari function



2. Enter IP address in your web link.

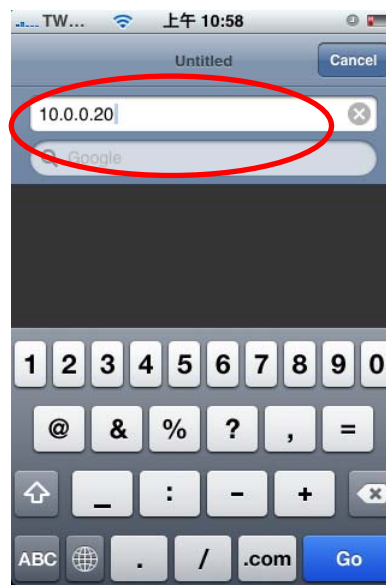

3. Type name and password.
Default value is admin / admin.
Then click Login In



4. The Zavio User Interface and live image will show up in the middle of screen.



Note: It will show continuous snapshots not a real time video streaming. Therefore, the recording feature is disabled.

3.2 Mobile Phone Viewing

To use IP cameras via mobile phones, please make sure your RTSP is set to “On” (Default is “On”). To change the settings of IP cameras, **Please check “Settings → Basic → Camera → General.”**

1. 3G Mobile Phone Streaming Viewing

For 3G mobile phone viewing, type “ **rtsp://<IP>:<PORT>/video.3gp** ” into your 3G Streaming Link. <IP> is the Public IP address of your IP camera; <PORT> is the RTSP port of your IP camera (Default value is 554.) Example: rtsp://100.10.10.1:554/video.3gp

Note: You can also use RTSP clients (RealPlayer, VLC, QuickTime Player...etc.) to view RTSP streaming, just type in “**rtsp://<IP>:<PORT>/video.3gp**” as the Player URL

2. 2.5G Mobile Phone WAP Viewing

For 2.5G mobile phone viewing, type “ **<IP>/mobile.wml** ” into your 2.5G WAP Browser. <IP> is the Public IP address of your IP camera.


3. 2.5G Mobile Phone Browser Viewing

For 2.5G mobile phone viewing, type “ **<IP>/mobile.htm** ” into your 2.5G Web Browser. <IP> is the Public IP address of your IP camera.


Chapter 4. MSN Messenger

Please see the following steps to set up the Messenger function.

1. You can download MSN software freely and create a **new MSN account (camera at home)** to use Microsoft Live Messenger.
2. Go to Setting→Basic→Network→Messenger, set the Messenger to “ON”. Then, **login in new account and password (Camera at home).**

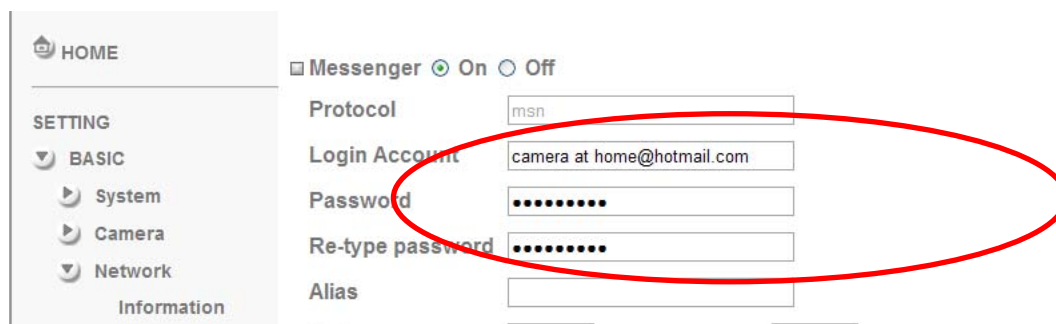


3. Choose “On” at the option of **IP Notification**. If this feature switches On, camera will send IP notification to the users who are allowed.
4. Choose “On” at the option of **Privacy**. If you can choose “On” at the privacy option, you can set an allow list.

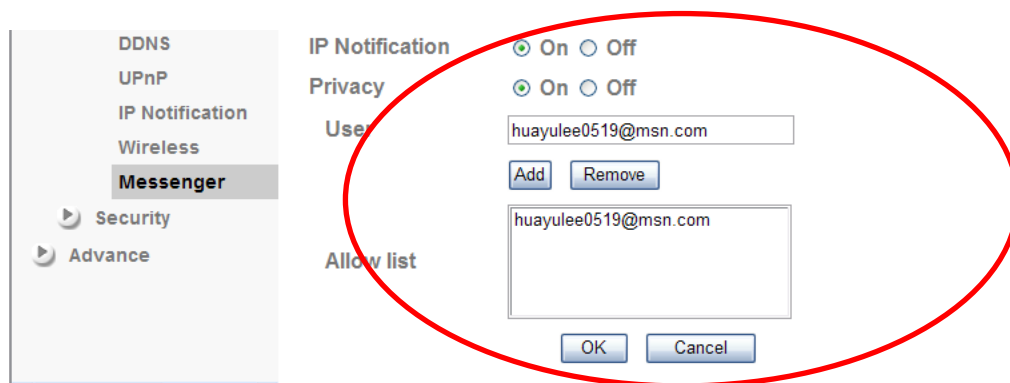

5. Use your account to login in the Messenger software. Then, add the new MSN account (**Camera at home**)


6. The Camera at home will show up with its Public IP and Private IP if the option of IP Notification is “On”. (You can enter “Ping” to show up with Public IP and Private IP.)

7. Click on the small camera icon . Then, choose “View a new contact's webcam”.


Camera at home says:

My Public IP: 122.124.4.150
URL: <http://122.124.4.150/>


Wired-Private IP: 10.0.0.45
URL: <http://10.0.0.45/>

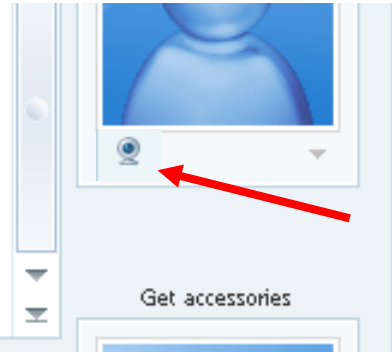


8. The IP Camera will accept your invitation; the live video will show up in the right screen after few seconds.

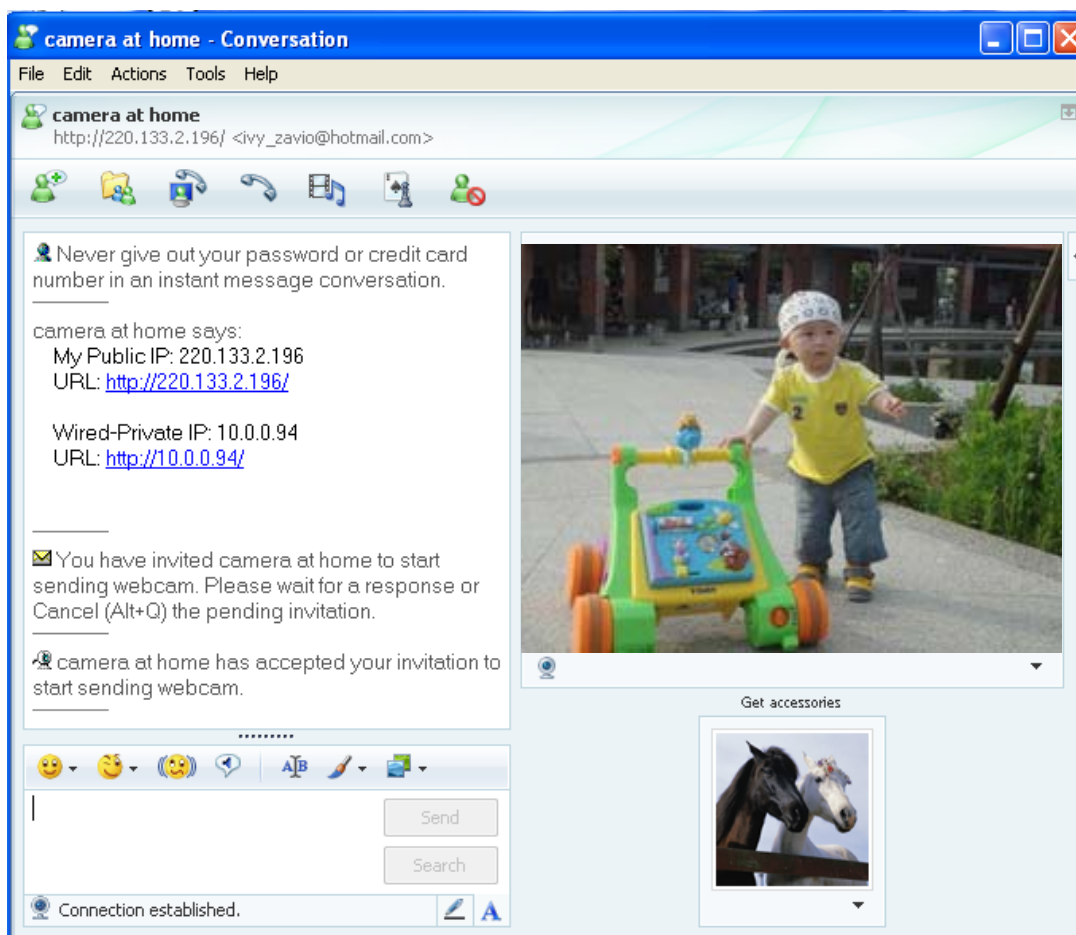


9. Click **Action** button and choose **Start control panel** to use control panel.

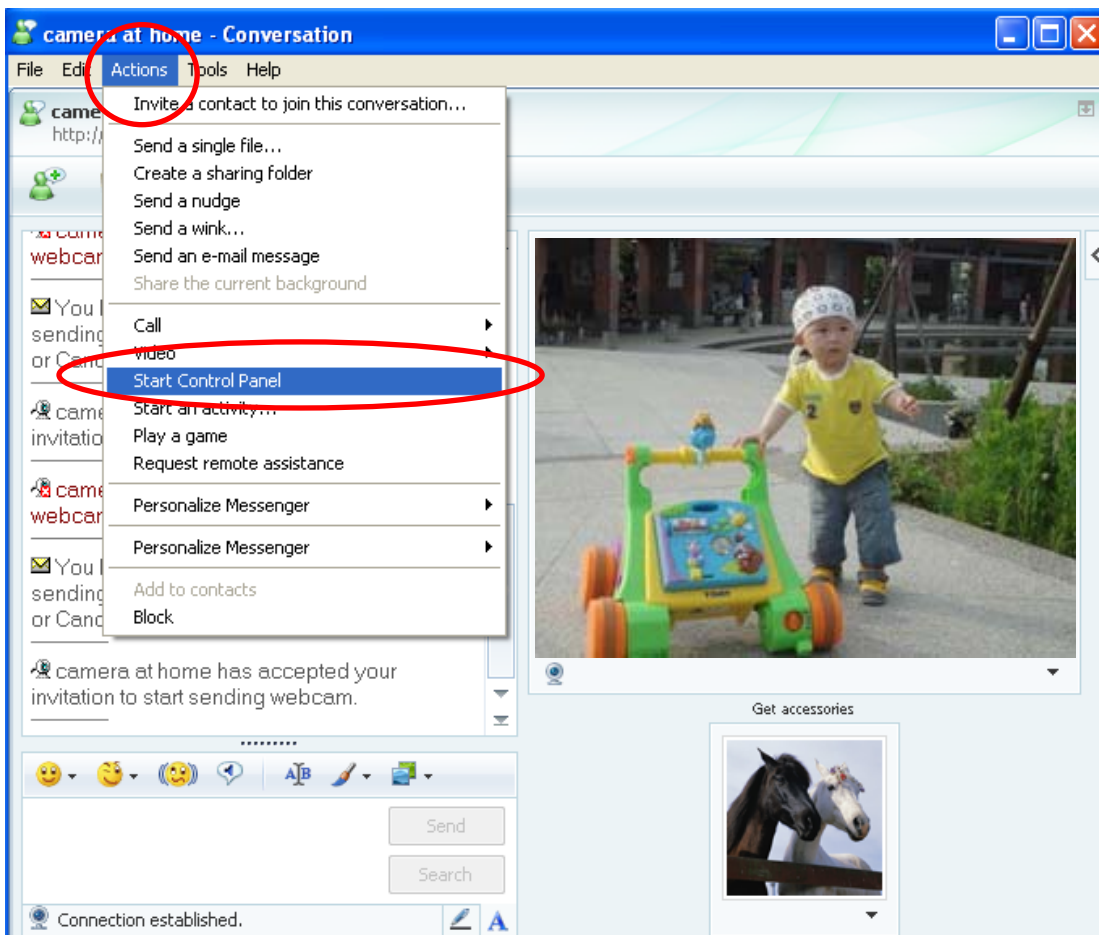


10. The dialog box will show up with “This application is not part of Windows Live Message.....”
Tick the box of “Don’t show me this again” and click **OK**

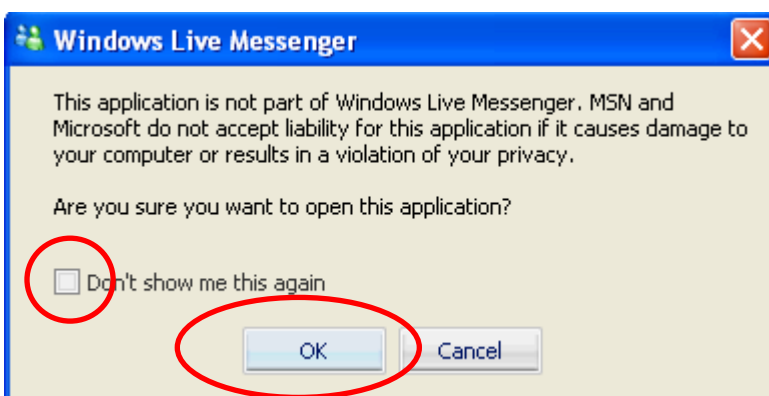


11. The IP Camera will accept your invitation to start **Control Panel**.

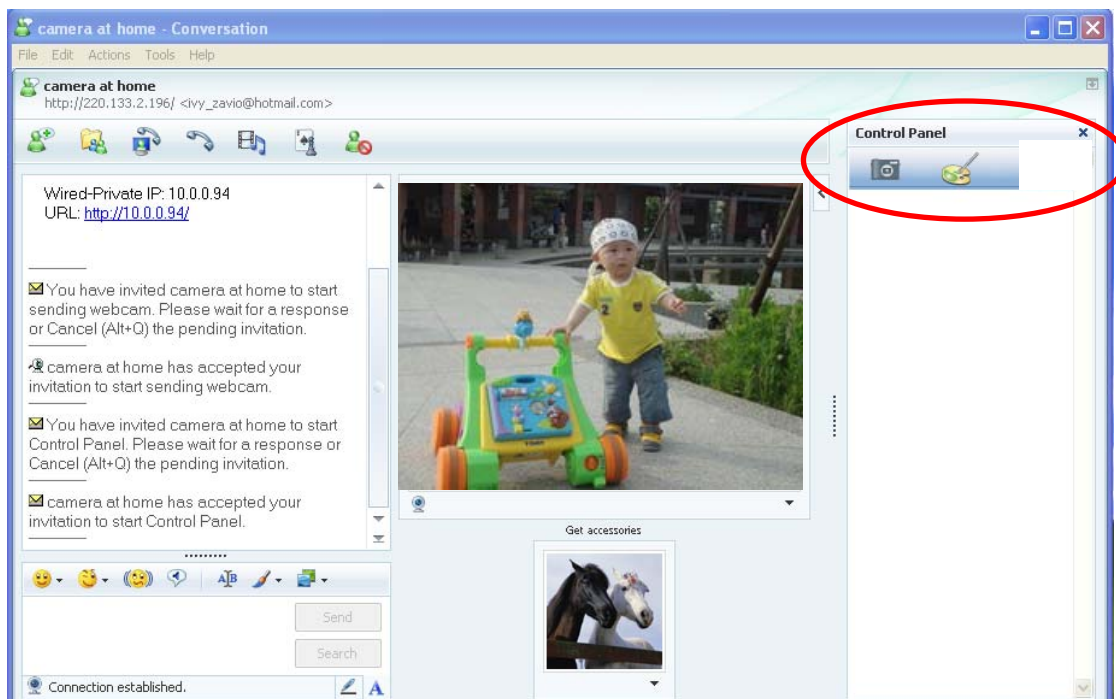

12. You can click **Camera icon**  to **snapshot** then the picture will send to you immediately.

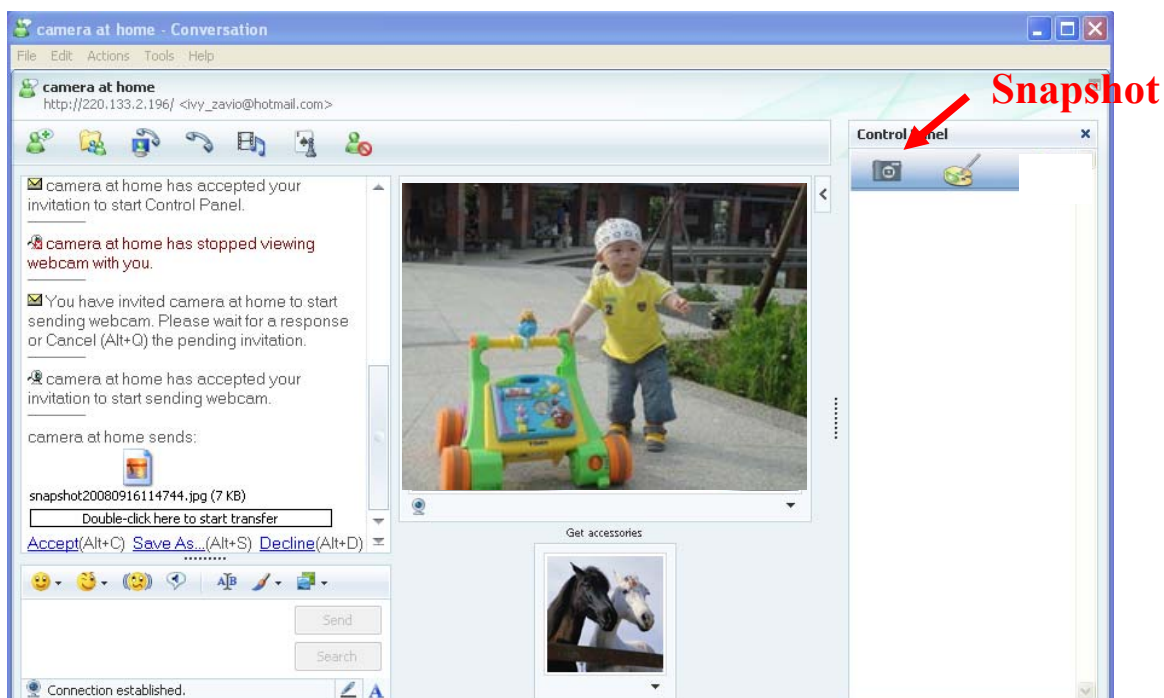

13. You can click **paint palette icon**  showing up with tool bar to set up image. Then, you can use the tool bar to optimize video **Brightness** , **Contrast** , **Saturation**  and **Hue** . After the adjustment of all setting, you can still click **Default**  to make the setting back to the original setting.

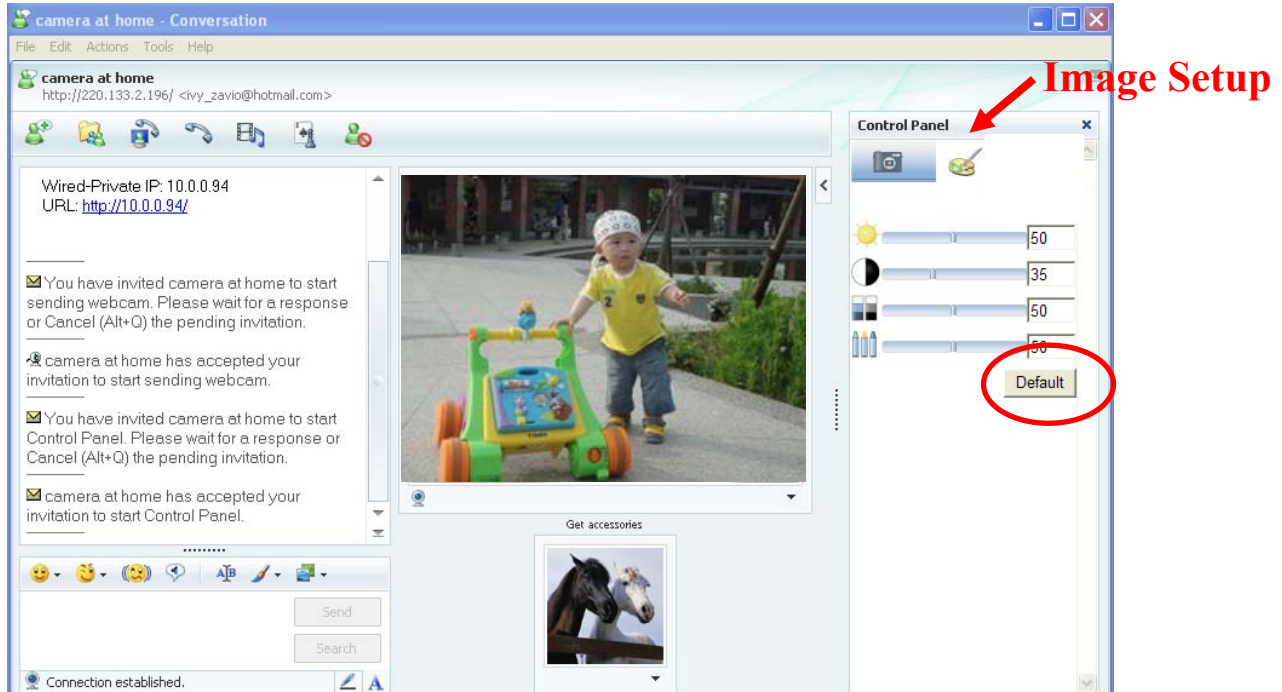

Chapter 5. Configuration of Main Menu

In the far left side of main configuration are Setting, Client Setting, Image Setup. For more details, you can check Chapter 5.2 、 Chapter 5.3 、 Chapter 5.4.





In your right hand side, you can use Live View in your main Browser. There are Snapshot, Zoom and Audio and Video Play four different function. You can see more details as follow.


5.1 Live View




A. Snapshot

B. You can capture a still image shot by the camera and save it in your computer.



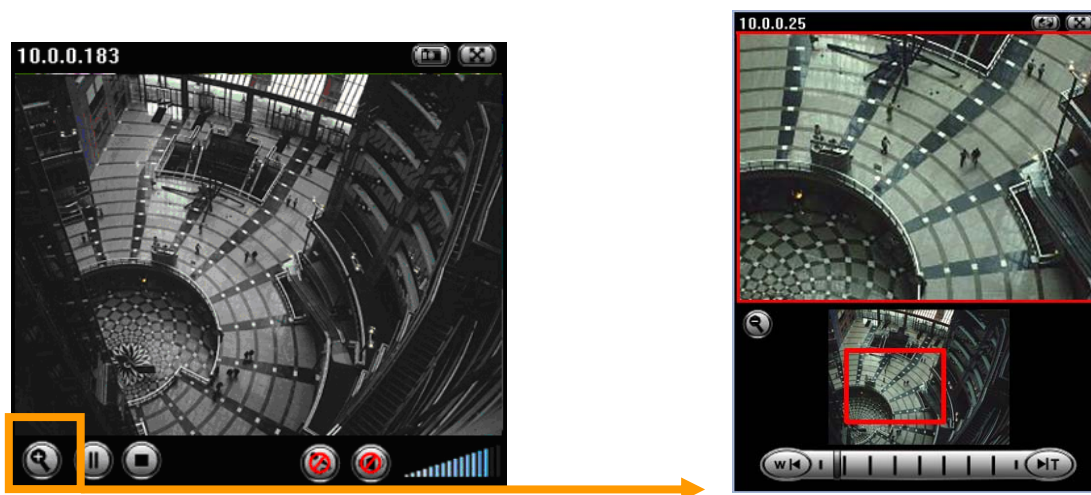

Symbols	Meaning
	a snapshot window will appear
Save	to save the picture in your computer
Close	to return to the view page
	full Screen

B. Zoom in / out the image via the monitor window



- Click  to display the digital zoom in window.
- Pull the  to adjust the digital zoom range, and it will be showed on the above window.
- You can use the left click of your mouse to move the  to any where on the window.






C. Video play buttons

Symbols	Meaning
	Pause the current video
	Play the video
	Stop the current video
	Record the current video


Note:

Concerning the recording storage requirement of your hard disk, please refer to the CHAPTER 8. APPENDIX / B. Storage Requirement Table.


D. Audio buttons

Symbols	Meaning	Note
	Speakers turned on	mean the speakers of your computer are turned on to transmit the sounds from the connected IP camera(s)
	Speakers turned off	
	Microphone turned on	mean you can broadcast to the connected IP camera(s) via the Ethernet using your microphone
	Microphone turned off	
	Volume control bar	

5.2 Setting



This function is only for the Administrator. Click this button to get into the **Basic** and **Advance settings** menu.

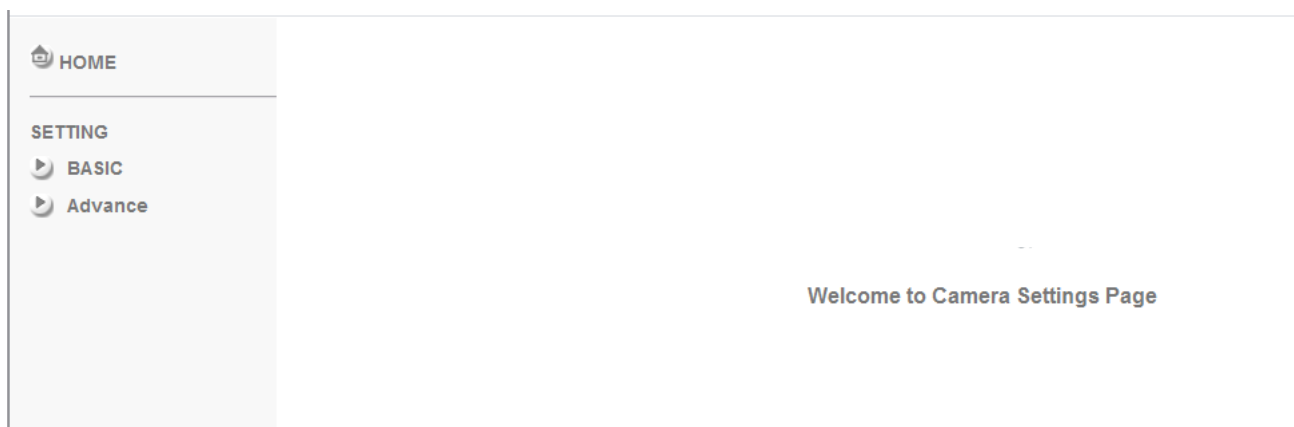


Click **Basic** folder, there are four sub-folders including **System**, **Camera**, **Network**, and **Security**. Fore more information, you can see **Chapter 6.1** 、 **Chapter 6.2** 、 **Chapter 6.3** and **Chapter 6.4**.

Click **Advance** folder, there are four sub-folders including **FTP Client**, **SMTP**, **HTTP event**, **Schedule**, **Motion Detection**, and **System Log**. Fore more information, you can see **Chapter 7.1** 、 **Chapter 7.2** 、 **Chapter 7.3** 、 **Chapter 7.4** 、 **Chapter 7.5** and **Chapter 7.6**.

5.3 Client Setting



This function is only for the client.

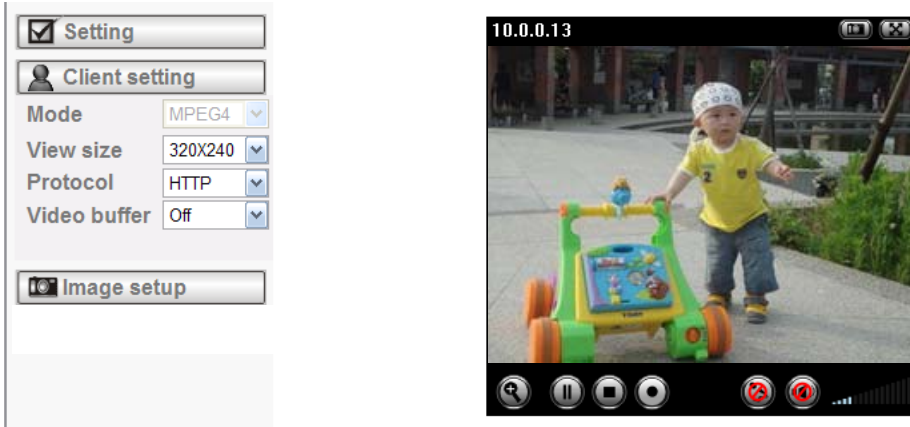

Click this button to control **Mode**, **View Size**, **Protocol**, and **Video Buffer**.

5.3.1 Mode

Click the pull-down box to choose between MPEG4 and MJPEG video compression mode.

MJPEG streaming is unavailable if RTSP mode is "On."

(Please check Setting → Basic → Camera → General)

Note : MJPEG streaming is unavailable if RTSP mode is On.

5.3.2 View Size

Select the desired display image resolution to 640X480 or 320X240.

5.3.3 Protocol

Select the transferring protocol from TCP, UDP, HTTP and Multicast.


5.3.4 Video Buffer

Turn the Video Buffer function ON / OFF. The Video Buffer function makes the streaming more smoothly in unsteady network environment, but might cause a little delay in live viewing.

5.4 Image Setup



You can use the tool bar to optimize video **Brightness, Contrast, Saturation** and **Hue**.

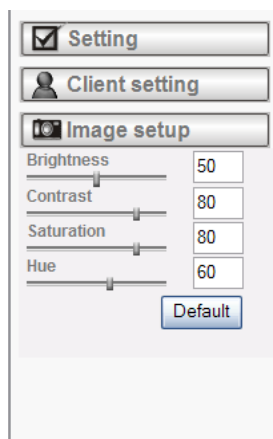

5.4.1 Brightness

The higher value the brightness is, the brighter the image is.

5.4.2 Contrast

The contrast is a measure of a display system, defined as the ratio of white to black that the system is capable of producing. The higher value the contrast is, the more delicate of color you can have.


5.4.3 Saturation

The saturation of a color is determined by a combination of light intensity and how much it is distributed across the spectrum of different wavelengths. The higher value the saturation is, the more colorful the image will be.

5.4.4 Hue

Hue is one of the three main attributes of perceived color, affected by different wavelength of color. With higher value of hue, color will be much more vivid.


5.4.5 Default



After the adjustment of all setting, you can still click Default to make the setting back to the original setting.


Chapter 6. Setting-Basic

Click the folder of **Basic** to display the sub folders including **System, Camera, Network, and Security**.

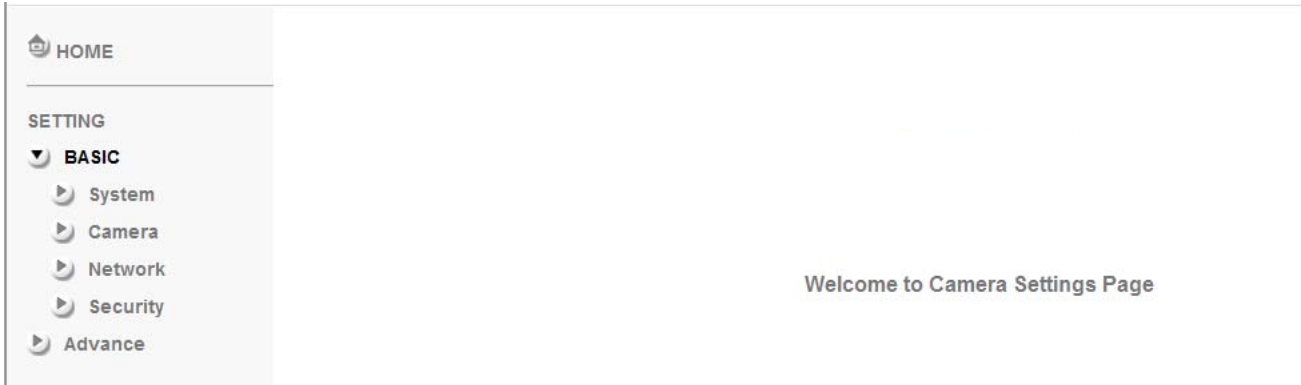

6.1 System

Click the folder of **System** to display the sub-folders including **Information**, **Date / Time**, and **Initialize**.

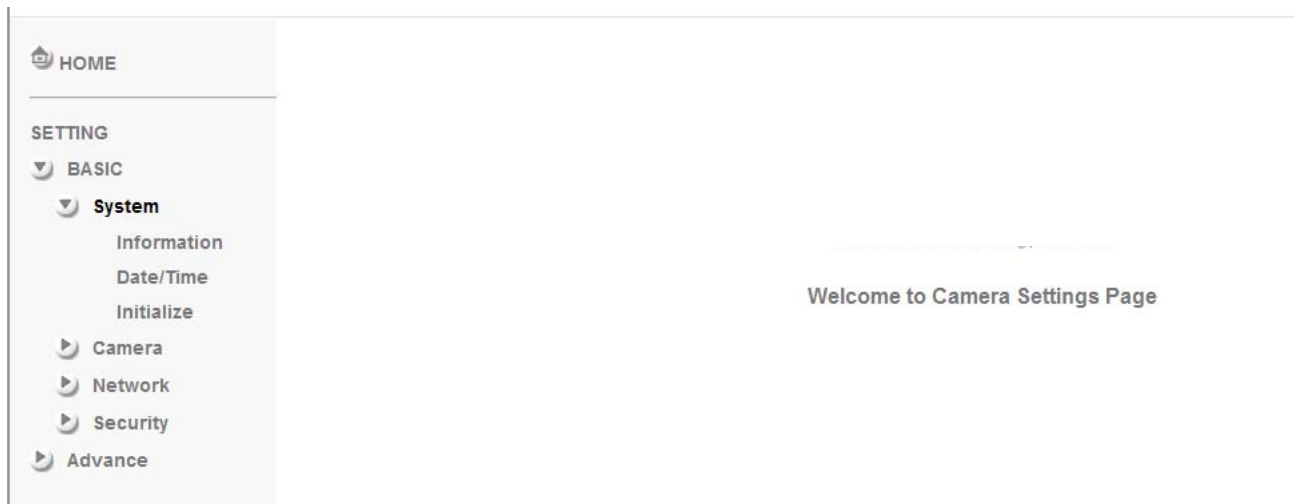

6.1.1 Information

The Information page provides the product factory information which includes **Product Name, Firmware Version and Web Version.**



Product name	Fixed IR CMOS Camera (Two way audio) Wireless
Firmware version	LM.1.6.16.02 Thu May 29 14:51:43 CST 2008
Web version	LM.1.6.16.02

6.1.2 Date / Time

The Date/ Time page displays all options of time setting.

HOME

SETTING

BASIC

System

Information

Date/Time

Initialize

Camera

Network

Security

Advance

Current date/time: 2008-06-20 10:54:05

PC clock: 2008-06-20 10:53:49

Date/time format: yyyy-mm-dd hh:mm:ss

Adjust:

- ☐ Keep current setting
- ☐ Synchronize with PC
- ☐ Manual setting
- ☒ Synchronize with NTP

NTP server name: pool.ntp.org ☒ Auto

Interval: 1 hours

Time zone: (GMT+08:00) Taipei

OK Cancel


- **Current date / time:** This displays the current date and time of this IP Camera.
- **PC clock:** This displays the date and time of the monitoring PC clock.
- **Date / Time format:** You can click the pull down box to select different time display formats.
- **Adjust:** You can select one of those four adjusting modes for your IP Camera.
 - **Keep current setting:** Select this mode to keep the current date and time of this IP Camera.
 - **Synchronize:** Select this mode to keep the date and time of this IP Camera is the same as the monitoring PC.
 - **Manual setting:** Select this mode to adjust manually the date and time of this IP Camera.
 - **Synchronize with NTP:** Specify the NTP server name and the Refresh Interval to synchronize the date and time of this IP Camera with those of the time server, known as the NTP server.
- **Time Zone:** You can select the Time Zone of the format from Greenwich Mean Time.

The time will display the same as the current date / time option.

Note:

The NTP server (Network Time Protocol) is the time server which is an Internet standard protocol built on the top of TCP / IP. This assures accurate synchronization to the millisecond of computer clock times in a network of computers.

6.1.3 Initialize

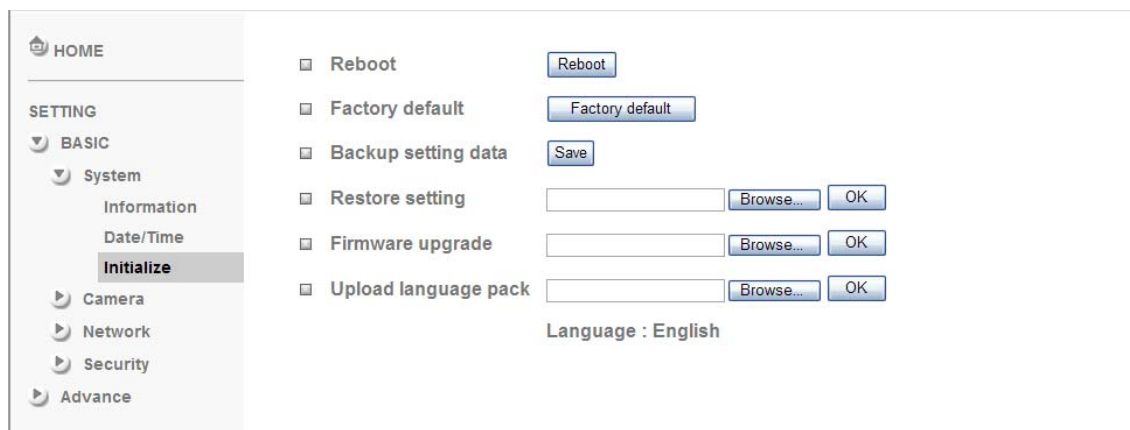

➤ **Reboot:** Click this bottom to reboot this IP Camera. A confirmation dialogue will appear and then click “OK” to process. It takes two minutes to reboot this IP Camera.

➤ **Factory Default:** Click this bottom to reset this IP Camera to the factory default setting. A confirmation dialogue will appear and then click “OK” to process. The network indicator on this IP Camera will start to blink. This IP Camera will reboot automatically after completing adjustments to the default setting. Don't turn off this IP Camera until the device reboots.

➤ **Backup Setting:** You can save the setting data of this IP Camera into a file. Click “Save” and follow the instructions on the browser to save the setting data file to your specified location.

➤ **Restore Setting:** Download the saved setting data of this IP Camera. Click “Browse” and select saved file. Click “OK” and this IP Camera is adjusted according to the loaded data and then restarted.

➤ **Firmware Update:** Upgrade the device software. Click “Browse” and select the file for upgrading. A confirmation dialogue will appear. Click “OK” to start upgrading. This IP Camera will reboot upon completion.


Note:

Use only upgrade files that are special for this IP Camera. Otherwise problems may occur. Don't turn off the IP Camera power or disconnect the network until the upgrading is completed.

➤ **Upload Language Pack:** Upgrade the device language pack. Click “Browse” and select the file for upgrading. A confirmation dialogue will appear. Click “OK” to start upgrading. The upgrade is applied immediately. The default language is “English.”


6.2 Camera

Click the folder of **Camera** to display the sub folders including **General**, **MPEG4** and **MJPEG**.

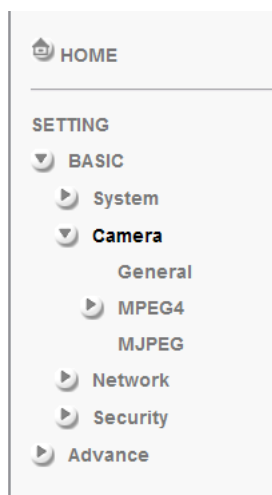

Welcome to Camera Settings Page

6.2.1 General

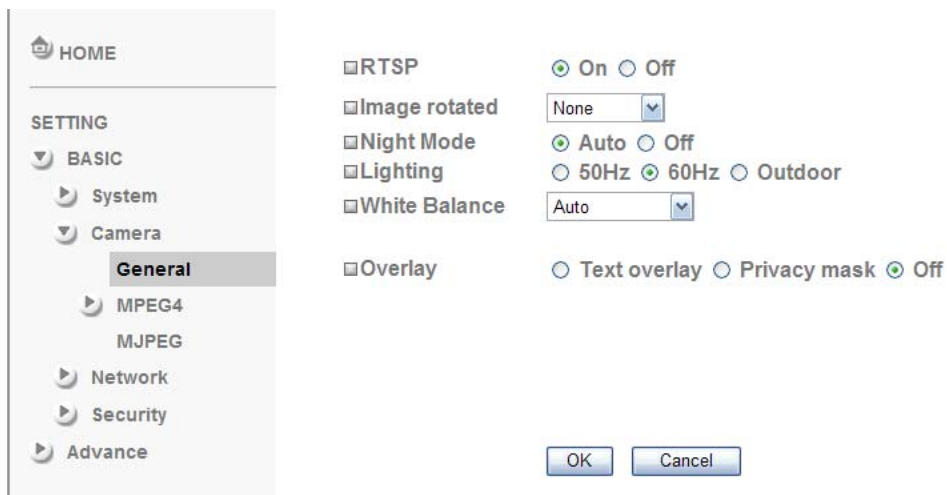

➤ RTSP : Switch On / Off

Note: RTSP (Real Time Streaming Protocol) is a protocol for use in streaming media system which allows clients to remotely control a streaming video server. RTSP is supported by most of the media clients such as Real Player, QuickTime and VLC...etc.

➤ Image Rotate: You can mirror or flip the display screen.

➤ Night Mode: You can choose Auto / Off. If you choose Auto option, the camera will adjust automatically to perform well when the environment is dark

➤ Lighting: You can choose the environment among 50 Hz, 60 Hz , and Outdoor.

➤ White Balance: You can choose the white balance to Auto, Florescent, Incandescent and Black & White.

➤ Overlay:

- Text Overlay: You can see some information on the display screen which includes Date / Time and user-defined text. Also, you can change the background color.
- Privacy Mask: You can cover a specific area of the video image.

6.2.2MPEG4

A. Computer View

HOME

SETTING

BASIC

System

Camera

General

MPEG4

Computer view

Mobile view

MJPEG

Network

Security

Advance

☐ RTSP

RTSP port ☐ 554 ☒ 8554 (1024 ~ 65535)

Viewer authentication ☐ On ☒ Off

☐ RTP

Unicast streaming

Port range (1024 ~ 65532) ~ (1027 ~ 65535)

Multicast streaming ☒ On ☐ Off

Multicast address

Video port ☐ Auto ☒ 1024 (1024 ~ 65535)

Audio port ☐ Auto ☒ 7000 (1024 ~ 65535)

Time-To-Live (1 to 255)

☐ Image Size

☐ Frame rate fps

☐ Quality

☐ Auto

☐ Fixed quality

☒ Fixed bitrate kbps

OK Cancel

➤ **RTSP (if RTSP mode is On, please check “Setting → Basic → Camera → General”)**

- RTSP Port: Specify the transmission port number of RTSP streaming. The default value is 8554.
- Viewer Authentication: If the viewer authentication is On, the users will be requested to key-in username and password when viewing through RTSP.

➤ **RTP (if RTSP mode is On, please check “Basic→ Camera → General”)**

- Unicast Streaming Video / Audio Port Range: Specify the transmission port range of RTP streaming video. RTP will select a port randomly from the range.
- Multicast Streaming (If it is ON)
- Multicast Address: Specify the multicast server address.
- Video / Audio Port: Specify the transmission port number of the video data. Specify an even number from 1024 to 65534.
- Time to Live: Set the maximum TTL that multicast can pass through.

➤ **Image Size:** Specify the image size when the network camera transmits. You can choose among 640 x 480, 320 x 240, and 160 x 120.

➤ **Frame Rate:** Set the frame rate of the MPEG4 image. You can choose values from 5, 10, 15, 20, 25, and 30 fps. The unit “fps” stands for “frames per second”.

➤ **Quality:**

- Auto: The quality and bitrate will be adjusted automatically according to the frame rate.
- Fixed Quality: You can select the value of quality among Medium, Good, Delicate

and Excellent.

- **Fixed Bitrate:** Set the bitrate of MPEG4 image transmission for a line. You can select the values from 64, 128, 256, 384, 512, 768, 1024, 1280, 1536, and 2048 kbps.

HOME

SETTING

BASIC

System

Camera

General

MPEG4

Computer view

Mobile view

MJPEG

Network

Security

Advance

☐ MPEG4 viewer port

Unicast streaming

Video/Audio port number 8090 (1024 ~ 65534)

Video/Audio port number(SSL) 8091

☐ Image Size 640x480

☐ Frame rate 30 fps

☐ Quality

☒ Auto

☐ Fixed quality Excellent

☐ Fixed bitrate 2048 kbps

OK Cancel

➤ **MPEG4 view port (if RTSP mode is Off, please check “Basic → Camera → General”)**

- **Unicast Streaming Video / Audio Port Number:** Specify the transmission port number of the video data. It is initially set to 8090. You can specify an even number from 1024 to 65534. If you change the setting of Video / Audio Port Number, the setting of Video / Audio Port Number (SSL) will change automatically.

Note:

Concerning how to select the suitable image quality for Fixed Quality or Fixed Bitrate, please refer to the CHAPTER 8. APPENDIX / A. Frame-rate & Bitrate Table.

B. Mobile View

The screenshot shows the ZAVIO camera settings interface. On the left is a sidebar menu with options: HOME, SETTING, BASIC, System, Camera, General, MPEG4, Computer view, Mobile view (highlighted), MJPEG, Network, Security, and Advance. The main area displays the configuration for RTSP and RTP streaming. Under the RTP section, 'Unicast streaming' is enabled. The 'Port range' is set to 9000 ~ 11999. 'Multicast streaming' is also enabled, with a 'Multicast address' of 226.0.0.1. The 'Video port' is set to 10000 and the 'Audio port' is set to 11000. The 'Time-To-Live' is set to 15. Below these, 'Image Size' is 160x120, 'Frame rate' is 5 fps, and 'Quality' is set to 'Fixed bitrate' at 32 kbps. 'OK' and 'Cancel' buttons are at the bottom.

➤ **RTSP (if RTSP mode is On, please check “Setting → Basic → Camera → General”)**

- **RTSP Port:** Specify the transmission port number of RTSP streaming. The default value is 554.

➤ **RTP (if RTSP mode is On, please check “Setting → Basic → Camera → General”)**

- **Unicast Streaming Video / Audio Port Range:** Specify the transmission port range of RTP streaming video. RTP will select a port randomly from the range.
- **Multicast Streaming (If it is On)**
 - ✓ **Multicast Address:** Specify the multicast server address.
 - ✓ **Video / Audio Port:** Specify the transmission port number of the video data. It is initially set to 10000 and 11000. Specify an even number from 1024 to 65534.
 - ✓ **Time to Live:** Set the maximum TTL that multicast can pass through.

➤ **Image Size:** The image size of Mobile View is fixed at 160 x 120.

➤ **Frame Rate:** Set the frame rate of the MPEG4 image. You can choose values from 5, 10, 15, 20 fps. The unit “fps” stands for “frames sent per second”.

➤ **Quality:**

- **Fixed Bitrate:** Set the bitrate of MPEG4 image transmission for a line. You can select the value from 64, 32, 16 kbps.

Note:

Concerning how to select the suitable image quality for Fixed Quality or Fixed Bitrate, please refer to the **CHAPTER 8. APPENDIX / A. Frame-rate & Bitrate Table**.

6.2.3 MJPEG

HOME

SETTING

BASIC

System

Camera

General

MPEG4

Computer view

Mobile view

MJPEG

Network

Security

Advance

☒ MJPEG viewer port

Unicast streaming

Video/Audio port number (1024 ~ 65534)

Video/Audio port number(SSL)

☒ Image Size

☒ Frame rate fps

☒ Quality

☒ Auto

☐ Fixed quality

OK Cancel

➤ **MJPEG Viewer Port(If RTSP is off, please check “Setting → Basic → Camera → General”):**

- **Unicast Streaming Video / Audio Port Number:** Specify the transmission port number of the video data. It is initially set to 8070. You can specify an even number from 1024 to 65534. If you change the setting of Video / Audio Port Number, the setting of Video / **Audio Port Number (SSL) will change automatically.**

➤ **Image Size:** Specify the image size when the network camera transmits. You can choose among 640 x 480, 320 x 240, and 160 x 120.

➤ **Frame Rate:** Set the frame rate of the MJPEG image. You can choose values from 5, 10, 15 fps. The unit “fps” stands for “frames per second”.

➤ **Quality:**


- **Auto:** The quality will be automatically decided.
- **Fixed Quality:** You can select the value of quality among Medium, Standard, Good, Delicate and Excellent.

Note:

Concerning how to select the suitable image quality for Fixed Quality or Fixed Bitrate, please refer to the **CHAPTER 8. APPENDIX / A. Frame-rate & Bitrate Table.**

6.3 Network

Click the folder of **Network** to display the sub folders including **Information**, **PPPoE**, **DDNS**, **UPnP**, **Bonjour**, **IP Notification**, and **Messenger**.

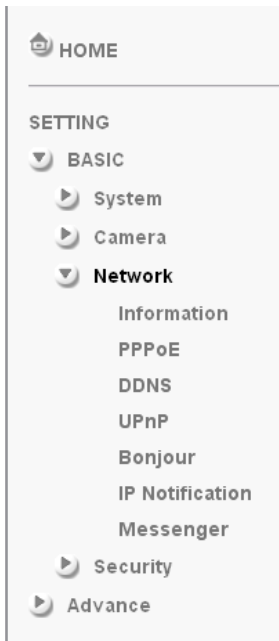

Welcome to Camera Settings Page

6.3.1 Information

Display the MAC address of the device.

The screenshot displays the ZAVIG network settings interface. On the left is a sidebar menu with the following items: HOME, SETTING, BASIC (expanded), System, Camera, Network (expanded), Information (selected), PPPoE, DDNS, UPnP, Bonjour, IP Notification, Messenger, Security, and Advance. The main content area shows the 'Information' settings. It includes a 'MAC address' field with the value '00:40:25:01:05:0F'. Below this are two radio button options: 'Obtain an IP address automatically (DHCP)' (selected) and 'Use the following IP address'. Further down are two more radio button options: 'Obtain DNS server address automatically' (selected) and 'Use the following DNS server address'. At the bottom, there is a checkbox for 'HTTP port number' which is checked, followed by a radio button for '80' (selected) and an empty text box, with the range '(1024 to 65535)' to the right. 'OK' and 'Cancel' buttons are at the bottom right.

➤ **Obtain an IP address automatically (DHCP):** If a DHCP server is installed on the network, to select this while the IP address is assigned by the DHCP server.

➤ **Obtain DNS server address automatically:** Select this to obtain the address of DNS server automatically.

➤ **Use the following IP address:** Select this when the fixed IP address is set.

- IP address: Enter the IP address of the device.
- Subnet mask: Enter the subnet mask.
- Default gateway: Enter the default gateway.

➤ **Use the following DNS server address:** Select this when you set the fixed address as the IP address of DNS server.

- Primary DNS server: Enter the IP address of the primary DNS server.
- Secondary DNS server: Enter the IP address of the secondary DNS server, if necessary.

➤ **HTTP port number:** Select **80** in general situations. If you want to use a port number other than **80**, select the text box and enter a port number between 1024 and 65535.

- When you have set the HTTP port number to a number other than 80 on the Network setting page or in the Setup Program, access the device by typing the IP address of the device on the web browser as follows: Example: when HTTP port number is set to 2000 `http://192.168.1.100:2000/`

Note: The IP Camera needs to be rebooted after it finishes changing the network setting completely.

Note: If you connect the IP Camera with your computer directly, the default network domain of camera is 192.168.1.xx

6.3.2 PPPoE (Point-to-Point Protocol over Ethernet)

If your ISP provides Dynamic IP with authentication by username and password, type all PPPoE information in this part. When you use the PPPoE function, you need to turn on the DDNS or IP Notification function at same time.

HOME

SETTING

BASIC

System

Camera

Network

Information

PPPoE

DDNS

UPnP

Bonjour

IP Notification

Messenger

Security

Advance

☒ PPPoE ☒ On ☐ Off

IP address

User ID

Password

Re-type password

☒ Obtain DNS server address automatically

☐ Use the following DNS server address

OK Cancel

- **IP address:** The IP address obtained at the PPPoE connecting with network.
- **User ID:** Enter the user ID for authentication necessary for PPPoE connections. Type it up to 64 characters.
- **Password:** Enter the password for authentication necessary for PPPoE connections. Type it up to 32 characters.
- **Re-type password:** Re-type the password to confirm.
- **Obtain DNS server address automatically:** Select this to obtain the address of DNS server automatically.

➤ **Use the following DNS server address:** Select this when you set the fixed address as the IP address of DNS server.

- Primary DNS server: Enter the IP address of the primary DNS server.
- Secondary DNS server: Enter the IP address of the secondary DNS server.

Note :

1. **PPPoE (Point-to-Point Protocol over Ethernet):** PPPoE is a network protocol for encapsulating Point-to-Point Protocol frames inside Ethernet frames. PPPoE connection is used mainly with ADSL service where individual users connect to the ADSL transceiver (modem) over Ethernet work. It is also widely used in XDSL (digital affiliate line such as ADSL, VDSL or SDSL)
2. The IP Camera needs to be rebooted after it finishes changing the network completely.
3. The IP Camera with Intelligent IP Installer can't be founded after turning on the PPPoE and reboot.

6.3.3 DDNS (Dynamic DNS)

DDNS is a system which allows the domain name data held in a name server to be updated in real time. The most common use for DDNS is allowing an internet domain name to be assigned to a computer with a varying / dynamic IP Address. This makes it possible for other sites on the internet to establish connection to the machine without needing to track the IP Address themselves.

HOME

SETTING

BASIC

System

Camera

Network

Information

PPPoE

DDNS

UPnP

Bonjour

IP Notification

Messenger

Security

Advance

☒ DDNS ☒ On ☐ Off

Server name

User ID

Password

Re-type password

Host name

OK Cancel


- **Server name:** Choose the DDNS Server from the list.
- **User ID:** Enter the user ID for authentication necessary for DDNS connections. Type it up to 64 characters.
- **Password:** Enter the password for authentication necessary for DDNS connections. Type it up to 32 characters.
- **Re-type password:** Re-type the password to confirm.
- **Host name:** Enter the host name that is registered to the DDNS server.

Note :


How to apply DDNS username and Host name??

You can apply DDNS username and Host name by the following steps:


1. Login <http://www.dyndns.org>, click the Create Account

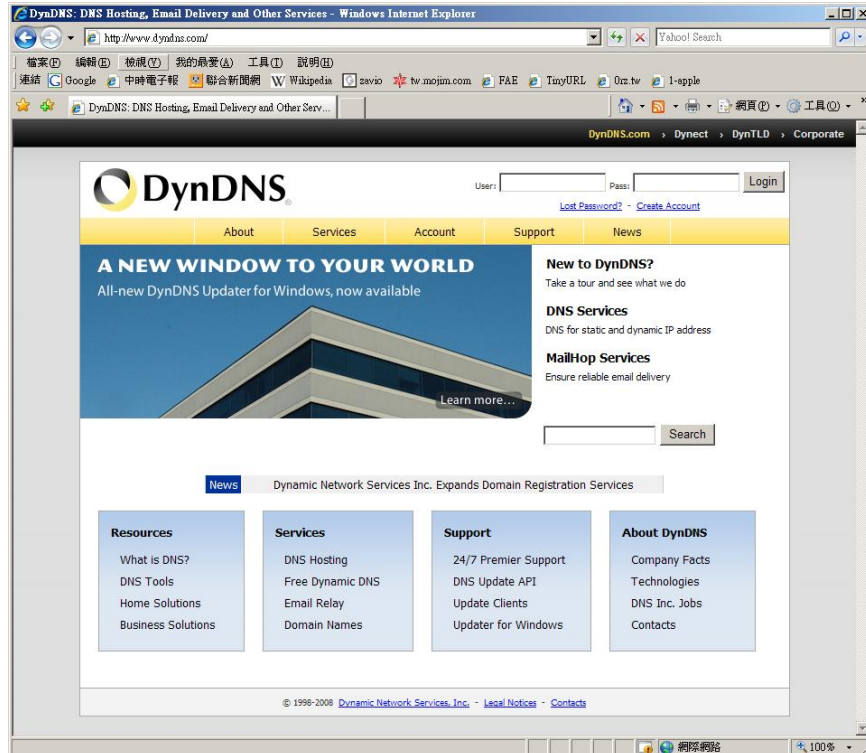


2. Input all information and follow step by step with DynDNS

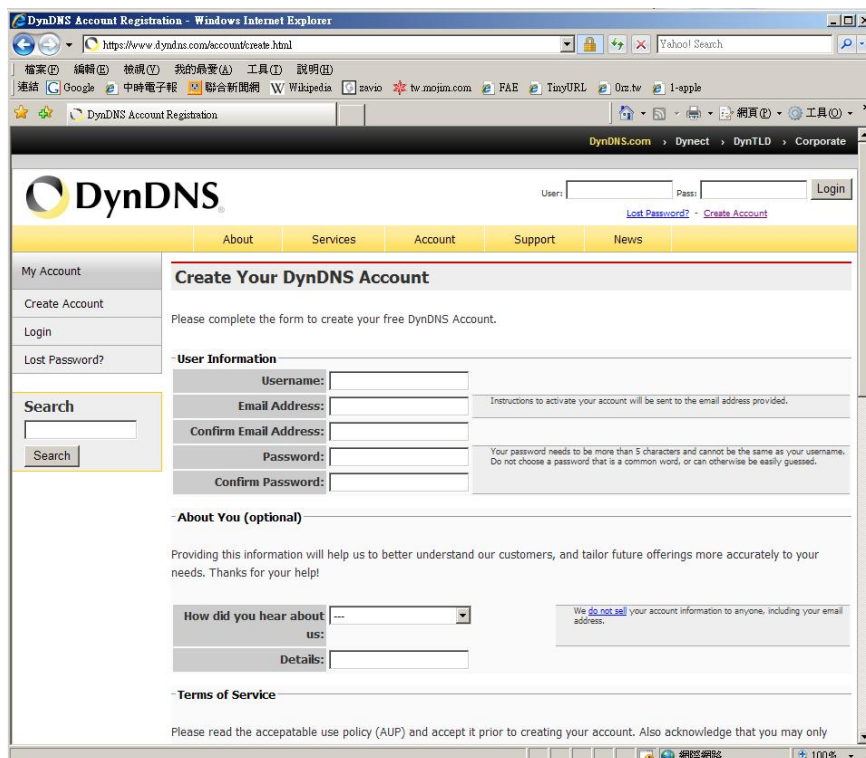


3. Login with new account and click Account → My Hosts → Add Host Services

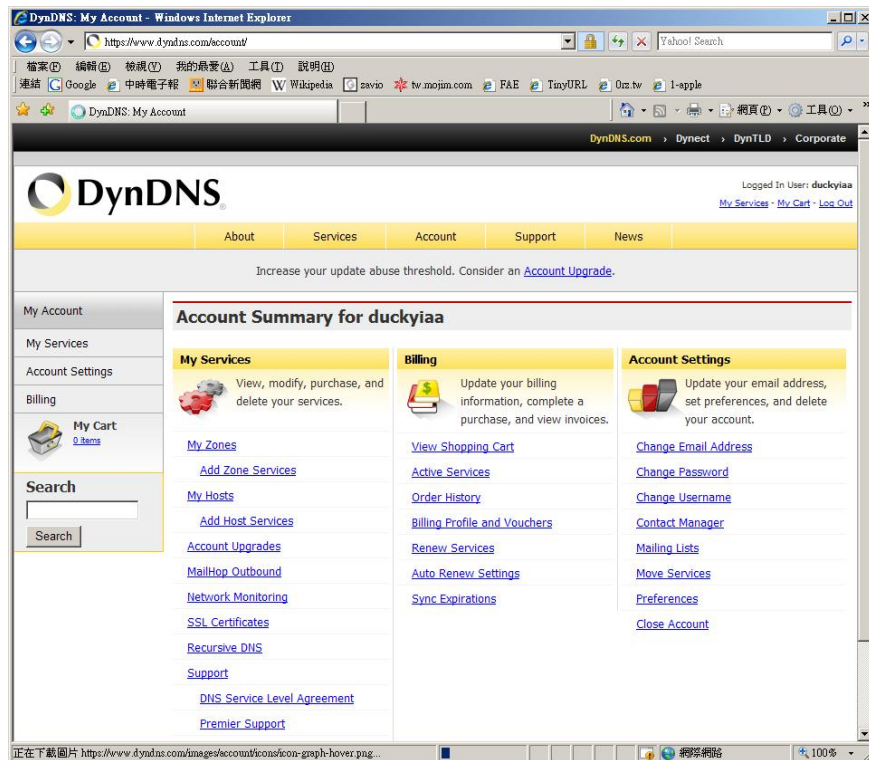


4. Type domain in the Hostname field and select sub-domain

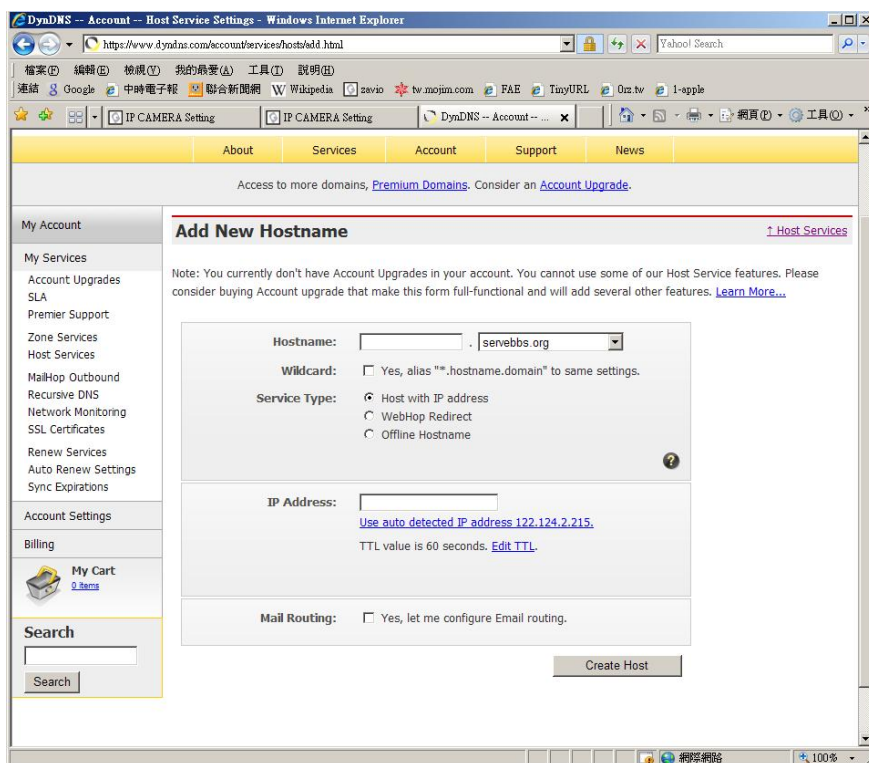

5. After type information, check your DDNS service.

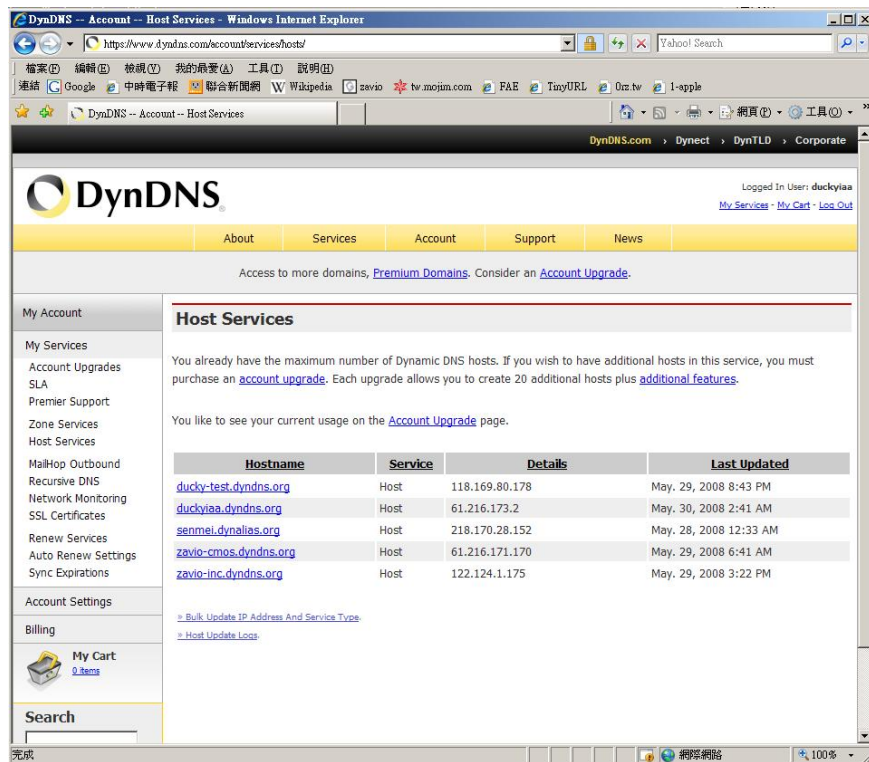

6. Type your DDNS User ID, Password and Host name in Setting → Network → DDNS. After completing setting, reboot IP Camera.

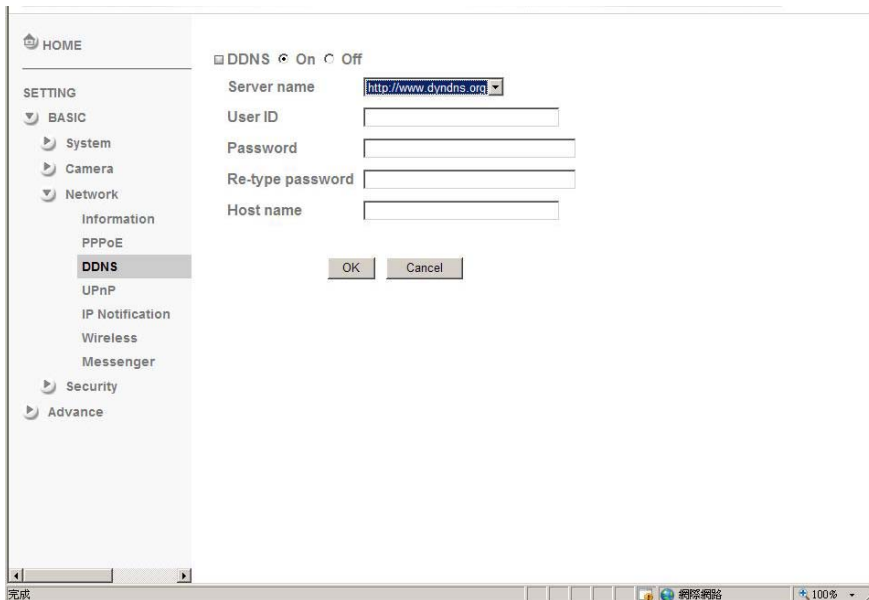

6.3.4 UPnP (Universal Plug and Play)

If you have a Router to access to internet and the Router supports UPnP IGD function, you need to turn on the UPnP Port Forwarding function.

HOME

SETTING

BASIC

System

Camera

Network

Information

PPPoE

DDNS

UPnP

Bonjour

IP Notification

Messenger

Security

Advance

☐ UPnP ☒ On ☐ Off

☒ Turn On UPnP port forwarding

HTTP port ☒ 80 ☐ (1024 ~ 65535)

SSL Port ☒ 443 ☐ (1024 ~ 65535)

MPEG4 viewer port 8090 (1024 ~ 65535)

MPEG4 viewer port(SSL) 8091 (1024 ~ 65535)

MJPEG viewer port 8070 (1024 ~ 65535)

MJPEG viewer port(SSL) 8071 (1024 ~ 65535)

MPEG4 RTSP port

Computer view 8050 (1024 ~ 65535)

Mobile view ☐ 554 ☒ 8030 (1024 ~ 65535)

OK Cancel


- **HTTP port:** Enter the HTTP port number and default HTTP port is 80.
- **SSL port:** Enter the SSL port number and default SSL port is 443.
- **MPEG4 viewer port:** Enter the MPEG4 viewer port number and default MPEG4 viewer port is 8090.
- **MPEG4 viewer port (SSL):** Enter the MPEG4 SSL viewer port and default is 8091.
- **MJPEG viewer port:** Enter the MJPEG viewer port number and default MJPEG viewer port is 8070.
- **MJPEG viewer port (SSL):** Enter the MPEG4 SSL viewer port and default is 8071.
- **MPEG4 RTSP port:** Enter the MPEG4 RTSP port, default value is 8050 for computer view, 8030 for mobile view.

Note :

UPnP (Universal Plug and Play): UPnP is a set of computer network protocol. It allows devices to connect seamlessly and simplify the implementation of networks in the home and corporate environments. The device supports UPnP which is enabled by default. The device will be automatically detected and a new icon will be added to “My Network Place” if it also enables on your computer. It provides Port Forwarding for opening a port in a router or firewall in a private network in order to let a party from the outside world contact a inside user.

6.3.5 Bonjour

Bonjour, also known as zero-configuration networking, enables automatic discovery of computers, devices, and services on IP networks. Bonjour uses industry standard IP protocols to allow devices to automatically discover each other without the need to enter IP addresses or configure DNS servers.

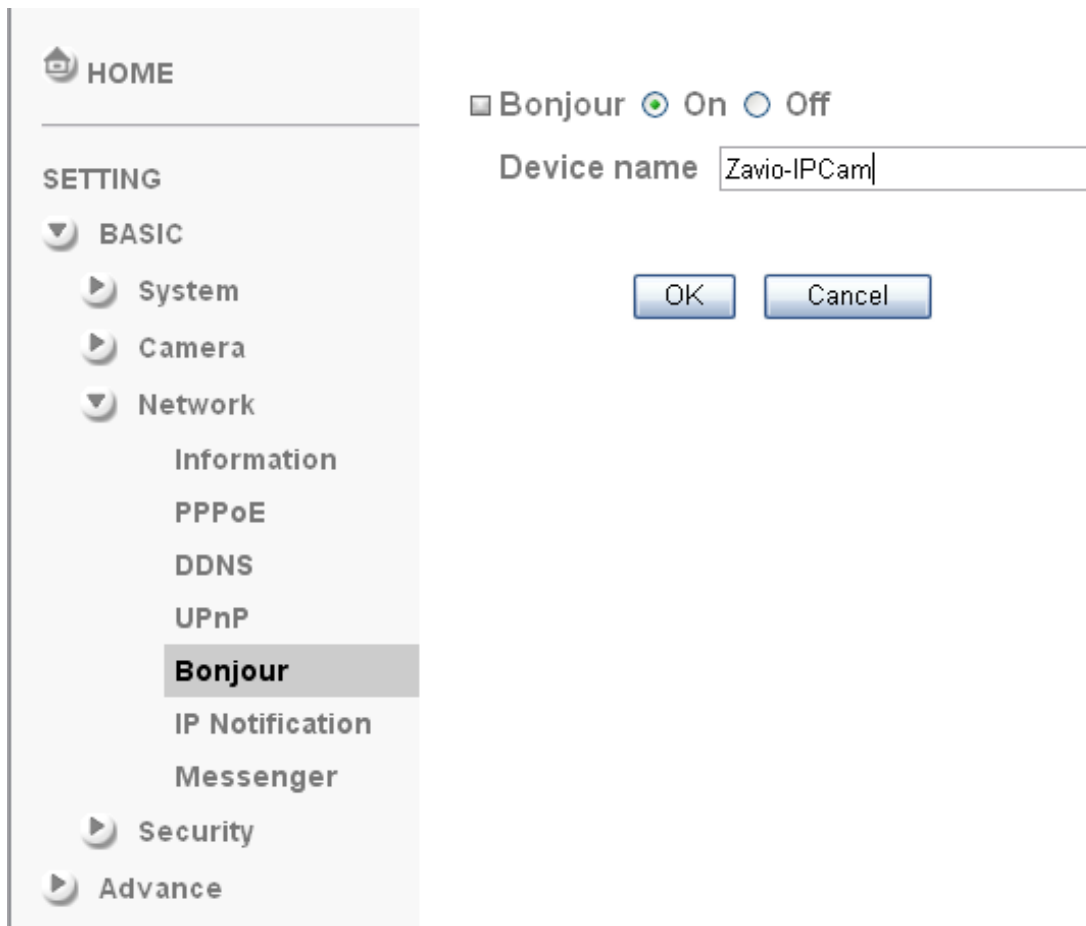

➤ **Device Name:** Enter Device Name you wish.

Note: How to use Bonjour in your Windows Browser UI? Please check the link below:

<http://www.apple.com/support/downloads/bonjourforwindows.html>

6.3.6 IP Notification

When network notify type is set to “ON”, you can send an e-mail notification of the completion of the network setting.

HOME

SETTING

BASIC

System

Camera

Network

Information

PPPoE

DDNS

UPnP

Bonjour

IP Notification

Messenger

Security

Advance

IP Notification ☒ On ☐ Off

Notify type ☐ DHCP ☐ Static IP ☐ PPPoE

SMTP server name

SMTP server port 25 (1 ~ 65535) ☐ SSL

Authentication ☒ On ☐ Off

☒ SMTP ☐ POP before SMTP

User name

Password

Recipient e-Mail address

Administrator e-Mail address

Subject IP Notify

Message

Product Name : <product>
Web Version : <vweb>
APP Version : <vfirm>
http://<ip>:<port>
MAC Address : <mac>

OK Cancel Test Help

➤ **Notify Type:** You can select the notify type among DHCP, Static IP, and PPPoE.

➤ **SMTP Server Name:** Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

➤ **SMTP Server Port:** You can set port number from 1~65535 according to your mail server. The default value is 25.

- Security setting: Tick SSL box if the mail server you use has security restriction.

Note:

If you use g-mail as your mail server, you should set 587 as your port number and tick SSL box.

➤ **Authentication:** Select the authentication required when you send an email.

- Off: Select if no authentication is necessary when an email is sent.
- On: When authentication is necessary an e-mail is sent, there are **SMPT, POP before SMPT or both** three options.

HOME

SETTING

BASIC

System

Camera

Network

Information

PPPoE

DDNS

UPnP

Bonjour

IP Notification

Messenger

Security

Advance

IP Notification ☒ On ☐ Off

Notify type ☐ DHCP ☐ Static IP ☐ PPPoE

SMTP server name

SMTP server port 25 (1 ~ 65535) ☐ SSL

Authentication ☒ On ☐ Off

☒ SMTP ☐ POP before SMTP

User name

Password

Recipient e-Mail address

Administrator e-Mail address

Subject IP Notify

Message

Product Name : <product>
Web Version : <vweb>
APP Version : <vfirm>
http://<ip>:<port>
MAC Address : <mac>

OK Cancel Test Help

- **Authentication:** Select the authentication required when you send an email.
 - Off: Select if no authentication is necessary when an email is sent.
 - On: When authentication is necessary an e-mail is sent, there are **SMTP, POP before SMTP or both** three options.
- **SMTP:** Select if SMTP authentication is necessary when an e-mail is sent.
- **POP before SMTP:** Select if POP before SMTP authentication is necessary when an e-mail is sent.
 - POP server name:** It is necessary when the **POP before SMTP** is selected in **Authentication**. Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.
 - User name, Password:** Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.
- **Recipient e-mail address:** Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.
- **Administrator e-mail address:** Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.
- **Subject:** Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is sent according to the IP notification.
- **Message:** Type the text of the E-mail up to 384 characters. Default value provides network information including IP, Port, MAC, Model, Firmware Version and Web Version.

6.3.7 Messenger

Messenger function provide an easy-connect feature. User can easy to know what camera's private and public IP address is.

HOME

SETTING

- BASIC
- System
- Camera
- Network
 - Information
 - PPPoE
 - DDNS
 - UPnP
 - Bonjour
 - IP Notification
 - Messenger**
- Security
- Advance

Messenger ☒ On ☐ Off

Protocol: msn

Login Account: ivy_zavio@hotmail.com

Password:

Re-type password:

Alias: camera at home

Port range: 20000 (1024 ~ 65531) ~ 21000 (1028 ~ 65535)

IP Notification: ☒ On ☐ Off

Privacy: ☒ On ☐ Off

User:

Add Remove

barry-zavio@hotmail.com


Allow list

OK Cancel

- **Protocol:** support MSN only.
- **Login Account:** Camera will use this account to login MSN server. This MSN account should be applied form <http://www.msn.com>.
- **Password:** password for this msn account.
- **Re-type password:** re-type password to double confirm.
- **Alias:** This alias will display on MSN like the following which display in red frame.
- **Port range:** Camera will select one port from this port range for video transmission.
- **IP Notification:** Switch the IP notification On / Off. **If this feature switches On**, camera will send IP notification to the users who are allowed.
- **Privacy:** Switch privacy On / Off. **When privacy turns on**, only those users in allowed list can access the camera.
- **User:** Input to this blank to edit allow list.
- **Allow list:** When privacy turns on, only those users in allow list can access the camera.

6.4 Security

Click the folder of **Security** to display the sub folders including **Account** and **HTTPS**.

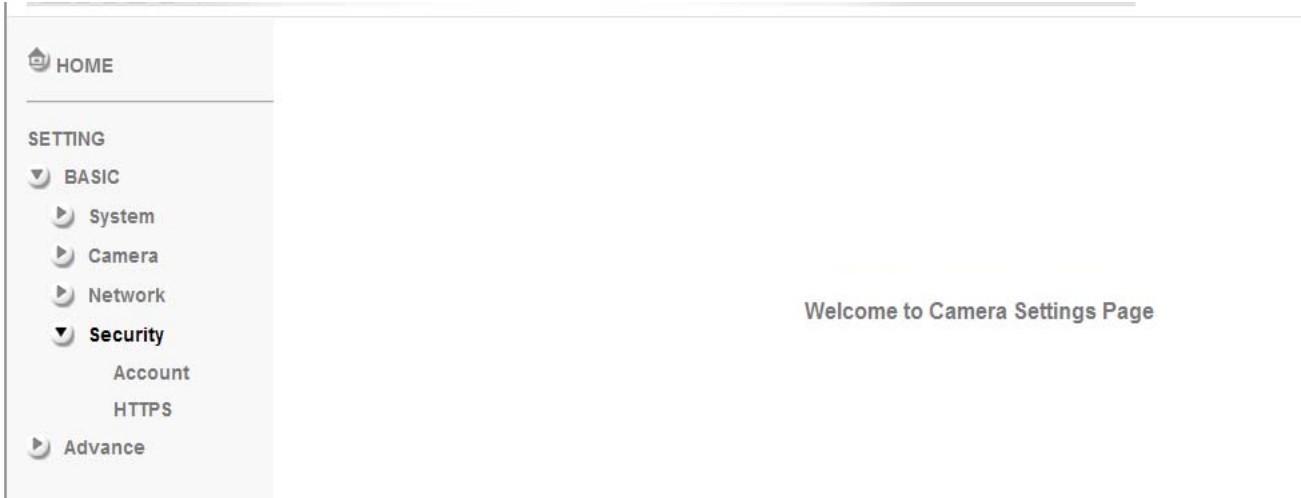

6.4.1 Account

The device fault account and password setting is “admin / admin”. That means everyone who knows IP address can access the device including all configuration. It is necessary to assign a password if the device is intended to be accessed by others.

User ID	User name	Password	Re-type Password	Viewer mode
Administrator	admin	Admin
User 1				Admin
User 2				Admin
User 3				Admin
User 4				Admin
User 5				Admin
User 6				Admin
User 7				Admin
User 8				Admin
User 9				Admin


Viewer authentication ☒ On ☐ Off

OK Cancel


- **User name:** Set a user name between 4-16 characters.
- **Password:** Set a password between 4-16 characters.
- **Re-type Password:** Re-type the password to confirm.
- **Viewer Mode:** Set the user mode among Admin, Operator, and Viewer. Different viewer mode has different limits of authority.
 - The Admin mode has all authority of configuration.
 - The Operator mode can not only view the Live View but also control the PTZ (apply in speed dome).
 - The Viewer mode only can view the Live View.
- **Viewer Authentication:** Allows any viewer direct access to Live View.

6.4.2 HTTPS

HTTPS is a URI scheme used to indicate a secure HTTP connection. It is syntactically identical to the `http://` scheme normally used for accessing resources using HTTP. Using an `https://URL/` with a different default TCP port (443) and an additional encryption / authentication layer between the HTTP and TCP. You can use the IP camera through HTTPS easily by using `https://` instead of `http://`.

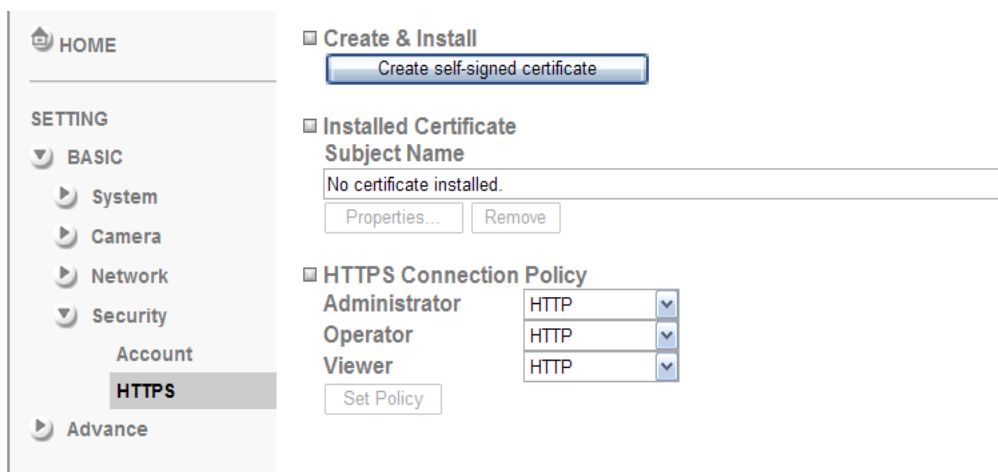

- **Create & Install:** Create a self-signed certificate for HTTPS to recognize.
- **Installed Certificate:** Display or remove the properties of the installed certificate.
- **HTTPS Connection Policy:** Set HTTPS connection policy for different level of users.
- To use the HTTPS encryption, please set up “**Create self-signed certificate**” for the first time you use the HTTPS function, and then set up the connection policy for different users.

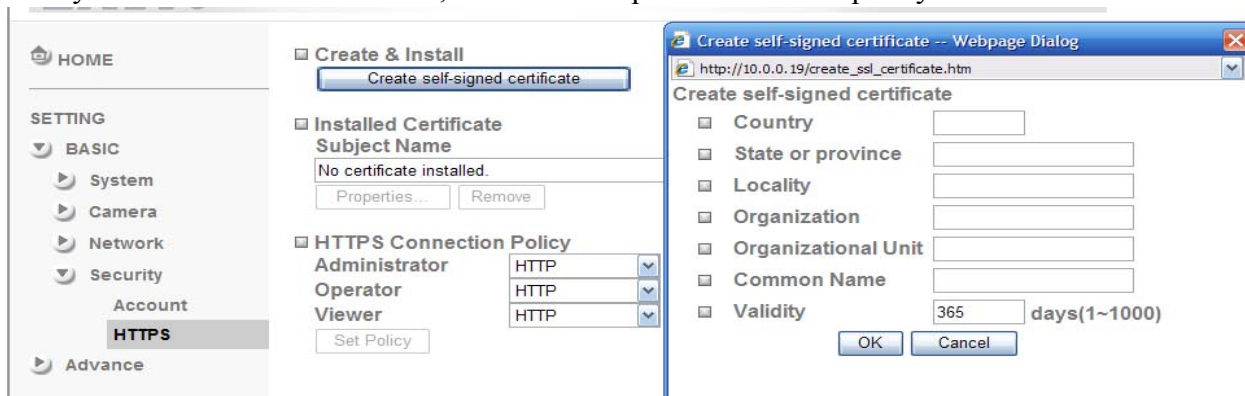


Note:

When enable HTTPS with RTSP on mode, the IP Camera only protect the setting such as username and password and do not protect video and audio. When enable HTTPS with RTSP off mode, the IP Camera will protect all setting including video and audio.

Chapter 7. Setting-Advance


Click the folder of **Advance** to display the sub folders including **FTP client**, **SMTP**, **HTTP event**, **Schedule**, **Motion detection** and **System Log**.

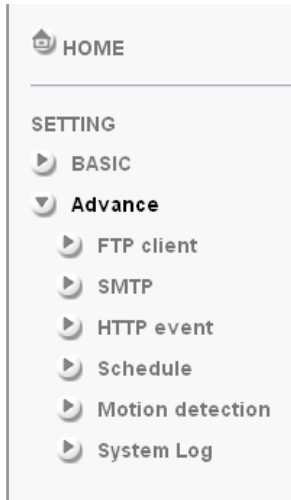

Welcome to Camera Settings Page

7.1 FTP Client

Use this menu to set up for capturing and sending images to an FTP server. By using FTP client function, you can send the **image and video file** which has been shot and recorded linked with the built-in motion detection function to FTP server. FTP client setting menu is composed of two tabs, **General**, **Alarm sending** and **Periodical sending**.

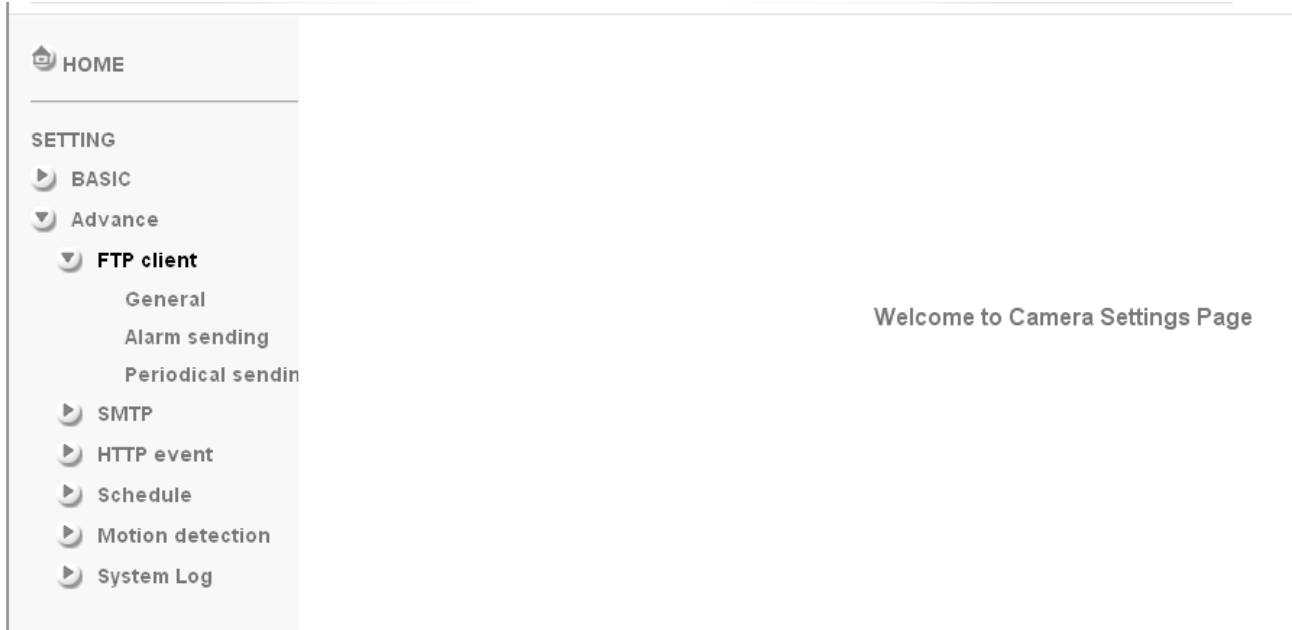

7.1.1 General

Select “**On**” when you use FTP function. The FTP client setting page appears.

Select “**Off**”, when you do not wish to use the FTP client function.

Note:

The frame rate and operability on the main viewer may decrease while a file is being transmitted by the FTP client function.

HOME

SETTING

BASIC

Advance

FTP client

General

Alarm sending

Periodical sending

SMTP

HTTP event

Schedule

Motion detection

System Log

FTP client ☒ On ☐ Off

FTP server name

User name

Password

Re-type password

Passive mode ☐ On ☒ Off

OK Cancel Test

- **FTP server name:** Type the FTP server name to upload still images up to 64 characters, or the IP address of the FTP server.
- **User name:** Type the user name for the FTP server.
- **Password:** Type the password for the FTP server.
- **Retype password:** To confirm the password, type the same characters as you typed in the Password box.
- **Passive mode:** Set whether you use the passive mode of FTP server or not when connecting to FTP server. Select **On** to connect to FTP server using the passive mode.

7.1.2 Alarm sending

Set to forward the **image and video file** to the specified FTP server linked with the alarm detection by the built-in motion detection function. Select **On** to send the image file to FTP server linked with the alarm detection.

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - General
 - Alarm sending**
 - Periodical sendin
- SMTP
- HTTP event
- Schedule
- Motion detection
- System Log

☐ Alarm sending ☒ On ☐ Off

Remote path

Image file name

Suffix ☐ Date Time ☒ Sequence number

Sequence number clear


Alarm ☒ Motion detection

Effective Period ☐ Always ☒ Schedule

- **Remote Path:** Type the path to the destination in FTP server up to 64 characters.
- **Image File Name:** Type the file name you want to assign to the images when sending to the FTP server. You can use up to 10 alphanumeric characters, - (hyphen) and _ (underscore) for naming.
- **Suffix:** Select a suffix to add to the file name
 - **Date & time:** The date & time suffix is added to the Image file name. The date/time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
 - **Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 is added to the Image file name.
 - **Sequence number clear:** Click **Clear** and the suffix of the sequence number returns to 1.

➤ **Alarm**

- **Motion Detection:** Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.



Note: You can set motion detection at motion detection page. (Please go “Setting → Advance → Motion detection → Setting”) For more details, you can check Chapter 7.5.

➤ **Effective period:** Set the period when the periodical sending is effective.

- **Always:** The periodical sending is always effective.
- **Schedule:** You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note: You can set schedule function at schedule page. (Please go “Setting → Advance → Schedule → Setting”) For more details, you can check Chapter 7.4.

Schedule

Schedule - Windows Internet Explorer

http://10.0.0.47/schedule.htm

☐ Schedule selection FTP - Alarm

☐ Mon Start time 00 : 00 - End time 24 : 00

☐ Tue Start time 00 : 00 - End time 24 : 00

☐ Wed Start time 00 : 00 - End time 24 : 00

☐ Thu Start time 00 : 00 - End time 24 : 00

☐ Fri Start time 00 : 00 - End time 24 : 00

☐ Sat Start time 00 : 00 - End time 24 : 00

☐ Sun Start time 00 : 00 - End time 24 : 00

☐ Use the same time schedule every day.

OK Cancel

Done Internet 100%

7.1.3 Periodical sending

You can set to send an image file to FTP server periodically by selecting **On** to send the image file to FTP server linked with setting period.

HOME

SETTING

BASIC

Advance

FTP client

General

Alarm sending

Periodical sending

SMTP

HTTP event

Schedule

Motion detection

System Log

☐ Periodical sending ☒ On ☐ Off

Remote path

Image file name

Suffix ☐ None ☐ Date Time ☒ Sequence number

Sequence number clear

Interval H M
(MIN : 1min. MAX : 24-hour interval)

Effective Period ☐ Always ☒ Schedule

- **Image file name:** Type the file name of the image sent by SMTP up to 10 alphanumeric characters, - (hyphen) and _ (under score).
- **Suffix:** Select a suffix to be added to the file name sent by SMTP.
 - **None:** The name of the sent file will be the Image file name.
 - **Date & time:** The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
 - **Sequence number:** A **consecutive** number is added to the Image file name.
 - **Sequence number clear:** Click **Clear** and the suffix of the sequence number returns to 1.
- **Interval:** Set the periodical sending is effective interval. Min value is 1 min and Max value is 24 hour.

➤ **Effective period:** Set the period when the periodical sending is effective.

- **Always:** The periodical sending is always effective.
- **Schedule:** You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note: You can set schedule function at schedule page. (Please go “Setting → Advance → Schedule → Setting”) For more details, you can check Chapter 7.4.

Schedule

Schedule - Windows Internet Explorer

http://10.0.0.47/schedule.htm

☐ Schedule selection FTP - Alarm

☐ Mon Start time 00 : 00 - End time 24 : 00

☐ Tue Start time 00 : 00 - End time 24 : 00

☐ Wed Start time 00 : 00 - End time 24 : 00

☐ Thu Start time 00 : 00 - End time 24 : 00

☐ Fri Start time 00 : 00 - End time 24 : 00

☐ Sat Start time 00 : 00 - End time 24 : 00

☐ Sun Start time 00 : 00 - End time 24 : 00


☐ Use the same time schedule every day.

OK Cancel

Done Internet 100%

7.2 SMTP

Set the SMTP menu when you want to send an image via e-mail. By using Mail (SMTP) function, you can send a mail with attached **image and video** which has been shot linked with the built-in motion detection function. The image file can also be sent periodically. E-Mail (SMTP) setting menu is composed of three tabs, **General**, **Alarm sending** and **Periodical sending**.

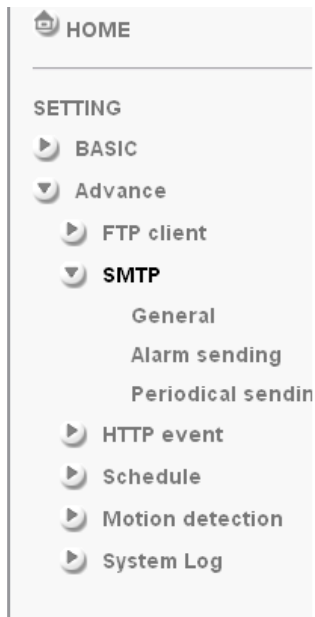

Welcome to Camera Settings Page

7.2.1 General

Select **On** when you use the SMTP function. The common setting options are displayed below. Select **Off**, if you do not wish to use the e-Mail (SMTP) function.

Note :

The Setting of general part will be the same as the setting of IP Notification (Please check “Setting → Basic → Network → IP Notification”)

The screenshot shows the ZAVIG web interface. On the left is a sidebar menu with 'HOME' at the top, followed by 'SETTING' which includes 'BASIC', 'Advance', 'FTP client', 'SMTP', and 'System Log'. The 'SMTP' section is expanded, showing 'General', 'Alarm sending', and 'Periodical sendin'. The 'General' sub-section is selected. The main content area shows the SMTP configuration. At the top, there's a toggle for 'e-Mail (SMTP)' with 'On' selected. Below are fields for 'SMTP server name', 'SMTP server port' (set to 25, with a range of 1 ~ 65535), and 'Authentication' (set to 'On'). There are checkboxes for 'SSL', 'SMTP', and 'POP before SMTP'. Further down are fields for 'Recipient e-Mail address', 'Administrator e-Mail address', and 'Subject'. At the bottom is a 'Message' field which is currently blacked out.

➤ **SMTP server name:** Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

➤ **SMTP Server Port:** You can set port number from 1~65535 according to your mail server. The default value is 25.

● **Security setting:** Tick SSL box if the mail server you use has security restriction.

Note:

If you use g-mail as your mail server, you should set 587 as your port number and tick SSL box.

➤ **Authentication:** Select the authentication required when you send an email.

● **Off:** Select if no authentication is necessary when an email is sent.

● **On:** When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - SMTP
 - General**
 - Alarm sending
 - Periodical sendin
 - HTTP event
 - Schedule
 - Motion detection
 - System Log

e-Mail (SMTP) ☒ On ☐ Off

SMTP server name

SMTP server port (1 ~ 65535) ☐ SSL

Authentication ☒ On ☐ Off

☒ SMTP ☒ POP before SMTP

POP server name

User name

Password

Recipient e-Mail address

Administrator e-Mail address

Subject

Message

- **Authentication:** Select the authentication required when you send an email.
 - Off: Select if no authentication is necessary when an email is sent.
 - On: When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.
- **SMTP:** Select if SMTP authentication is necessary when an e-mail is sent.
- **POP before SMTP:** Select if POP before SMTP authentication is necessary when an e-mail is sent.

Note : When you set to On, be sure to select either or both SMTP or / and POP before SMTP.

- POP server name:** It is necessary when the **POP before SMTP** is selected in **Authentication**. Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.
- User name, Password:** Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.
- **Recipient e-mail address:** Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.
- **Administrator e-mail address:** Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.
- **Subject:** Type the subject/title of the e-Mail up to 64 characters. With respect to mail

which is sent according to the alarm detection when **Alarm sending** of the alarm tab is set to **On**, the characters standing for the sensor type added to the subject.

- **Message:** Type the text of the E-mail up to 384 characters. (A line break is equivalent to 2 characters.)

7.2.2 Alarm sending

Set to send the mail with connection to the alarm detection by the built-in motion detection function. Select On to send the image and file to SMTP server linked with the alarm detection.

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - SMTP
 - General
 - Alarm sending**
 - Periodical sending
- HTTP event
- Schedule
- Motion detection
- System Log

☐ Alarm sending ☒ On ☐ Off

File attachment ☒ On ☐ Off

Image file name

Suffix ☐ None ☐ Date Time ☒ Sequence number

Sequence number clear

Alarm ☐ Motion detection

Effective Period ☒ Always

☐ Schedule

- **Alarm sending:** Select **On** to set to send mail with connection to the alarm detection.
- **File attachment:** Set whether an image file is attached to the mail sent or not. When **On** is selected, the image file made by the settings below is attached. When **Off** is selected, only the message is sent.
- **Image file name:** Type the file name you want to assign to the image to attach a mail. You can use up to 10 alphanumeric, - (hyphen) and _ (underscore) for naming.
- **Suffix:** Select a suffix to add to the file name
 - **Date & time:** The date & time suffix is added to the Image file name. The date/time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
 - **Sequence number:** A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 is added to the Image file name.
 - **Sequence number clear:** Click **Clear** and the suffix of the sequence number returns to 1.

HOME

SETTING

BASIC

Advance

FTP client

SMTP

General

Alarm sending

Periodical sendin

HTTP event

Schedule

Motion detection

System Log

Alarm sending ☒ On ☐ Off

File attachment ☒ On ☐ Off

Image file name

Suffix ☐ None ☐ Date Time ☒ Sequence number

Sequence number clear


Alarm ☒ Motion detection

Effective Period ☐ Always

☒ Schedule

➤ Alarm

- **Motion Detection:** Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.

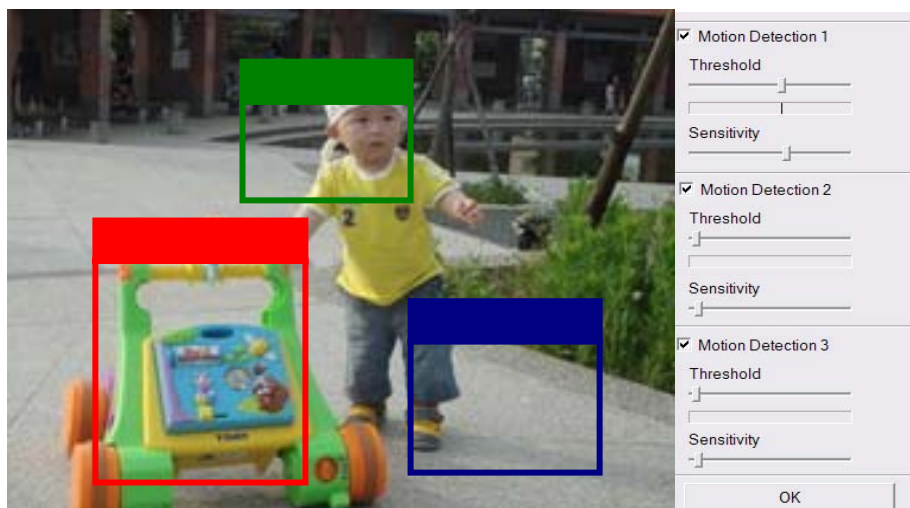

Note: You can set motion detection at motion detection page. (Please go “Setting → Advance → Motion detection → Setting”) For more details, you can check Chapter 7.5.

➤ **Effective period:** Set the period when the periodical sending is effective.

- **Always:** The periodical sending is always effective.
- **Schedule:** You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note: You can set schedule function at schedule page. (Please go “Setting → Advance → Schedule → Setting”) For more details, you can check Chapter 7.4.

Schedule

Schedule - Windows Internet Explorer

http://10.0.0.47/schedule.htm

☐ Schedule selection FTP - Alarm

☐ Mon Start time 00 : 00 - End time 24 : 00

☐ Tue Start time 00 : 00 - End time 24 : 00

☐ Wed Start time 00 : 00 - End time 24 : 00

☐ Thu Start time 00 : 00 - End time 24 : 00

☐ Fri Start time 00 : 00 - End time 24 : 00

☐ Sat Start time 00 : 00 - End time 24 : 00

☐ Sun Start time 00 : 00 - End time 24 : 00

☐ Use the same time schedule every day.

OK Cancel

Done Internet 100%

7.2.3 Periodical sending

You can set to send an image file by SMTP server periodically by selecting **On** to send the image file by SMTP server linked with setting period.

HOME

SETTING

BASIC

Advance

FTP client

SMTP

General

Alarm sending

Periodical sending

HTTP event

Schedule

Motion detection

System Log

☐ Periodical sending ☒ On ☐ Off

Image file name

Suffix ☐ None ☐ Date Time ☒ Sequence number

Sequence number clear

Interval H M
(MIN : 30min. MAX : 24-hour interval)

Effective Period ☐ Always ☒ Schedule

- **Image file name:** Type the file name of the image sent by SMTP up to 10 alphanumeric characters, - (hyphen) and _ (under score).
- **Suffix:** Select a suffix to be added to the file name sent by SMTP.
 - **None:** The name of the sent file will be the Image file name.
 - **Date & time:** The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
 - **Sequence number:** A consecutive number is added to the Image file name.
 - **Sequence number clear:** Click **Clear** and the suffix of the sequence number returns to 1.
- **Interval:** Set the periodical sending is effective interval. Min value is 30 min and Max value is 24 hour.

➤ **Effective period:** Set the period when the periodical sending is effective.

- **Always:** The periodical sending is always effective.
- **Schedule:** You can specify the period when the periodical sending is effective in the schedule setting in the other section. **Please check “Setting → Basic → Advance → Schedule → Setting.”**

Note: You can set schedule function at schedule page. **(Please go “Setting → Advance → Schedule → Setting”)** For more details, you can check Chapter 7.4.

Schedule

Schedule - Windows Internet Explorer

http://10.0.0.47/schedule.htm

☒ Schedule selection FTP - Alarm

<input type="checkbox"/>	Mon	Start time	00	:	00	- End time	24	:	00
<input type="checkbox"/>	Tue	Start time	00	:	00	- End time	24	:	00
<input type="checkbox"/>	Wed	Start time	00	:	00	- End time	24	:	00
<input type="checkbox"/>	Thu	Start time	00	:	00	- End time	24	:	00
<input type="checkbox"/>	Fri	Start time	00	:	00	- End time	24	:	00
<input type="checkbox"/>	Sat	Start time	00	:	00	- End time	24	:	00
<input type="checkbox"/>	Sun	Start time	00	:	00	- End time	24	:	00


☐ Use the same time schedule every day.

OK Cancel

Done Internet 100%

7.3 HTTP event

Set up this menu for sending commands to an HTTP server. By using HTTP client function, you can send the command defined by yourself, linked with the external sensor input or with the built-in motion detection function to HTTP server. HTTP client setting menu is composed of two tabs, **General** and **Alarm sending**.

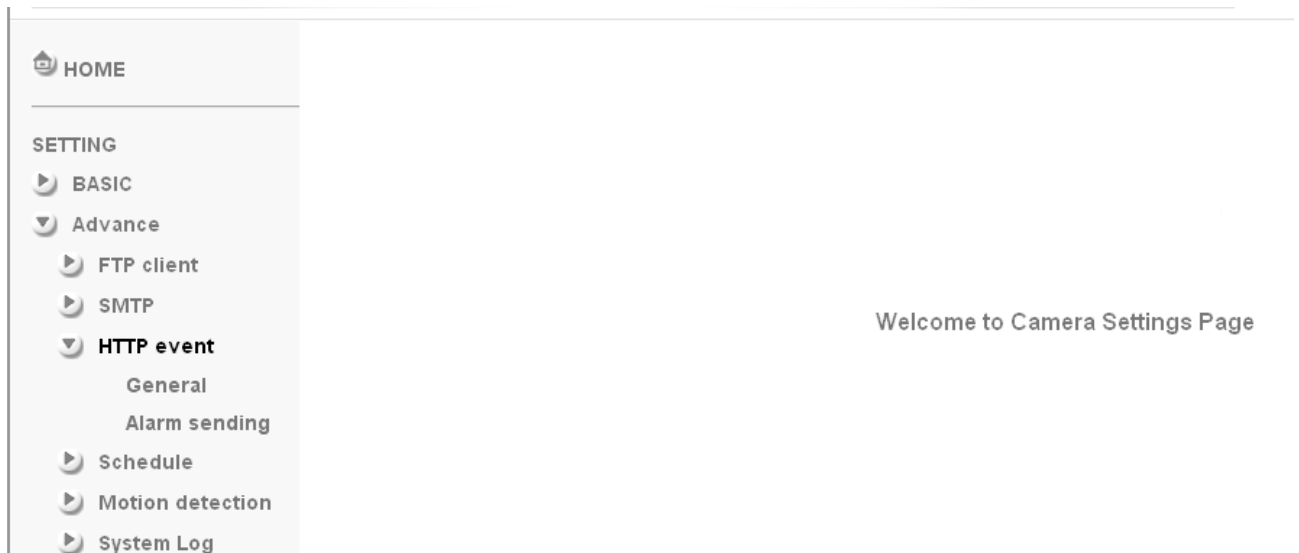

7.3.1 General

HOME

SETTING

- BASIC
- Advance
 - FTP client
 - SMTP
 - HTTP event
 - General**
 - Alarm sending
- Schedule
- Motion detection
- System Log

HTTP event ☒ On ☐ Off

URL

Port

User ID

Password

Proxy server name

Proxy port number

Proxy user ID

Proxy password

OK Cancel Test

➤ **HTTP event:** Set up the HTTP server URL, port, User ID, Password, and Proxy Server settings.

HOME

SETTING

- BASIC
- Advance
 - PT control
 - Preset position
 - Patrol
 - FTP client
 - SMTP
 - HTTP event
 - General**
 - Alarm sending
 - Alarm output
 - Schedule
 - Alarm input
 - Motion detection
 - System Log

HTTP event ☒ On ☐ Off

URL

Port

User ID

Password

Proxy server name

Proxy port number

Proxy user ID

Proxy password

OK Cancel Test

For example:

URL: 192.168.1.7/cgi-bin/operator/ptzset

Note: The setting of URL should be the same as CGI

7.3.2 Alarm sending

Set to send the commands via the alarm detection, external sensor input or built-in motion detection function. Select **On** to send the commands to HTTP server linked with the alarm detection.

The screenshot shows a web interface for configuring alarm sending. On the left is a sidebar menu with a 'HOME' button at the top. Below it, under the 'SETTING' section, are 'BASIC' and 'Advance' (expanded). Under 'Advance', there are 'FTP client', 'SMTP', 'HTTP event', 'General', 'Alarm sending' (highlighted), 'Schedule', 'Motion detection', and 'System Log'. The main content area is titled 'Alarm sending' with radio buttons for 'On' (selected) and 'Off'. Below this, the 'Alarm' section has a checked checkbox for 'Motion detection' and a button labeled 'Motion detection'. There are input fields for 'Parameter' and 'Message'. The 'Effective Period' section has radio buttons for 'Always' and 'Schedule' (selected), with a 'Schedule' button next to it. At the bottom are 'OK' and 'Cancel' buttons.

Alarm sending: Select **On** to set to send command with connection to the alarm detection.

➤ Alarm

●Motion detection

➤ **Effective period:** Set the period when the periodical sending is effective.

●**Always:** The periodical sending is always effective.


●**Schedule:** You can specify the period when the periodical sending is effective in the schedule setting in the other section.

Note:

You can set schedule function at schedule page. (Please go “Setting → Advance → Schedule → Setting”) For more details, you can check Chapter 7.4.


➤ Alarm

- **Motion Detection:** Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.

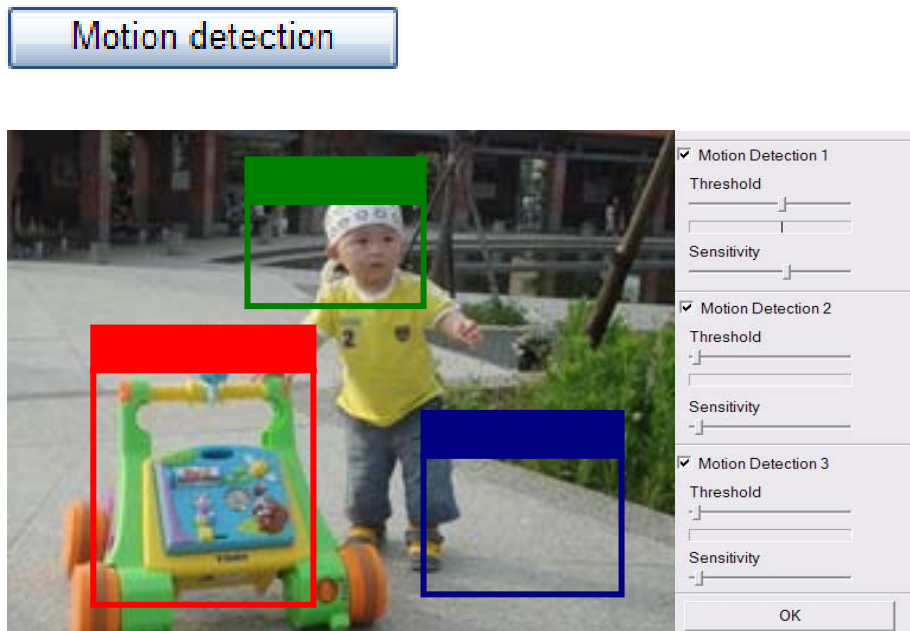

Note: You can set motion detection at motion detection page. (Please go “Setting → Advance → Motion detection → Setting”) For more details, you can check Chapter 7.5.

Note : Motion Detection works only when the MPEG4 function is On.

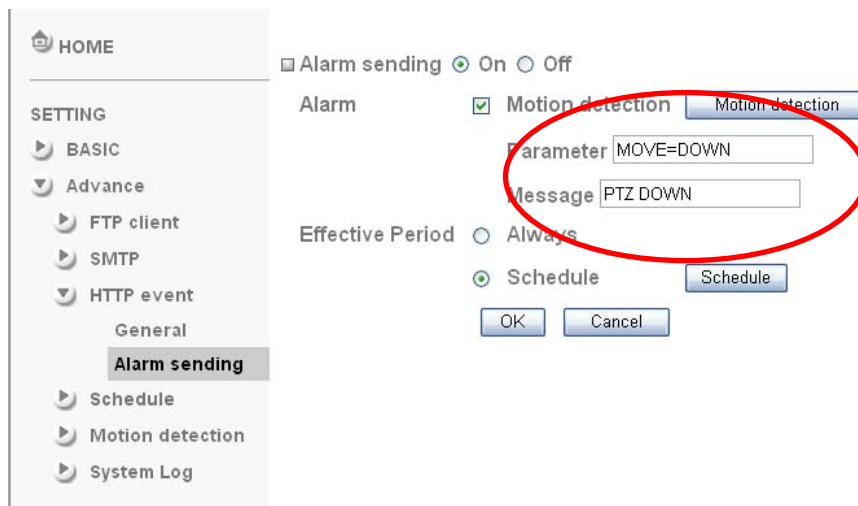

- ✓ **Parameter:** the parameter of CGI (defined in URL of HTTP → General) is from your target device. For example, move=down.
- ✓ **Message:** message will show up in the form of Message = PTZ down. If your target device didn't support the parameter of message, you can't see the message. So you can just take the message as a note. For example: PTZ down.

- **Effective period:** Set the period when the periodical sending is effective.
- **Always:** The periodical sending is always effective.
 - **Schedule:** You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note: You can set schedule function at schedule page. (Please go “Setting → Advance → Schedule → Setting”) For more details, you can check Chapter 7.4.

Schedule

Schedule - Windows Internet Explorer

http://10.0.0.47/schedule.htm

☐ Schedule selection FTP - Alarm

<input type="checkbox"/> Mon	Start time	00 : 00	- End time	24 : 00
<input type="checkbox"/> Tue	Start time	00 : 00	- End time	24 : 00
<input type="checkbox"/> Wed	Start time	00 : 00	- End time	24 : 00
<input type="checkbox"/> Thu	Start time	00 : 00	- End time	24 : 00
<input type="checkbox"/> Fri	Start time	00 : 00	- End time	24 : 00
<input type="checkbox"/> Sat	Start time	00 : 00	- End time	24 : 00
<input type="checkbox"/> Sun	Start time	00 : 00	- End time	24 : 00

☐ Use the same time schedule every day.


OK Cancel

Done Internet 100%

7.4 Schedule

When you click **Schedule** on the Advance mode menu, the Schedule setting menu appears. This is the same menu as the setting menu which is displayed when you click **Schedule** to set Effective period and Schedule in **FTP** client setting menu, e-Mail (**SMTP**) setting menu, HTTP Event setting menu and so on.

Example: When setting e-Mail (SMTP) (the alarm sending) in the Schedule setting menu.

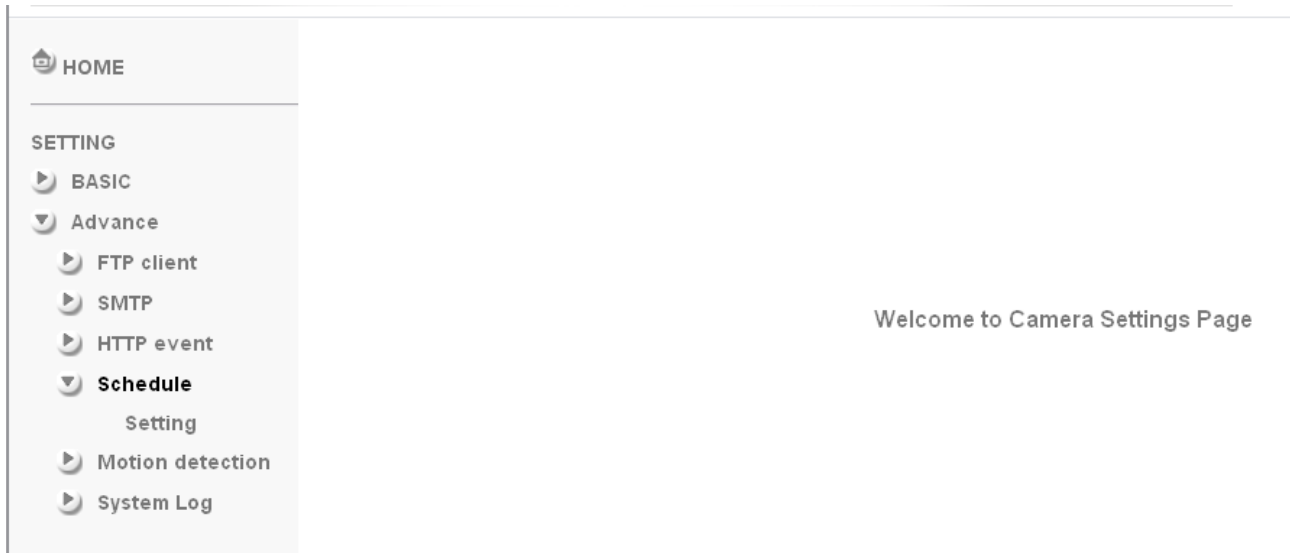

7.4.1 Setting

HOME

SETTING

BASIC

Advance

FTP client

SMTP

HTTP event

Schedule

Setting

Motion detection

System Log

Schedule selection: FTP - Alarm

Mon Start time 00 : 00 - End time 24 : 00

Tue Start time 00 : 00 - End time 24 : 00

Wed Start time 00 : 00 - End time 24 : 00

Thu Start time 00 : 00 - End time 24 : 00

Fri Start time 00 : 00 - End time 24 : 00

Sat Start time 00 : 00 - End time 24 : 00

Sun Start time 00 : 00 - End time 24 : 00

Use the same time schedule every day.

OK Cancel

➤ **Schedule Selection:** Select the list box to specify the schedule you want to set.

- FTP -Alarm
- FTP - Periodical
- e-Mail (SMTP) -Alarm
- e-Mail (SMTP) -Periodical
- HTTP event -Alarm


➤ **Mon (Monday) to Sun (Sunday):** The time period on the right of the checked day is the effective period of the schedule.

➤ **Start time, End time:** Specify the **Start time** and the **End time**.


➤ **Use the same time schedule every day:** When this is checked, the **Start time** and **End time** set to **Mon** (Monday) are applied to all days. In this case, the **Start time** and **End time** of the other days than **Mon** (Monday) cannot be input.

7.5 Motion Detection

There are three Motion Detection functions as sensors to set for different detecting zones. Each one has Threshold and Sensitivity inputs which you can adjust to specific zone sequentially. Motion Detection function can support to FTP, SMTP and HTTP event for capturing and sending images.

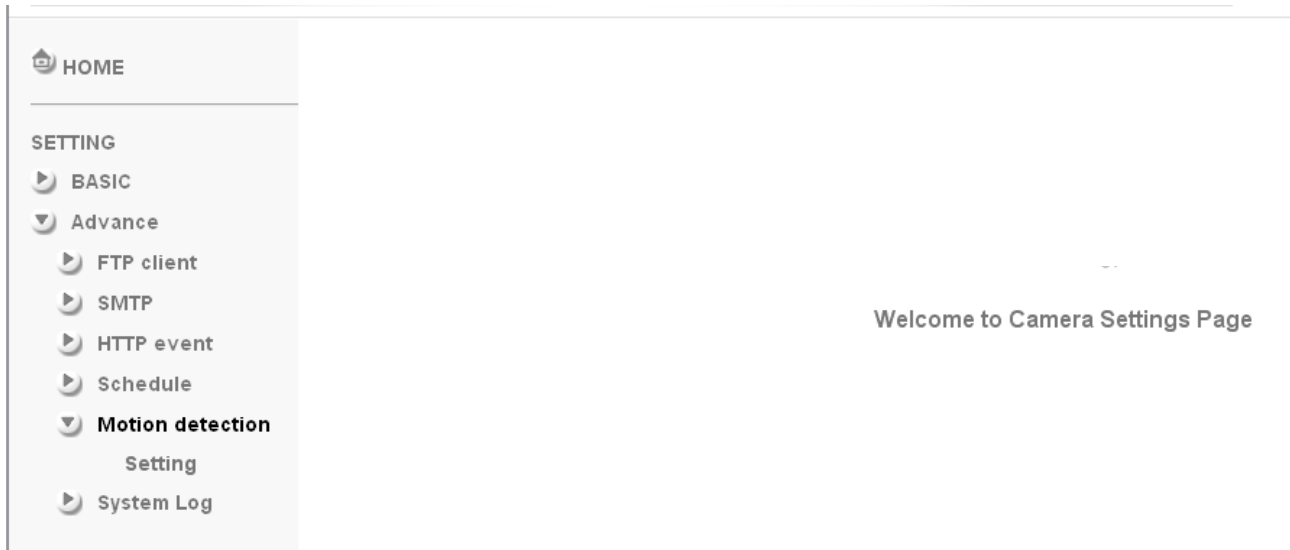

7.5.1 Setting

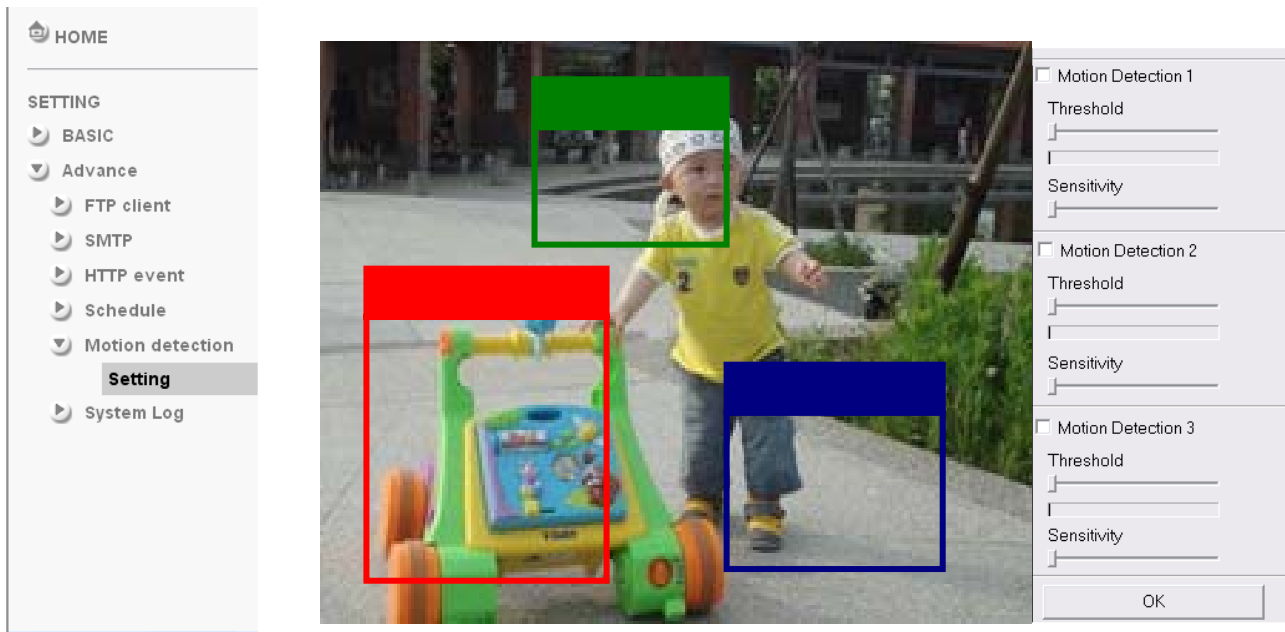


Threshold: It means the extent which the alarm will be triggered.

➤ **Sensitivity:** It means that how often the sensor will scan the image different. The higher sensitivity it is and the more frequently it scans.

- **Motion Detection 1:** Click it on for using **Motion Detection 1** function as a sensor. You can adjust and move the detecting zone by using mouse.
- **Motion Detection 2:** Click it on for using **Motion Detection 2** function as a sensor. You can adjust and move the detecting zone by using mouse.
- **Motion Detection 3:** Click it on for using **Motion Detection 3** function as a sensor. You can adjust and move the detecting zone by using mouse.

7.6 System Log

The System Log function allows users to review any changes and events happened. The system starts logging automatically after started.

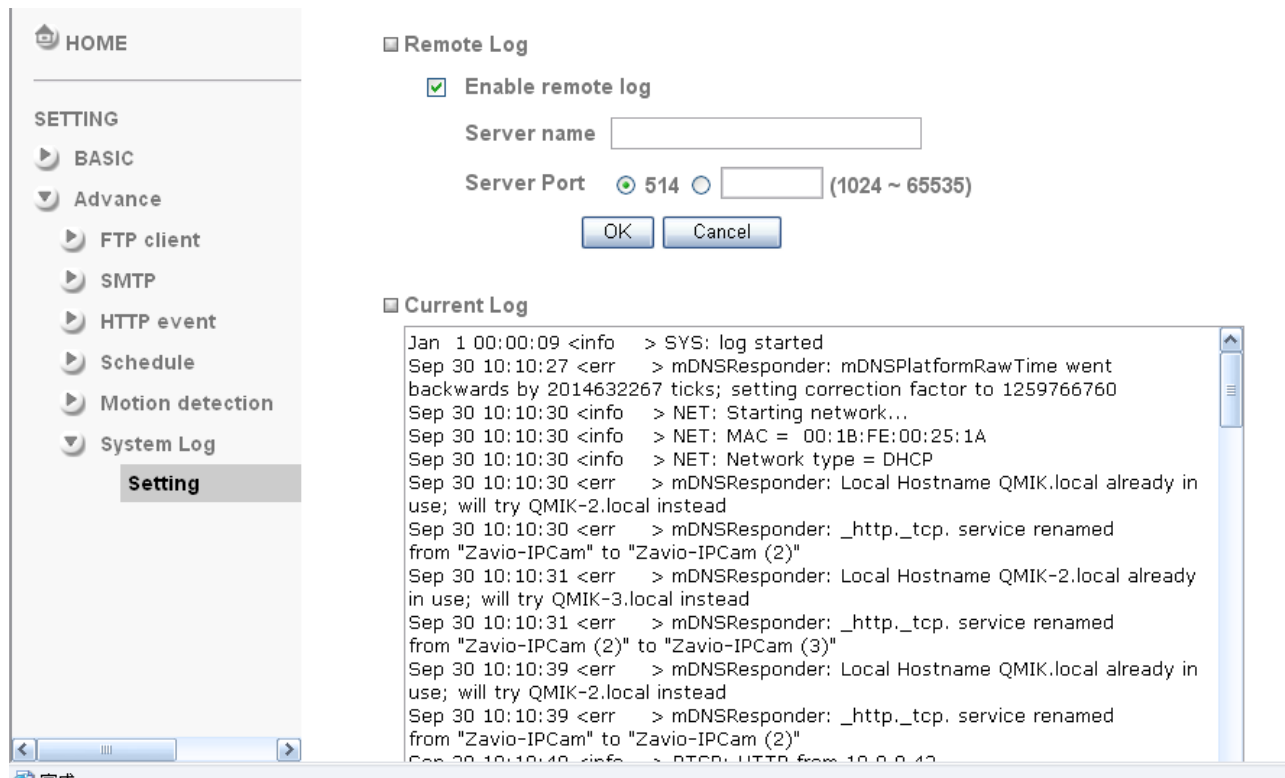

7.6.1 Setting

- **Enable remote log:** Enables user to send the log data to a specified log server.

CHAPTER 8. APPENDIX

A. Frame-rate and Bitrate Table – Help to set IPCamera with your network environment to access Internet.

Base on your network **UPLOAD** environment to choose the suitable Image-Quality setting. For example, if the network environment is ADSL 256Kb/s(upload) / 2Mb/s(download), the most fluent Image-Quality needs to set up under 256 Kb situation.

A.1. NTSC CCD IP Camera

A.1.1. MPEG4 @ 30fps / Kbps

Quality	704*480	352*240	176*120
Excellent	2000	800	200
Detailed	850	250	80
Good	450	150	60
Standard	350	110	50
Medium	250	90	40

A.1.2. MPEG4 / Kbps, fps

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
704*480	2048	30	1800	25
704*480	2048	15	2100	16
704*480	1536	30	1500	30
704*480	1536	15	1700	16
704*480	1024	30	1050	30
704*480	1024	15	1100	16
704*480	512	30	520	30
704*480	512	15	650	16
352*240	1536	30	1500	30
352*240	1536	15	1600	16
352*240	1024	30	1100	30
352*240	1024	15	1100	16
352*240	512	30	530	30
352*240	512	15	600	16
176*120	1024	30	1000	30
176*120	1024	15	900	16
176*120	512	30	530	30
176*120	512	15	550	16
176*120	128	30	150	30
176*120	128	15	150	16

A.1.3. MJPEG @ 15fps / Kbps

Quality	704*480	352*240	176*120
Excellent	7500	2800	1000
Detailed	5000	1500	700
Good	3500	1000	500
Standard	2000	800	400
Medium	1300	500	300

A.1.4. MJPEG / Kbps, fps

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
704*480	Excellent	15	7500	11
704*480	Excellent	5	4000	5
704*480	Good	15	3500	13
704*480	Good	5	1500	5
704*480	Medium	15	1300	13
704*480	Medium	5	550	5
352*240	Excellent	15	2800	12
352*240	Excellent	5	1200	5
352*240	Good	15	1000	12
352*240	Good	5	450	5
352*240	Medium	15	500	12
176*120	Medium	5	220	5
176*120	Excellent	15	1000	15
176*120	Excellent	5	400	5
176*120	Good	15	500	15
176*120	Good	5	200	5
176*120	Medium	15	300	15
176*120	Medium	5	100	5

A.2. PAL CCD IPCamera

A.2.1. MPEG4 @ 25fps / Kbps

Quality	704*576	352*288	176*144
Excellent	1800	400	100
Detailed	600	150	50
Good	400	100	40
Standard	300	80	30
Medium	200	60	20

A.2.2. MPEG4 / Kbps, fps

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
704*576	2048	25	2000	23
704*576	2048	15	2100	16
704*576	1536	25	1600	25
704*576	1536	15	1700	16
704*576	1024	25	1100	25
704*576	1024	15	1200	16
704*576	512	25	550	25
704*576	512	15	650	16
352*288	1536	25	1500	25
352*288	1536	15	1600	16
352*288	1024	25	1100	25
352*288	1024	15	1100	16
352*288	512	25	550	25
352*288	512	15	600	16
176*144	1024	25	1000	25
176*144	1024	15	1000	16
176*144	512	25	550	25
176*144	512	15	600	16
176*144	128	25	150	25
176*144	128	15	150	16

A.2.3. MJPEG @ 15fps / Kbps

Quality	704*576	352*288	176*144
Excellent	7800	1700	650
Detailed	4300	1000	450
Good	2500	650	350
Standard	1300	450	250
Medium	1000	300	180

A.2.4. MJPEG / Kbps, fps

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
704*576	Excellent	15	7800	11
704*576	Excellent	5	4000	5
704*576	Good	15	2500	11
704*576	Good	5	1200	5
704*576	Medium	15	1000	11
704*576	Medium	5	500	5
352*288	Excellent	15	1700	11
352*288	Excellent	5	900	5
352*288	Good	15	650	11
352*288	Good	5	330	5
352*288	Medium	15	300	11
352*288	Medium	5	160	5
176*144	Excellent	15	650	12
176*144	Excellent	5	300	5
176*144	Good	15	350	12
176*144	Good	5	150	5
176*144	Medium	15	180	12
176*144	Medium	5	75	5

A.3. CMOS IP Camera

A.3.1. MPEG4 @ 30fps / Kbps

Quality	640*480	320*240	160*120
Excellent	1000	300	90
Detailed	400	150	50
Good	300	100	30
Standard	250	70	25
Medium	250	55	20

A.3.2. MPEG4 / Kbps, fps

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
640*480	2048	30	1800	26
640*480	2048	15	2200	16
640*480	1536	30	1500	30
640*480	1536	15	1700	16
640*480	1024	30	1000	30
640*480	1024	15	1000	16
640*480	512	30	500	30
640*480	512	15	600	16
320*240	1536	30	1500	30
320*240	1536	15	1600	16
320*240	1024	30	1000	30
320*240	1024	15	1000	16
320*240	512	30	550	30
320*240	512	15	600	16
160*120	1024	30	950	30
160*120	1024	15	750	16
160*120	512	30	500	30
160*120	512	15	50	16
160*120	128	30	130	30
160*120	128	15	140	16

A.3.3. MJPEG @ 15fps / Kbps

Quality	640*480	320*240	160*120
Excellent	4000	1500	600
Detailed	2400	900	400
Good	1600	650	300
Standard	1300	500	240
Medium	900	350	170

A.3.4. MJPEG / Kbps, fps

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
640*480	Excellent	15	4000	13
640*480	Excellent	5	1600	5
640*480	Good	15	1600	13
640*480	Good	5	650	5
640*480	Medium	15	900	14
640*480	Medium	5	360	5
320*240	Excellent	15	1500	13
320*240	Excellent	5	550	5
320*240	Good	15	650	13
320*240	Good	5	260	5
320*240	Medium	15	350	13
160*120	Medium	5	130	5
160*120	Excellent	15	600	13
160*120	Excellent	5	230	5
160*120	Good	15	300	13
160*120	Good	5	115	5
160*120	Medium	15	170	13
160*120	Medium	5	65	5

B. Storage Requirement Table - Help to set Recording Storage System.

Please refer to the following table to find out the capability for recording into your hard disk.

B.1. NTSC CCD IPCamera

B.1.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	704*480	352*240	176*120
Excellent	21.1	8.4	2.1
Detailed	9.0	2.6	0.8
Good	4.7	1.6	0.6
Standard	3.7	1.2	0.5
Medium	2.6	0.9	0.4

B.1.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	10.5	4.2	1.1
Detailed	4.5	1.3	0.4
Good	2.3	0.8	0.3
Standard	1.8	0.6	0.2
Medium	1.3	0.5	0.2

B.1.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Storage Requirement
704*480	2048	30	23.0
704*480	2048	15	22.1
704*480	1536	30	18.5
704*480	1536	15	17.9
704*480	1024	30	11.1
704*480	1024	15	11.6
704*480	512	30	5.5
704*480	512	15	6.9
352*240	1536	30	15.8
352*240	1536	15	16.9
352*240	1024	30	11.6
352*240	1024	15	11.6
352*240	512	30	5.6
352*240	512	15	6.3
176*120	1024	30	10.5
176*120	1024	15	9.5
176*120	512	30	5.6
176*120	512	15	5.8
176*120	128	30	1.6
176*120	128	15	1.6

B.1.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	79.1	29.5	10.5
Detailed	52.7	15.8	7.4
Good	36.9	10.5	5.3
Standard	21.1	8.4	4.2
Medium	13.7	5.3	3.2

B.1.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
704*480	Excellent	15	79.1
704*480	Excellent	5	42.2
704*480	Good	15	36.9
704*480	Good	5	15.8
704*480	Medium	15	13.7
704*480	Medium	5	5.8
352*240	Excellent	15	29.5
352*240	Excellent	5	12.7
352*240	Good	15	10.5
352*240	Good	5	4.7
352*240	Medium	15	5.3
176*120	Medium	5	2.3
176*120	Excellent	15	10.5
176*120	Excellent	5	4.2
176*120	Good	15	5.3
176*120	Good	5	2.1
176*120	Medium	15	3.2
176*120	Medium	5	1.1

B.2. PAL CCD IPCamera

B.2.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	704*480	352*240	176*120
Excellent	19.4	4.3	1.1
Detailed	6.5	1.6	0.5
Good	4.3	1.1	0.4
Standard	3.2	0.9	0.3
Medium	2.2	0.6	0.2

B.2.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	9.7	2.2	0.5
Detailed	3.2	0.8	0.3
Good	2.2	0.5	0.2
Standard	1.6	0.4	0.2
Medium	1.1	0.3	0.1

B.2.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Storage Requirement
704*480	2048	30	21.6
704*480	2048	15	22.7
704*480	1536	30	17.3
704*480	1536	15	18.4
704*480	1024	30	11.9
704*480	1024	15	13.0
704*480	512	30	5.9
704*480	512	15	7.0
352*240	1536	30	16.2
352*240	1536	15	17.3
352*240	1024	30	11.9
352*240	1024	15	11.9
352*240	512	30	5.9
352*240	512	15	6.5
176*120	1024	30	10.8
176*120	1024	15	10.8
176*120	512	30	5.9
176*120	512	15	6.5
176*120	128	30	1.6
176*120	128	15	1.6

B.2.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	84.2	18.4	7.0
Detailed	46.4	10.8	4.9
Good	27.0	7.0	3.8
Standard	14.0	4.9	2.7
Medium	10.8	3.2	1.9

B.2.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
704*480	Excellent	15	84.2
704*480	Excellent	5	43.2
704*480	Good	15	27.0
704*480	Good	5	13.0
704*480	Medium	15	10.8
704*480	Medium	5	5.4
352*240	Excellent	15	18.4
352*240	Excellent	5	9.7
352*240	Good	15	7.0
352*240	Good	5	3.6
352*240	Medium	15	3.2
176*120	Medium	5	1.7
176*120	Excellent	15	7.0
176*120	Excellent	5	3.2
176*120	Good	15	3.8
176*120	Good	5	1.6
176*120	Medium	15	1.9
176*120	Medium	5	0.8

B.3. CMOS IPCamera

B.3.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	640*480	320*240	160*120
Excellent	10.5	3.2	0.9
Detailed	4.2	1.6	0.5
Good	3.2	1.1	0.3
Standard	2.6	0.7	0.3
Medium	2.6	0.6	0.2

B.3.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240	160*120
Excellent	5.3	1.6	0.4
Detailed	2.1	0.8	0.3
Good	1.6	0.6	0.2
Standard	1.3	0.4	0.1
Medium	1.3	0.3	0.1

B.3.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate
640*480	2048	30	23.0
640*480	2048	15	22.2
640*480	1536	30	18.5
640*480	1536	15	17.9
640*480	1024	30	10.5
640*480	1024	15	10.5
640*480	512	30	5.3
640*480	512	15	6.3
320*240	1536	30	15.8
320*240	1536	15	16.9
320*240	1024	30	10.5
320*240	1024	15	10.5
320*240	512	30	5.8
320*240	512	15	6.3
160*120	1024	30	10.0
160*120	1024	15	7.9
160*120	512	30	5.3
160*120	512	15	0.5
160*120	128	30	1.4
160*120	128	15	1.5

B.3.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240	160*120
Excellent	42.2	15.8	6.3
Detailed	25.3	9.5	4.2
Good	16.9	6.9	3.2
Standard	13.7	5.3	2.5
Medium	9.5	3.7	1.8

B.3.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
640*480	Excellent	15	42.2
640*480	Excellent	5	16.9
640*480	Good	15	16.9
640*480	Good	5	6.9
640*480	Medium	15	9.5
640*480	Medium	5	3.8
320*240	Excellent	15	15.8
320*240	Excellent	5	5.8
320*240	Good	15	6.9
320*240	Good	5	2.7
320*240	Medium	15	3.7
160*120	Medium	5	1.4
160*120	Excellent	15	6.3
160*120	Excellent	5	2.4
160*120	Good	15	3.2
160*120	Good	5	1.2
160*120	Medium	15	1.8
160*120	Medium	5	0.7

C. System Requirement & D1 Performance of 16 Channel IP Camera

Equipment Configuration

Software:	MainConsole Version 2.6.4 Professional
CPU:	AMD Athlon 64*2 @3600+MHz
Memory:	2048 MB (2 x 1024 DDR2-SDRAM)
Ethernet:	VIA Rhine II Fast Ethernet Adapter
Hard Disk:	ST3250620A (250 GB)
Graphic card:	ATI Technologies Inc EAX1600 Series
Operating System:	Windows XP Professional SP2 x64

Results from Test with a Resolution of 704x480 CCD IPCamera

704x480	Quality	Frame Rate	CPU Load	Bandwidth
16 IP camera	Excellent	30	95%	15~20 Mbps

Results from Test with a Resolution of 640x480 CMOS IPCamera

640x480	Quality	Frame Rate	CPU Load	Bandwidth
16 IP camera	Excellent	30	95%	10~15 Mbps